

SHIKA EXPRESS - PHYSICS

Version 1.0 TZ

HANDS-ON ACTIVITIES COMPANION GUIDE
TANZANIA

TEACHER'S GUIDE

March 5, 2014

Contents

I	Hands-On Activities	7
1	Physics Activities for Form I	8
1.1	Measurement and Density/Relative Density	8
1.1.1	Construction of a Metre Rule	8
1.1.2	Construction of a Measuring Cylinder	8
1.1.3	Construction of Beam Balance	9
1.1.4	Making a Spring and a Spring Balance	10
1.1.5	Applications of Material Densities	12
1.1.6	Relative Density of a Liquid	13
1.1.7	U-Tube apparatus	14
1.1.8	Measurement Errors	15
1.2	Forces	16
1.2.1	Presence of Gravity	16
1.2.2	Windmills	17
1.2.3	Helicopters	17
1.3	Archimedes' Principle and the Law of Flotation	18
1.3.1	Construction of Eureka Can	18
1.3.2	Water Weight and Upthrust	19
1.3.3	Conditions of Flotation	19
1.3.4	Construction and Use of a Hydrometer	20
1.4	Structure and Properties of Matter	22
1.4.1	Determining Adhesion and Cohesion	22
1.4.2	Cohesion in a Moving Liquid	23
1.4.3	Water drops	24
1.4.4	Blowing bubbles	24
1.4.5	Pin Float	24
1.4.6	Pepper Float	24
1.4.7	Water Dome	25
1.4.8	Capillarity	25
1.4.9	Lemonade	26
1.4.10	Powder Diffusion	26
1.4.11	Orange Diffusion, Part A – Sweet Smells	26
1.4.12	Orange Diffusion, Part B – Trapped	27
1.4.13	Osmosis	27
1.5	Pressure	27
1.5.1	Balloon Pop	27
1.5.2	Potato Poke	28
1.5.3	The Effect of Surface Area on Pressure	28
1.5.4	Straw Fountain	29
1.5.5	Cartesian Diver	29
1.5.6	Holey Bottle 2	31
1.5.7	Liquid Pressure and Depth	31
1.5.8	Hydraulic Press	32
1.5.9	Atmospheric Pressure	32
1.5.10	Charles' Law, Part C – Bottle Crush	33
1.5.11	Straw Elevator	33

1.5.12	Making a Magdeburg Hemisphere	33
1.5.13	Siphon	34
1.5.14	Automatic Flushing Tank	35
1.5.15	Reverse Air Pump	36
1.6	Work, Energy and Power	36
1.6.1	Work as Heat, Part A	36
1.6.2	Work as Heat, Part B	36
1.6.3	Work as Light	37
1.6.4	Potential Energy of a Spring	37
1.7	Light	38
1.7.1	Light in a Straight Line	38
1.7.2	Pin Hole Camera	39
1.7.3	Light through a Comb	40
1.7.4	Laws of Reflection	40
1.7.5	Kaleidoscope	41
2	Physics Activities for Form II	42
2.1	Static Electricity	42
2.1.1	Salt and Pepper Trick	42
2.1.2	Concept of Static Electricity	42
2.1.3	Electrostatics	43
2.1.4	Construction of an Electroscope	43
2.1.5	Detection of Charges	45
2.2	Current Electricity	46
2.2.1	Conductors and Insulators	46
2.2.2	Finding Electric Circuit Components	47
2.2.3	Creating a Light Bulb	48
2.2.4	Measuring Emf of a Cell	49
2.3	Magnetism	50
2.3.1	Magnetic and Non-magnetic Materials	50
2.3.2	Suspended Magnet Compass	51
2.3.3	Magnetizing a Nail	51
2.3.4	Magnetic Fields	51
2.3.5	Creating a Simple Compass	52
2.3.6	Magnetic Dip Gauge	53
2.4	Forces in Equilibrium	55
2.4.1	Door Tug-o-War	55
2.4.2	Verification of the Principle of Moments	55
2.4.3	Centre of Gravity	56
2.5	Simple Machines	57
2.5.1	Pulley	57
2.5.2	Pulleys and Inclined Planes	59
2.5.3	Bottle Cap Gearworks	59
2.6	Motion in a Straight Line	59
2.6.1	Object Toss	59
2.6.2	Simple Oscillator	60
2.7	Newton's Laws of Motion	60
2.7.1	Verification of Newton's First Law of Motion	60
2.7.2	Inertia and Newton's First Law of Motion	61
2.7.3	Tin Can Piata	62
2.7.4	Conservation of Linear Momentum	62
2.7.5	Balloon Rocket	64
2.7.6	Bottle Rocket	64
2.7.7	Matchstick Rocket	65

3	Physics Activities for Form III	67
3.1	Friction	67
3.1.1	Concept of Friction	67
3.1.2	Limiting Friction and the Coefficient of Static Friction	68
3.2	Light	69
3.2.1	Refraction of Light in Glass	69
3.2.2	Measuring Refractive Index of Glass	70
3.2.3	Total Internal Reflection in Water	73
3.2.4	Focusing an Image through a Convex Lens	74
3.2.5	Refraction of Light Through Water	74
3.2.6	Newton Colour Wheel	74
3.2.7	Dispersion of White Light: Part 1	76
3.2.8	Thin Film Interference	76
3.2.9	Water Prism	77
3.3	Thermal Expansion	77
3.3.1	Expansion of Solids: Screw and Loop	77
3.3.2	Thermal Expansion of Solids - Breaking Glass	77
3.3.3	Bimetallic Strip	78
3.3.4	Thermal Switch	80
3.3.5	Thermal Expansion of Liquids	81
3.3.6	Thermal Expansion of Gases	83
3.3.7	Charles' Law, Part A – Coin Cap	84
3.3.8	Charles' Law, Part B – Spray Time	84
3.3.9	Egg Suck	85
3.3.10	Charles's Law	85
3.3.11	Boyle's Law	86
3.3.12	Boyle's Law, Part A – Syringe	88
3.3.13	Boyle's Law, Part B – Cartesian Diver	88
3.3.14	Boyle's Law, Part C – Filling a Balloon	88
3.3.15	Boyle's Law, Part D – Sucking a Balloon	89
3.4	Transfer of Thermal Energy	89
3.4.1	Heat Conduction	89
3.4.2	Hot Water Hold	90
3.4.3	Copper Coil Candle Snuffer	91
3.4.4	Convection	91
3.4.5	Thermal Windmills	93
3.4.6	Radiation	93
3.5	Measurement of Thermal Energy	95
3.5.1	Specific Heats	95
3.5.2	Designing a Calorimeter	95
3.5.3	Boiling Water at Room Temperature	96
3.5.4	Latent Heat of Fusion	97
3.6	Vapour and Humidity	99
3.6.1	Measuring Humidity with a Hygrometer	99
3.7	Current Electricity	100
3.7.1	Circuit Board	100
3.7.2	Breadboards	100
3.7.3	Construction of a Metre bridge and Potentiometer	101
3.7.4	Making an Electric Heater	104
3.7.5	Fuse	105
3.7.6	Creating a Leclanche Cell.	106
4	Physics Activities for Form IV	108
4.1	Waves	108
4.1.1	Construction and Use of Slinky Spring	108
4.1.2	Speed of Sound in Air	109
4.1.3	Bottle Sine Graph	110
4.1.4	Construction of a Ripple Tank	111

4.1.5	Behaviour of Waves	112
4.1.6	Sound in a Medium	113
4.1.7	Wave Propagation in Solids	114
4.1.8	Sound Amplifier	114
4.1.9	Musical Rubber Strip	116
4.1.10	Musical Soda Bottle	116
4.1.11	Doppler Whirl	116
4.1.12	Bartons Pendulums	116
4.1.13	Transverse Waves on a String	117
4.1.14	Construction and Use of a Simple Sonometer	117
4.1.15	Determination of Resonance Frequency	119
4.2	Electromagnetism	121
4.2.1	Spinning Compass	121
4.2.2	Construction of Galvanometer	121
4.2.3	Force on a Current-Carrying Wire in a Magnetic Field	122
4.2.4	Mapping Induced Magnetic Field from a Coil	124
4.2.5	Mapping Induced Magnetic Field from Wire	124
4.2.6	Creating a Current in a Wire	124
4.2.7	Simple Motor	125
4.2.8	Inverter: Converting DC to AC	126
4.2.9	Water Energy	130
4.2.10	Wind Energy	132
4.3	Electronics	134
4.3.1	Forward and Reverse Biased Diodes	134
4.3.2	Full-Wave Rectifier	135
4.3.3	Half-Wave Rectifier	137
4.4	Elementary Astronomy	139
4.4.1	Solar System Mobile	139
4.4.2	Star Gazing	140
II	Student Practical Worksheets	141
	Mechanics	143
	Archimedes' Principle	143
	Law of Flotation	145
	Elasticity	147
	Pressure within a Liquid	149
	Linear Acceleration	151
	Simple Pendulum	153
	Coefficient of Friction	155
	Light	158
	Law of Reflection	158
	Plane Mirror Image Characteristics	160
	Refractive Index	162
	Critical Angle	164

Minimum Deviation Angle	166
Focal Length	168
Convex Lens Image Characteristics	170
Heat	173
Charles's Law	173
Boyle's Law	175
Pressure Law	177
Melting Point of a Substance	179
Effects of Impurities on the Boiling Point	181
Effects of Impurities on the Freezing Point	183
Effects of Pressure on the Melting Point	184
Effects of Pressure on the Boiling Point	186
Electricity	189
Internal Resistance of a Cell	189
Resistance of a Conductor	191
Wheatstone Bridge	193
Ohm's Law	195
Heating Effect of Electric Current	197
Waves	200
Speed of Sound in Air	200
Musical Notes	202
A Local Materials List	204
A.1 Alligator Clips	204
A.2 Balance	204
A.3 Beakers	204
A.4 Bunsen Burner	204
A.5 Circuit Components	204
A.6 Delivery Tube	204
A.7 Drawing Board	204
A.8 Droppers	205
A.9 Eureka Can	205
A.10 Funnel	205
A.11 Glass Blocks	205
A.12 Heat Source	205
A.13 Iron Filings	205
A.14 Light Bulbs	205
A.15 Masses	205

A.16 Measuring Cylinder	206
A.17 Metre Rule	206
A.18 Nichrome Wire / Resistance Wire	206
A.19 Optical Pins	206
A.20 Plane Mirror	206
A.21 Resistors	206
A.22 Retort Stand	207
A.23 Scale Pan	207
A.24 Spring Balance	207
A.25 Springs	207
A.26 Stopper	207
A.27 Stopwatches	207
A.28 Test Tubes	207
A.29 Test Tube Holder / Tongs	207
A.30 Test Tube Racks	208
A.31 Tripod Stands	208
A.32 Water Bath	208
A.33 Wire	208
B Shika Express Demonstrations for Physics	209
Egg Float	209
Pressure in a Bottle	209

Part I

Hands-On Activities

Chapter 1

Physics Activities for Form I

1.1 Measurement and Density/Relative Density

1.1.1 Construction of a Metre Rule

Learning Objective

- To construct and use a metre rule.

Background Information

Length is an interval between two points. It is usually measured in metric units like the metre (m), millimetre (mm), centimetre (cm), kilometre (km).

Materials

Wooden board, pen/pencil, a handsaw, ruler or tape measure

Preparation Procedure

1. Use the saw to cut a piece of wood 100 cm x 3.5 cm x 0.5 cm.
2. Use a ruler to mark a scale in cm on the wood.

Activity Procedure

Use the new metre ruler to measure length of different objects.

Discussion Question

What other objects can be arranged in order to measure distance?

Notes

Instead of a wooden block, string can be used by making knots at a definite intervals.

1.1.2 Construction of a Measuring Cylinder

Learning Objective

- To construct and use a measuring cylinder.

Background Information

A measuring cylinders measures the volume of liquids in millilitres (mL).

Materials

Plastic bottles of different sizes, syringes (30-50 mL), marker pen, ruler, bucket full of water

Preparation Procedure

1. Using the syringe, take a known volume of water from the bucket.
2. Transfer the known volume of water in the syringe to the empty plastic bottle.
3. Using the marker pen, mark the level of water in the plastic bottle with the volume from the syringe.
4. Repeat this step for a range of volumes, marking each volume on the side of the bottle.
5. Use a ruler to complete the scale.

Activity Procedure

Use the constructed measuring cylinder to measure volumes of different liquids.

Clean Up Procedure

Remove waste and return materials to their proper places.

Discussion Question

Explain how to use a measuring cylinder.

Notes

A measuring cylinder cannot be used to measure the volume of a solid by itself, though if the solid is immersed in a liquid, the volume can be determined with a measuring cylinder. The volume of granular and porous materials can also be measured if they are immersed in a liquid in a measuring cylinder.

1.1.3 Construction of Beam Balance

Learning Objective

- To construct and use a beam balance.

Background Information

Mass is a fundamental quantity and is measured by using a beam balance. In physics mass is usually measured in grams (g) or kilograms (kg).

Materials

Wooden bar 30 cm x 2 cm, string/wire, ruler, pencil/pen, 2 large plastic bottles, nails, heat source*

Preparation Procedure

1. Cut a piece of wood block to 30 cm x 2 cm.
2. Find the balancing point and then mark the point using a pencil or pen.
3. Make a hole at the balance point using a hot nail.
4. Mark 5 cm spaces on each side of the hole using a ruler.
5. Cut 2 plastic bottles about 3 - 4 cm from the bottom.
6. Make 3 round holes in the bottom of a plastic bottle at equal intervals. These will be used as scale pans.

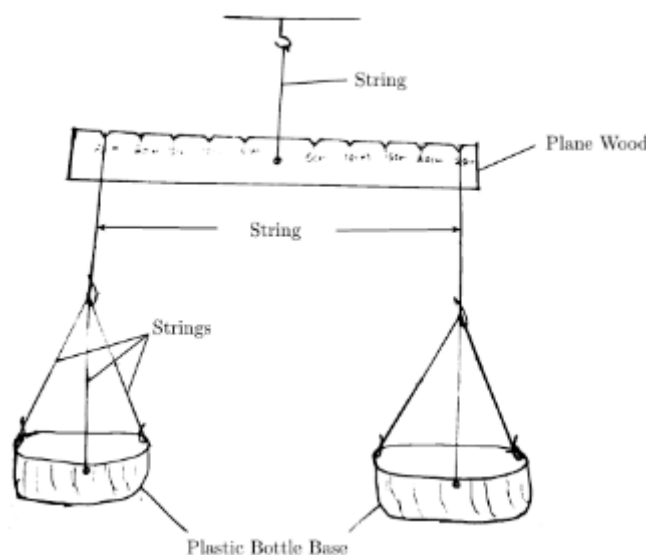


Figure 1.1: A beam balance

7. Tie pieces of thread/wire about 15 cm length into the holes of the bottom of a plastic bottle.
8. Join the upper ends of the thread/wires together.
9. Suspend the wooden block by using a piece of string/wire tied through the centre hole.

Activity Procedure

Use the beam balance to measure the masses of different objects in the classroom.

Clean Up Procedure

Return all materials to their proper places.

Discussion Question

How can you improve the beam balance?

Notes

There are different kinds of balances, such as a digital balance, double beam balance, single beam balance and triple beam balance. Each can be used to measure mass according to its sensitivity.

1.1.4 Making a Spring and a Spring Balance

Learning Objectives

- To make springs for various uses.
- To create and calibrate a spring balance.

Background Information

Springs typically have a constant value which determines how much they can stretch or compress. Because the value is constant, we can use it to accurately measure mass or weight, as it will always extend to the same length with the same force.

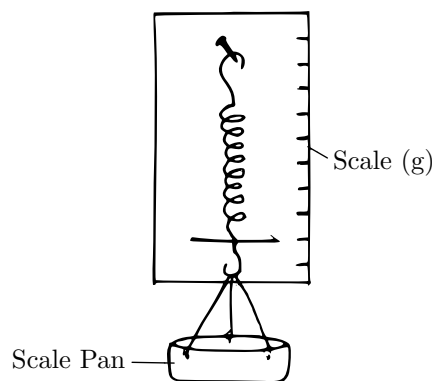


Figure 1.2: A Spring Balance

Materials

Strong metal wire of swg 24 or 26 of various types like copper, nichrome or constantine; a rod of diameter 14 to 18 mm of any material, piece of wood, ruler, plane paper, known masses, glue.

Preparation Procedure

Cut the metal wire into different lengths of at least 50 cm.

Activity Procedure

1. Take a piece of wire and hold one end to the rod.
2. Coil the wire tightly along the rod, keeping the coils close together.
3. When the entire wire is coiled along the rod, remove the rod.
4. Bend both ends of the wire into hooks.
5. Repeat these steps for all of the wires of different types and lengths.
6. Try stretching and compressing the springs to test the different strengths.
7. Attach the end of one spring to the top of a piece of wood with a nail or screw.
8. Glue or tape some white paper to the wood behind the spring.
9. Use a pen to make a mark at the bottom of the spring.
10. Hang a known mass on the spring so that it is stretched downward a short distance.
11. Make a mark at the bottom of the spring in its new position. Label this with the mass of the object hung from the spring.
12. Repeat this process for other masses, marking each mass on the paper.
13. Use a ruler to finish the scale by filling in masses above, below and between the marks you have made.

Results and Conclusions

When a load is placed on the spring, it increases the length of the spring. When the load is removed, the spring returns to its original length. Different materials of the same swg have different spring constants (strengths), or force per extension length.

Clean Up Procedure

Return all materials to their proper places.

Discussion Questions

1. What are some uses of springs?
2. What are the qualities of a good spring?
3. What is the relationship between the wire's diameter and the strength of the spring?
4. Which metal makes the strongest spring? Which metal makes the weakest spring?

Notes

A good spring must obey Hooke's Law. Springs can be used to make a spring balance or can be used in physics practicals to find the relationship between force and the resulting extension.

1.1.5 Applications of Material Densities

Learning Objectives

- To observe the difference between densities of different liquids and solids.
- To design a density tower using a variety of liquids with different densities.

Background Information

Materials can usually be distinguished from each other by their densities. Normally, less dense materials float on denser liquids. When liquids are placed in a container, the heavier (denser) liquids sink while the lighter (less dense) liquids float. A density tower can be designed using liquids of different densities, even if they are soluble.

Materials

Water, honey, glycerine, cooking oil, spirit, kerosene, beakers*, test tubes*, syringes, small pieces of wood, small pieces of rubber, small pieces of metal, and different food colour (optional).

Preparation Procedure

1. Find a test tube or syringe.
2. Place each liquid into a beaker so it can easily be obtained by students.

Activity Procedure

1. Place a small amount of honey into the test tube.
2. Slowly add glycerine to the test tube.
3. Slowly pour water into the test tube.
4. Slowly add methylated spirit to the test tube.
5. Add cooking oil into the test tube.
6. Slowly add kerosene to the test tube.
7. Put a small piece of wood, rubber and iron into the test tube.
8. Observe the positions of the liquids and solids relative to each other.

Results and Conclusions

The liquids with a higher density will sink, while the liquids with lower density will float. When the solid materials are dropped into the test tube, the solid material will rest in the liquid that has a relatively equal density.

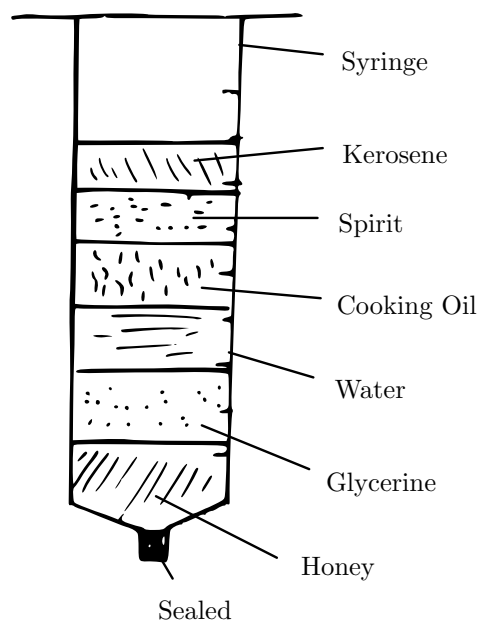


Figure 1.3: Density tower

Clean Up Procedure

Collect all materials and return them to their proper place.

Discussion Questions

1. Why should liquid be poured slowly into the test tube?
2. What happens when the wood, iron, and rubber are placed into test tubes?

Notes

Heavier density liquid should be poured into the test tube first, followed by relatively less dense liquids. Pouring the liquids should be done slowly to avoid mixing of liquid. Food colour can also be added to colorless liquid such as water, kerosene, and glycerine.

1.1.6 Relative Density of a Liquid

Learning Objectives

- To determine the density and relative density of a liquid.

Background Information

Bodies of different materials have different densities. Density can be found by taking the ratio of a body's mass to its volume.

$$\text{Density} = \frac{\text{mass}}{\text{volume}}$$

Relative density (R.D.) can be used to compare the density of a given material to that of water. Water is the standard with a density of 1.0 g/mL, so all other densities are compared to water.

$$\text{R.D.} = \frac{\text{Density of substance}}{\text{Density of water}}$$

Materials

“Density bottle” (small empty can or bottle), rubber stopper/dry grass/maize cob*, plastic bag, water, honey, kerosene, cooking oil, straw/bamboo stick

Activity Procedure

1. Weigh the can with its stopper and plastic bag in air (variable M_0).
2. Fill the small can with water and weigh it (variable M_1).
3. Pour out the water from the can and dry it with a piece of clean cloth or tissue.
4. Fill the can with another liquid, like honey, kerosene, or cooking oil, and weigh it again. (Variable M_2)
5. Repeat steps 3 and 4 for other liquids
6. Calculate the relative density of each liquid tested

Results and Conclusions

Mass of density bottle = M_0

Mass of density bottle with water = M_1

Mass of the density bottle with liquid A = M_2

$$\text{Relative density of liquid A} = \frac{\text{Mass of liquid A}}{\text{Mass of water}} = \frac{M_2 - M_0}{M_1 - M_0}$$

We use this formula to find the relative density of any liquid.

Clean Up Procedure

Collect all the used materials, cleaning and storing items that will be used later.

Discussion Questions

1. Determine the mass of the water.
2. Calculate the volume of the density bottle and the relative density of honey.

Notes

A density bottle can also be used to find the density of a solid, liquid and granules. When finding relative density, units must be considered carefully. Before you find the ratio of liquid density to water density, be sure that the units are the same. g/mL or kg/L are the common units.

1.1.7 U-Tube apparatus

- Preparation Time: 1 hour
- Materials: 3 clear plastic pen tubes, cardboard, hot poker or knife, tape, pen, super glue, water, any fluid, which will not readily mix with water.
- Construction: Cut two of the pens at one end at a 45-degree angle, and cut the third pen (shorter than the other two) at both ends at a 45-degree angle. With the shorter pen on the bottom, attach the other two as styles so that the 45-degree angles meet to form right angles. Together the 3 pens should form a U-shaped tube with open ends at the top of each style (vertical tube). Melt the angled ends together with a hot knife, soldering iron, etc. so that the whole apparatus is watertight except for the tops. Glue the apparatus to a cardboard base so that it can stand up straight. Put thin strips of tape up each side of the U-tube and mark each strip with evenly spaced marks. The two scales should be identical. One good way to do this is to put steadily increasing volumes of water (3 ml, 4 ml, 5 ml, etc.) and mark the levels on each scale for each volume. Label these marks from top to bottom as 0, 1, 2, etc.

- Procedure: Place an amount of water into the U-tube such that the water rises about half way on either side of the tube. The actual volume of water is not important as long as you can see the levels clearly. Stand the tube upright and slowly drip about 1 ml of another fluid, kerosene in this case, into one side of the U-tube (if the fluid has a higher density than water, it should go in first, and then the water). The kerosene will displace the water, so you should see the water level on the other side rise slightly.

Measure the relative heights of water and the kerosene from the bottom level of the kerosene. The heights are related to the densities by:

$$\frac{\text{Height of water}}{\text{height of kerosene}} = \frac{\text{density of kerosene}}{\text{density of water}}$$

- Theory: If a fluid's density is less than that of water, it will float on top (if it is added slowly) of the water, displacing the water on the other side of the tube. From Archimedes principle and the Law of Flotation, we know that the relative density of the fluid is equal to the inverse ratio of the heights of the liquid. The scales drawn on the outside of the U-tube allow you to find the ratio of the heights without needing units, and the density of water is known to be 1.0 g/ml, so you can easily calculate the density of the other fluid.

If the other fluid has a higher density than water, the experiment can still be done, but you need to add the fluid with higher density first, then displace it with water, performing the same calculation. This apparatus was designed and brought forward by two form 4 students without any prompting. They then proceeded to find the density of kerosene accurate to two decimal places. Never underestimate the curiosity and ability of students, or the power of broken pens.

1.1.8 Measurement Errors

Learning Objectives

- To understand the meaning of experimental error
- To understand the importance of accurate measurement and sample size

Background Information

Measurement is one of the most important aspects of science. However, it is impossible to make a perfect measurement because of our own errors and errors in the tools that we use. To improve our accuracy, we take many measurements and compare them to get an average result. However, it is important to understand the source of errors, how to account for them and how to reduce them. Different people measure differently, and even one person will measure differently from one moment to another.

Materials

Metre rules, stopwatches, other measuring instruments, materials to measure

Preparation Procedure

Collect different tools used for measuring, like metre rules or rulers, stopwatches, syringes, etc.

Activity Procedure

1. Draw a line on the board or floor.
2. Have several students measure the line and secretly record their results.
3. Collect the results from the students and record them on the board. Observe any differences.
4. Distribute stopwatches to several students.
5. Clap twice; the students should measure the time between claps and record their results secretly.
6. Collect the results from the students and record them on the board. Observe any differences.

7. Have several students make other similar measurements, keeping their results secret until you record them on the board.
8. Have students decide what the best result is for each of the collected measurements.

Results and Conclusions

The measurements will be different from person to person. Lengths, times, volumes, etc. will all vary for the same quantity. This is because each person measures slightly differently; this is fine as long as each person is trying their best to be accurate. The best result is the average of the results, combining the accuracy of all people in the final result.

Discussion Questions

1. Why do the measurements differ from student to student?
2. How accurate are the tools that we use?

Notes

Be sure that students understand that error is not bad. Many science students feel that they need to make their answers better, even if it means changing their data. Every measurement ever made has an error. Some tools are better at measuring than others; we simply use what we have and measure as accurately as we can. However, error needs to be understood and taken into account when doing experiments.

1.2 Forces

1.2.1 Presence of Gravity

Learning Objectives

- To identify the force of gravity as it acts on falling bodies
- To identify the effect of air resistance on falling bodies

Background Information

All objects on the earth experience a force of attraction exerted by the earth. This is a natural force called Gravity and it acts on all bodies at all times. The force of gravity varies from one point to another; some areas experience stronger gravity than others, but this effect is not noticeable. All objects are pulled by gravity with equal force, regardless of their weights or masses.

Materials

Various objects, a piece of paper, and a book (the book should be the same size or bigger than the paper)

Activity Procedure

1. Hold the various objects at shoulder height.
2. Drop the objects to the ground one at a time. Repeat this step, but releasing the objects at the same time.
3. Observe if there is any difference in speed as the objects fall to the ground.
4. Hold a piece of paper at shoulder height and then release it.
5. Place a piece of paper on top of a book and hold the book flat at shoulder height.
6. Release the two items together and observe any differences between the motion of the paper by itself and of the paper and book together.
7. Bunch the paper into a tight ball and drop it again.

Results and Conclusions

It will be seen that all objects, with the exception of paper and other light, wide objects, fall at exactly the same rate. This is because the acceleration due to gravity for all objects on earth is the same. The paper, however, falls very slowly. This is not because gravity pulls less on paper; it is because the paper is more affected by air resistance. All objects are affected by air resistance, but it is most obvious with objects that have a small weight but a large surface area. The effects of air resistance can be greatly reduced by placing a book under the paper. The book moves easily through air and blocks all of the air which would normally push against the paper. This is why the paper and book fall at the same rate. When the paper is bunched into a ball, the mass stays the same but the air resistance is greatly reduced so it should fall at the same rate as the book.

Clean Up Procedure

Collect all materials and return them to their proper place.

Discussion Questions

1. Did the objects fall at the same rate or at different rates?
2. Why did the paper fall slowly the first time?
3. Why did the paper fall quickly when it was placed on top of the book?
4. Why did the paper fall quickly when it was bunched into a tight ball?
5. What force is pulling all objects down? Does this force ever change?

Notes

When performing this experiment, it is important to remember the effect of air resistance. Gravity pulls equally on all bodies, but air resistance opposes the motion of light-weight objects more effectively than heavy-weight objects.

1.2.2 Windmills

- Preparation Time: 15 minutes
- Materials: thin cardboard or cardstock, scissors, pen, colored pencils/markers if desired, glue, paper fastener or thumb tack, straw or stick
- Procedure: Use the following illustration (enlarge it); copy it onto a piece of thin cardboard or cardstock.
 1. Cut along the lines and make holes with a pencil or pen.
 2. Bend the four corners together into the center and glue them in place.
 3. Push the fastener or tack through the center hole into a straw or stick.
- Reference: This demo was published in the Science Lab Kit by Silver Dolphin Books in 1997, compiled by Brenda Walpole

1.2.3 Helicopters

- Preparation Time: 15 minutes
- Materials: paper, scissors, paper clip
- Procedure: Copy the following design onto a piece of paper. Cut along the solid lines and fold along the dotted lines, attaching the paper clip to the bottom. Drop the helicopter with the paperclip down and watch it spin! *This demo was published in the Science Lab Kit by Silver Dolphin Books in 1997, compiled by Brenda Walpole

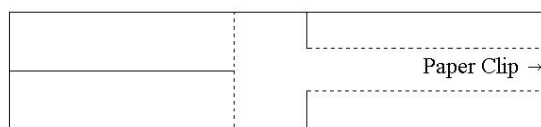


Figure 1.4: Paper helicopter template

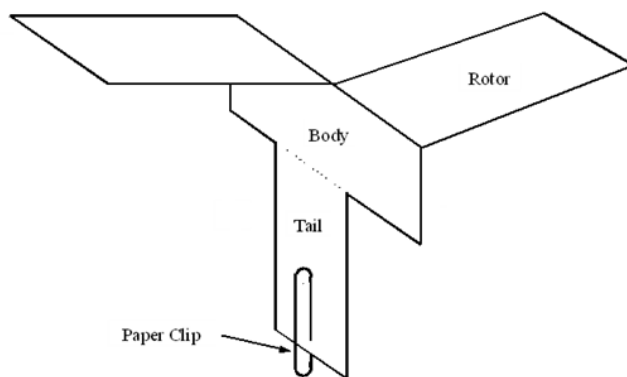


Figure 1.5: Paper helicopter construction

1.3 Archimedes' Principle and the Law of Flotation

1.3.1 Construction of Eureka Can

Learning Objectives

- To construct a eureka can and use it to measure volumes of irregular objects.

Materials

Plastic bottles of 500 mL or 1000 mL, straws* or a syringe needle cap, a knife/razor blade, heat source*, cello tape or super glue, nail, and a wire

Preparation Procedure

1. Cut the plastic bottle in half and use the bottom part.
2. Heat a sharp pointed end of the nail.
3. Using the heated sharp point of the nail, make a small hole about 5 cm from the top of the cut plastic bottle.
4. Cut a piece of straw about 5 cm long or use the syringe needle cap.
5. Insert the piece of straw into the hole. Make sure the piece of straw is tightly fixed with cello tape or super glue.

Activity Procedure

Use the constructed eureka can to overflow different liquids and to measure the volume of liquid displaced when an object floats in it.

Clean Up Procedure

Collect all the used materials, cleaning and storing items that will be used later.

Discussion Questions

1. What is the relationship between the weight of a floating object and the weight of water it displaces?
2. What is the reason for using a Eureka Can instead of a normal bottle?

Notes

A Eureka Can is typically used to move a certain volume from the can into another container. When an object floats in a liquid, it displaces its own weight in water. If the level of water in the Eureka can is at the level of the spout, the water displaced will flow through the spout into another container. This water can then be measured on a beam balance to find the weight of the object.

1.3.2 Water Weight and Upthrust

- Preparation Time: 1 minute
- Materials: spring balance, syringe with the bottom melted shut and no plunger, eureka can (can be made cheaply by a metal craftsman), water, heavy object, thread, small dish
- Procedure: Fill the eureka can up to its spout with water and place the spout over the dish. This can is designed so that when the water is being displaced, it is collected to another container for later measurements. Hang the object by the thread from the spring balance and measure its weight. Now immerse the water completely in the eureka can and measure its Apparent Weight (weight in water).
When you immersed the object in water, some water will have overflowed from the can into the small dish. Pour this water into your syringe shell and measure the weight of water. Record this result with the earlier Weight and Apparent Weight.
- Theory: Archimedes Principle states that the upthrust of a liquid on an object is equal to the weight of water displaced by the object. The upthrust is equal to the Weight of the object minus its Apparent Weight in the water:
$$\text{Upthrust} = \text{Weight in air} - \text{Apparent Weight in liquid}$$

But upthrust is also equal to the water displaced:
$$\text{Upthrust} = \text{Weight of liquid displaced}$$

By calculating the upthrust, you should see that the result is equal to the weight of water in the syringe.

1.3.3 Conditions of Flotation

Learning Objectives

- To explain the conditions for a floating body.

Materials

Water, fresh egg, salt, beaker*

Activity Procedure

1. Fill a beaker with water.
2. Release a fresh egg on the surface of water slowly and observe its position.
3. Add some salt while stirring and observe the position of the egg.
4. Continue adding salt and observe the position of the egg.

Results and Conclusion

The egg sinks to the bottom of the container because its density is greater than that of water. After adding the salt, the egg rises and finally floats on the surface of water. This is because the density of the water becomes higher than that of the egg.

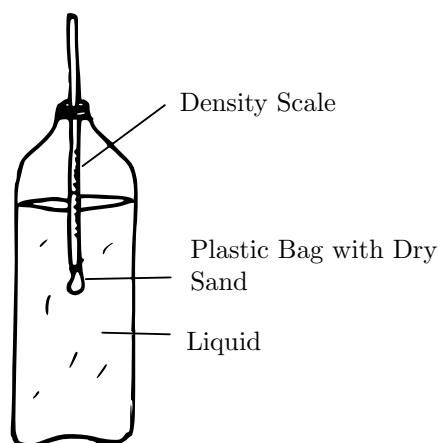


Figure 1.6: A Hydrometer

Clean Up Procedure

Collect all the used materials, cleaning and storing items that will be used later.

Discussion Questions

1. Why does the egg sink initially?
2. What causes the egg to float after the addition of salt?

Notes

An object immersed in water experiences upward force equal to the weight of the water it displaces. The upthrust competes with the downward pull of gravity which diminishes the weight of the object. If the upthrust is greater than the object's weight, it will float. Otherwise, the object will sink. If the water density is greater than the average density of the object, the object will also float. If the water density is less than the average density of the object, the object will sink.

1.3.4 Construction and Use of a Hydrometer

Learning Objectives

- To construct a simple hydrometer.
- To explain the use of a hydrometer.
- To calibrate a hydrometer.
- To use a hydrometer to measure the density of various liquids.

Background Information

Each liquid has a different density. The level at which an object will float in a liquid depends on the density of that liquid, so the different densities of liquids can be observed and measured by observing the level at which an object floats in them.

Materials

Plastic straw, small piece of plastic bag, dry sand, several containers to hold liquids, marker pen, rubber band or thread, ruler, water, kerosene, honey, any other liquids

Preparation Procedure

1. Close one end of the straw with the plastic bag and secure it with the rubber band or thread so that water cannot enter.
2. Place the straw in water with the plastic bag side down.
3. Pour sand into the straw until the bottom is heavy enough that the straw floats upright.

Activity Procedure

1. Place the straw in water so that it floats upright without touching the bottom or leaning.
2. Use the marker pen to mark the water level on the outside of the straw. Label this mark as 1.0 (the known density of water).
3. Place the straw in a container of kerosene so that it floats upright without touching the bottom or leaning to one side.
4. Use the marker to mark the kerosene level on the outside of the straw. Label this mark as 0.8 (the known density of kerosene).
5. Remove the straw from the kerosene and clean it. Be careful not to get any liquid inside the straw.
6. Use a ruler to draw an accurate scale on the straw, using the 1.0 and 0.8 marks as starting points. Begin by making a mark directly between them as 0.9, etc.
7. When the scale is complete (both above 1.0 and below 0.8), use the designed hydrometer to measure the densities of other liquids by reading the mark at the level of the liquid.

Results and Conclusions

The straw, when properly weighted, will float upright in any liquid and will therefore provide a good surface to write levels of liquids. The density of water is known as 1.0 and is relatively constant. Kerosene is also known as 0.8 and will not vary from place to place. By writing both of these points on the hydrometer and the respective floating levels, we can create a scale extending up from 1.0 and down from 0.8. This can then be used to measure the densities of other liquids.

Clean Up Procedure

1. Return all liquids to their proper containers.
2. Clean the outside of the hydrometer.
3. Return all materials to their proper places.

Discussion Questions

1. What liquids have high density?
2. What liquids have low density?
3. Why, when reading a hydrometer, do the small numbers appear at the top of the scale?

Notes

Be careful not to get any liquid in the straw. If the sand becomes wet, the hydrometer will not work again until it dries.

1.4 Structure and Properties of Matter

1.4.1 Determining Adhesion and Cohesion

Learning Objectives

- To observe cohesion and adhesion forces of different liquids.
- To determine adhesive forces between water molecules.
- To determine cohesive forces between different liquids.

Background Information

Adhesion is the force of attraction between a material and its surroundings. Cohesion is the force of the liquid molecules to stick to themselves. The concept of adhesive and cohesive forces can be used in different ways such as determination of viscosity of the liquids and explaining the transportation of liquid in plants and animals. When a drop of water is placed on a sheet of glass, the water spreads because adhesive forces between glass and water are greater than the cohesive forces between water molecules. When a drop of honey, cooking oil, or glycerine is placed on a sheet of glass, it remains almost spherical because the cohesive force is greater than the adhesive force.

Materials

Sheet of glass, water, honey, glycerine, cooking oil, syringe, and 2 wooden blocks

Activity Procedure

1. Place 2 wooden blocks on the top of the table.
2. Place a piece of pane glass horizontally over the two wooden blocks.
3. Using a syringe, place different drop of liquids on top glass. Record your observations.

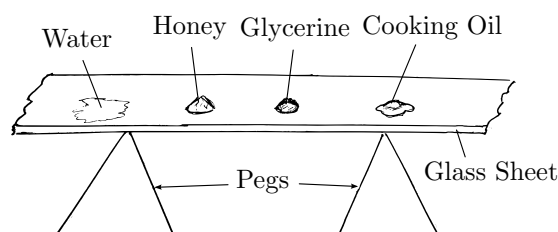


Figure 1.7: Observing adhesive and cohesive forces

Results and Conclusions

When a drop of water is placed on top of glass, water spreads and wets the glass. While material like honey, glycerine, and cooking oil remain in a spherical shape. The adhesive forces between the water molecule and glass molecule is greater. While the cohesive forces between the molecule of honey, glycerine and cooking oil is larger.

Clean Up Procedure

Collect all the used materials, cleaning and storing items that will be used later.

Discussion Questions

1. Explain why water wets the glass while glycerine does not wet the glass.
2. Discuss where we apply the concept of adhesive and cohesive forces in other areas of science.
3. How are cohesion and viscosity related?

Notes

The liquids which have the greatest forces of cohesion are also those with the highest viscosity.

1.4.2 Cohesion in a Moving Liquid

Learning Objectives

- To observe the effect of cohesion on moving water

Background Information

Cohesion is the force between molecules in a liquid. It holds liquids like water together if they are standing still or moving.

Materials

Empty 0.5 litre bottle, water, syringe needle OR pin OR small nail

Preparation Procedure

Make five small holes at the bottom of the side of the bottle. Make the holes close together (about 5 mm apart) with the syringe needle or nail.

Activity Procedure

1. Pour water into the bottle and allow the water to start flowing out of the holes at the bottom.
2. Using your thumb and forefinger, pinch the streams of water together so that they form a single stream.
3. To separate the streams again, pass your hand in front of the holes and the five streams will appear again.

Results and Conclusions

When you pinch the streams of water together, they form a single stream or a few streams. Water has a tendency to cling to itself due to its surface tension and cohesion. As you bring the streams together, you allow the water to stick to itself forming a single stream. Passing your hand in front again stops the flow of water at the holes and allows it to start again, which it will do in five streams.

Clean Up Procedure

Return all materials to their proper places.

Discussion Questions

- How did the behaviour of the water streams change as the level in the bottle decreased?
- What force holds the water streams together?
- Why do the streams eventually split?

Notes

Be careful not to let the holes overlap or be too far apart. This will cause the water to form one stream from the beginning or make it impossible to pinch the streams. Practice pinching the water and make new holes if necessary.

1.4.3 Water drops

- Preparation time: none
- Materials: Water dropper or syringe
- Procedure: Slowly drip water from the water dropper or syringe and point out that before a drop falls; it will hang suspended by its surface tension. Explain that as the drop becomes larger, its weight increases until surface tension is insufficient to support it, at which point it falls.

1.4.4 Blowing bubbles

- Preparation time: 5 minutes
- Materials: Thin piece of wire (approximately 30cm), water, detergent, glycerin (optional)
- Procedure: Bend the wire into a loop 2 to 3 cm in diameter. Continue to bend the wire so that it circles around the circumference of this circle several times. Leave a straight piece several centimeters long to use as a handle. This is the bubble blower. Dip the circular part of the bubble blower into a strong solution of detergent (regular powdered laundry detergent works well) mixed with glycerin. When you remove the bubble blower from the solution, a thin film should remain across the circle. Gently blow through the center of the circle. With a little practice, you should be able to cause a spherical bubble to separate from the blower and float away.
- Theory: The detergent causes the surface tension in the solution to be slightly variable. In areas of higher concentration of detergent, the surface tension is lower. In order for the films and bubbles to be stable, the surface tension near the top must be slightly higher than at the bottom. As the detergent molecules are heavier than water, they tend to sink towards the bottom of the film, accomplishing this.
When you blow through the bubble blower, we can see that then tension is pulling it back towards a flat surface. Once an independent bubble is formed, we see that it forms a nearly perfect sphere. This is because the surface is under tension. This tension forces the bubble to form the shape with the minimum surface area, a sphere. It is also worth noting that both the film that stays on the bubble blower and the bubbles themselves appear to have small rainbows of colors in them. This is caused by thin-film interference.

1.4.5 Pin Float

- Preparation time: none
- Materials: A cup or small dish, a straight pin, water, detergent
- Procedure: Make sure the cup or dish is clean, and has no soap or detergent residue. Fill the cup or dish with clean water. Carefully place the straight pin on the surface of the water, being careful not to break the surface. If done properly, it should be possible to get the straight pin to remain suspended on the surface (see also floating compass). Next, sprinkle a small amount of detergent onto the water. The pin should sink to the bottom.
- Theory: When the straight pin is placed on the surface, it causes the surface of the water to bend downwards. This means that the surface tension of the water is pulling the pin upwards. Although the pin is denser than water, and would normally sink, this surface tension is enough to support the weight of the pin. When detergent is sprinkled onto the surface of the water, it lowers the surface tension of the water. The surface tension is no longer strong enough to hold up the pin, so the pin sinks.

1.4.6 Pepper Float

- Preparation time: none
- Materials: A cup or dish, water, ground black pepper, soap or detergent

- Procedure: Make sure that the cup or dish is clean, and has no soap or detergent residue. Fill the cup or dish with clean water. Sprinkle ground black pepper over the surface of the water in a way that the pepper is distributed evenly and covers the whole surface. Next, apply a small amount of soap or detergent to one finger. Touch this finger to the surface of the water in the center of the cup or dish. The pepper will flee your finger, and all run to the sides of the cup or dish.
- Theory: When you touch your finger to the surface, you introduce a small amount of soap or detergent, lowering the surface tension at that point. The surface of the water is now unbalanced the surface tension near the edge is pulling the surface outwards more strongly than the surface tension at the center is pulling the surface inwards. As there is a net force on the surface outwards towards the edge, the surface moves, pulling the pepper along with it to the edges of the cup or dish.

1.4.7 Water Dome

- Materials: Coin, water, syringe or eyedropper
- Preparation Time: none
- Procedure: Place a coin flat on the table. Using the syringe or eyedropper, carefully drop individual water drops onto the coin. With some practice, you should be able to get quite a few drops onto the coin before the water spills over, creating a dome of water.
- Theory: The surface tension of the water holds it together against the force of gravity, which is trying to pull the water off the coin.

1.4.8 Capillarity

Learning Objectives

- To observe the effect of capillarity in various liquids.
- To explain the mode of action of capillarity.

Background Information

Capillarity, or capillary action, is possible because of the combined effects of cohesion and adhesion. Cohesion holds a liquid together, especially at the surface. Adhesion allows a liquid to attach itself to another material, like the vertical surface of a container.

Materials

Clear thin plastic straws with different diameters, shallow container (bottom of a water bottle, jar cap), various liquids like water, spirit, cooking oil, and kerosene

Activity Procedure

1. Pour some water into the container so that it is about 1 cm deep.
2. Place one end of the straw into the liquid so that the end is completely submerged but not touching the bottom of the container.
3. Observe the change in water level in the straw for about a minute.
4. Repeat these steps for the other liquids and compare.
5. Repeat these steps for straws of different diameters and compare.
6. Repeat these steps for different liquids and compare.

Results and Conclusions

Liquid in a thin tube will slowly climb up the tube without any visible force present. Adhesion and cohesion are pulling the liquid up the tube. The capillary action of the liquid depends on the diameter of the tube. Different liquids have different capillary action for the same size capillary.

Clean Up Procedure

1. Return all liquids to their proper containers and put them away.
2. Wash the container and straw and put them away.

Discussion Questions

1. What causes the liquid to move up the straw?
2. What causes the liquid at the edge to cling to the straw while the liquid in the middle remains lower?
3. Which liquid moved up the straw fastest? Which moved slowest?
4. What would happen if the diameter of the straw was increased? What would happen if it was decreased?

Notes

Liquids are able to climb up a thin tube due to the combined effects of adhesion and cohesion. Cohesion allows a liquid to remain connected to itself while adhesion allows a liquid to remain connected to another surface. Adhesion causes a liquid to climb slightly up the side of any container; the surface tension of the liquid (cohesion) then pulls the remainder of the liquid up as well. In a normal container, the adhesive force at the side of the container is not strong enough to pull all the other liquid up. In a thin container, a larger proportion of liquid is attached to the side of the tube and a smaller proportion is being held by surface tension, so the adhesive force is strong enough to pull all the liquid up the tube.

1.4.9 Lemonade

- Preparation Time: 5 minutes
- Materials: lemon, drinking water, pitcher
- Procedure: Make lemonade by putting lemon wedges (oranges also work) into the pitcher and adding about a liter of water. Let it sit for a couple hours, then drink and enjoy! Adding sugar or honey is recommended.
- Theory: The citrus flavor of the lemons will gradually spread throughout the water, though no force is apparent. This process is called diffusion. See the Transport topic in the Biology section for more activities involving diffusion.

1.4.10 Powder Diffusion

- Preparation time: 0 minutes
- Materials: powdered food coloring or kool-aid like product, water, plastic water bottle
- Procedure: Fill the plastic water bottle with water. Quickly add the powdered food color, but do not shake. Observe the color diffuse through the water.
- Theory: Mixing does not occur immediately. Without shaking or stirring, it occurs slowly. By using a colored compound, it is easy to see how the molecules are slowly dissolving into the solution.

1.4.11 Orange Diffusion, Part A – Sweet Smells

- Preparation time: 5 minutes
- Materials: one orange or other citrus fruit
- Procedure: Have students sit in their seats. Start to peel the orange. When students begin to smell oranges, have them raise their hands. Be sure the students only raise their hands as they smell the orange and not before.

- Theory: Diffusion happens in not only liquids but also gases. Peeling oranges or other citrus fruits releases small compounds that diffuse through gases. When these compounds come in contact with our noses, we smell oranges. However, we cannot smell oranges immediately on peeling; the compounds must migrate towards our noses. In this case, the compounds will slowly diffuse in the classroom with the students closest to the orange smelling it first. The students in the back of the classroom will smell it last. The effects of wind should be considered.

1.4.12 Orange Diffusion, Part B – Trapped

- Preparation time: 5 minutes
- Materials: a box, one orange or other citrus fruit
- Procedure: Turn the box upside down. Without turning the box over, peel the orange inside of the box. When students begin smelling oranges, have them raise their hands.
- Theory: Diffusion can only occur when the molecules can move freely. Some objects will not allow compounds through. In this activity, the cardboard box prevents the compounds in the orange to diffuse out through the classroom. This time, students not smell oranges or it will take a long time for students to start smelling.

1.4.13 Osmosis

- Preparation time: 10 minutes
- Materials: 1 potato or carrot, water, salt, two water bottle bottoms
- Procedure: Cut two equal sized pieces of potato. Put one piece in normal water and the other in a salt-water solution. Observe over the next few hours.
- Theory: In all cells and plants, there is a proper balance of different concentrations of salts and sugars. Osmosis is the process where the salts move from a high concentration either to a low concentration or where water moves from a low concentration to a high concentration. In this activity, placing the potato in pure water will cause the potato to swell. Inside the potato, there is a higher concentration of salts and sugars compared to the water surrounding it. The water moves into the potato in order to make the concentrations inside the potato more similar to the water. The potato swelling is visual evidence of this phenomenon. The potato in salt water has exactly the opposite effect. The concentration of salts inside the potato is much lower compared to the concentration of salt in the water surrounding the potato. The water in the potato moves out of the potato to dilute the salt solution.

1.5 Pressure

1.5.1 Balloon Pop

- Preparation Time: 20 minutes
- Materials: piece of wood, nails, water balloons, water
- Procedure: Put one nail through the board in one place and a large cluster of closely spaced nails in another place, all pointing up. Fill a balloon with water. As you lower the balloon onto the single or few nails, the balloon eventually pops. Fill another balloon with water and slowly lower it onto the cluster of nails. It should not pop.
- Theory: As area of a force increases, pressure decreases. Therefore, as more nails are added and the area of the force (the weight of the balloon) increases, the pressure decreases and the balloon does not pop. Or, it takes more force to pop.
- Alternative: hang the balloon from a spring balance as you lower it (by holding the spring balance) onto the nails. The difference in weight will allow you to calculate the force needed to pop the balloon.

1.5.2 Potato Poke

- Preparation Time: none
- Materials: some straws, potato
- Procedure: Take a straw and jab it into the potato. The straw should bend easily leaving the potato unharmed. Now place your thumb firmly over one end of a straw and jab the other end into the potato. This time the straw should enter the potato quite easily.
- Theory: The straw is weaker than the potato and so will bend rather than break the potatoes skin. But, with your thumb plugging the back of the straw, the air inside the straw cannot leave and instead pushes out against the sides of the straw. As the straw strikes the potato, it cannot bend with the air pressure inside and so instead can poke through the skin into the potato.

1.5.3 The Effect of Surface Area on Pressure

Learning Objectives

- To observe the factors affecting pressure
- To demonstrate the effects of surface area on pressure

Background Information

When a force acts on an object, the results are greatly affected by the area over which it acts. Consider the pain in your hand when you carry a bucket of water with a thin wire handle. Wrapping a piece of fabric around the handle greatly reduces the pain. This can be explained using pressure and summarized in the equation:

$$\text{Pressure} = \text{Force} \times \text{Area}$$
$$P = F \times A$$

Materials

Bar of soap, thin thread, thick string, 4 heavy stones of approximately equal weight, two stools, and a small wooden board.

Activity Procedure

1. Place the wooden board between the two stools.
2. Place the piece of soap on top of the wooden board.
3. Tie stones to the ends of the thick string. Then tie stones to the end of the thin thread.
4. Hang each type of thread across the bar of soap so that the stones hang freely.
5. Observe the effect of each thread on the bar of soap.

Results and Conclusions

It will be seen that the bar of soap was cut easily by using a thin thread but not by using a thick string. This because the thin thread has a small surface area and the same force and therefore a large pressure, while the thick thread has a larger area for the same force and therefore smaller pressure.

Clean Up Procedure

Collect all the used materials, cleaning and storing items that will be used later.

Discussion Question

Why does a thin thread cut easily through a bar of soap while a thick thread does not?

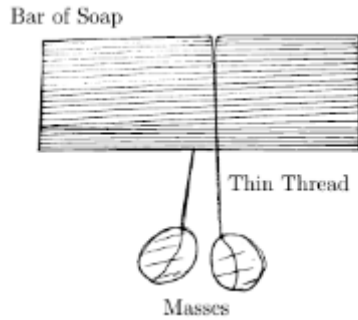


Figure 1.8: Thin Thread

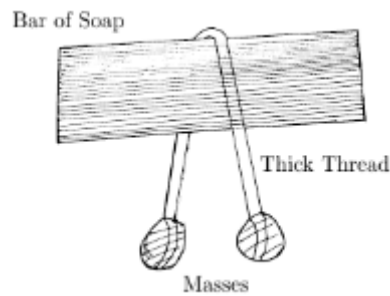


Figure 1.9: Thick String

1.5.4 Straw Fountain

- Preparation Time: 10 minutes
- Materials: 0.5 liter water bottle with cap, water, straw, glue
- Procedure: Poke a hole with the diameter of the straw in the cap of the water bottle with a hot nail or pin. Insert the straw so that it extends almost to the bottom of the water bottle and leaves enough sticking out for your mouth. Secure it with glue so that it is airtight. When the glue is dry, fill the bottle about half way with water and close the cap with the straw inside. Have a student blow as hard as they can through the straw into the water. When they run out of air and stop blowing, they will get a nice spray in the face.
- Theory: By blowing into the bottle, you greatly increase the pressure inside. When you finish blowing, the pressure will try to equilibrate by forcing the pressure back out through the straw. There is nowhere for the water to go but out.

1.5.5 Cartesian Diver

Learning Objectives

- To observe characteristics of a submerging body
- To describe and apply the concept of Cartesian diver in daily life

Background Information

When the body is immersed in a liquid it may sink or float. The body will float in water when its density is less than density of water. A submerging body is designed in such a way that it will sink a little but also float in water.

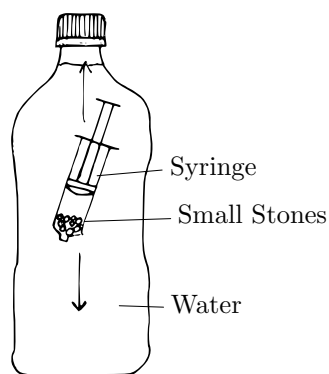


Figure 1.10: The Cartesian Diver

Materials

Large Bottle (1.5 litres) or transparent long container with a cover or cap, water, syringe, and small stones

Preparation Procedure

Remove the needle from the syringe.

Activity Procedure

1. Fill a bottle with some water.
2. Remove the plunger from the syringe and insert a few stones into the syringe.
3. Replace the plunger so that the syringe is full of air but sealed at the top.
4. Hold the syringe upright and immerse it in the bottle making sure that the syringe and its contents float upright in the water.
5. Close the bottle with the cap.
6. Gently squeeze the bottle near the bottom.
7. Observe what happens.

Results and Conclusions

When the bottle is gently squeezed the syringe sinks down to the bottom. When the bottle is released the syringe rises back up.

Discussion Question

Why does the syringe move down when the bottle is squeezed?

Notes

The syringe sinks down because the pressure in the bottle increases when you squeeze it. Added pressure will cause water from the bottle to enter into the syringe through the needle hole. This increases the weight of the syringe and thus it sinks. When the pressure is released, the water in the syringe leaves and so the syringe will float again. A Cartesian diver and a submarine use the same principle to sink and float in deep water.

1.5.6 Holey Bottle 2

- Preparation Time: 10 minutes
- Materials: Water bottle, pin or small nail, water, bucket (for catching water)
- Procedure: In even intervals around the base of the water bottle, poke small holes with the pin or nail. Try to get an even distribution and the same size hole all around. Fill the bottle with water and watch the water leave each hole with the same force. Blowing into the bottle will help illustrate the equality of the pressure in all directions.
- Theory: Pressure in a fluid acts equally in all directions, therefore the water being forced out the bottom should feel the same amount of pressure and shoot the same distance.

1.5.7 Liquid Pressure and Depth

Learning Objectives

- To verify the variation of pressure with depth in water

Background Information

The wall of a dam is made much thicker at the bottom than at the top. Also, water storage tanks are placed at the top of a building. This is because the pressure in a liquid is related to its depth.

Materials

Plastic bottle, nail or metal pin/needle, matches, water

Preparation Procedure

1. Light a match and heat the sharp point of the nail or pin.
2. Use the heated nail to put three holes into a bottle. Put one hole near the bottom, one near the middle, and the last hole between them.

Activity Procedure

1. Fill the bottle with water up to the rim.
2. Hold the bottle in air using your hand or place the bottle at the top of a tall object like a stool on a table.
3. Allow water to flow out of the bottle and observe the trajectory of water from each hole. Note the horizontal distance reached of water from each hole.

Results and Conclusions

The water flows faster from the hole with the greater depth because there is greater pressure, showing that the water pressure increases with the depth of the water. This is because the weight of the water on top acts downward causing pressure. The greater the depth, the greater the weight, resulting in greater pressure.

Clean Up Procedure

Collect all the used materials, cleaning and storing items that will be used later.

Discussion Questions

1. What have you observed in the trajectory of water from each hole?
2. How does the pressure change with the depth of water? Why?

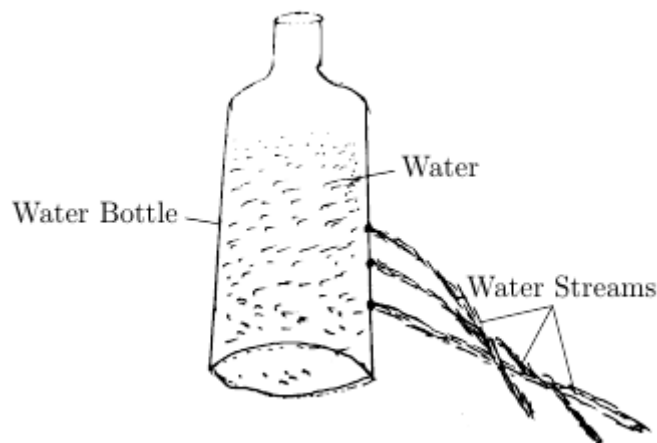


Figure 1.11: Demonstration of the effect of depth on liquid pressure

Notes

There is a difference between depth and height. Height is measured from the reference point upward while depth is measured from the reference point downward. The reference point in this case is at the surface of water.

1.5.8 Hydraulic Press

- Preparation Time: 15 minutes
- Materials: Two syringes of different sizes (50 ml and 20 ml work well), thin rubber tubing, water
- Procedure: Fill the larger syringe with water and attach one end of the rubber tubing to its end. Attach the other end of the tubing to the smaller syringe (the plunger should be inserted all the way in the smaller syringe). Pushing the plunger of the larger syringe will cause the plunger of the smaller syringe to go out, and vice-versa. You will notice that it is easier to push the plunger of the small syringe than that of the larger syringe.
- Theory: Pressure is equal to force per area, and the pressure is distributed equally throughout a liquid. As such, the pressure at one plunger must be equal to the pressure at the other plunger. Setting the two ratios equal, we can see that a small force over a small area can overcome a large force over a large area.

1.5.9 Atmospheric Pressure

- Preparation Time: 5 minutes
- Materials: Water bottle, pin and/or nail, water
- Procedure: Using an empty water bottle (bigger is better), poke four or five small holes (0.5 cm) in the bottom with the pin and then the nail. Fill the bottle about half way with water, allowing it to spill out through the holes in the bottom. While the students are watching, seal the cap on the bottle. The water will cease to pour out of the bottom despite the holes and rather predictable effect of gravity. When the gasps of wonder die down, discuss the following:
- Theory: The pressure of the water combined with the pull of gravity is enough to cause the water to pour through the holes in the bottle when the cap is not sealed. When the cap is on tight, however, the combined high air pressure outside the bottle and low air pressure inside the bottle creates enough of an upward force on the water to counter the downward force of gravity.

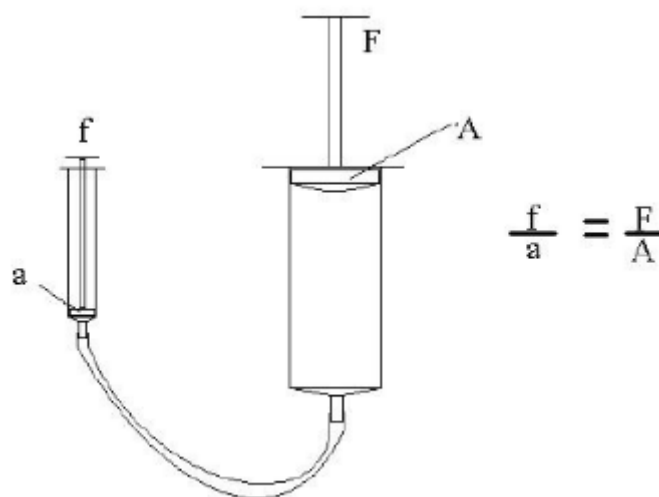


Figure 1.12: A hydraulic press

1.5.10 Charles' Law, Part C – Bottle Crush

- Preparation time: 10 minutes
- Materials: water bottle, boiling water
- Procedure: pour some boiling water into the water bottle. Cap the bottle and shake to make sure all the air in the bottle is heated from the hot water. Open the bottle and pour out the liquid. Recap the bottle. After a short time, the bottle will contract.
- Theory: Charles' law states that volume is proportional to temperature. By capping the hot air inside of the water bottle, the volume of the air inside the bottle will decrease as the temperature of the gas cools off. As the volume of the air reduces, the atmospheric pressure crushes the plastic water bottle.

1.5.11 Straw Elevator

- Preparation Time: none
- Materials: two straws, container, water
- Procedure: Fill the container with water and insert one straw so that it stands vertically in the water. Using the other straw, blow across the opening of the vertical straw; the water level in the straw will rise.
- Theory: Bernoulli's Principle states that moving air causes low pressure; the air passing in a stream over the vertical straw creates low pressure and therefore a pressure differential between the bottom of the straw (the water) and the top. The water will move towards the lower pressure, moving up the straw.

1.5.12 Making a Magdeburg Hemisphere

Learning Objectives

- To demonstrate the effect of atmospheric pressure

Materials

Two small cooking pots of equal size, oil, matches, small pieces of paper

Preparation Procedure

Spread oil or grease around the edge of one of the cooking pots.

Activity Procedure

1. Place some pieces of paper into the cooking pot which does not have any oil.
2. Light the pieces of paper on fire.
3. Allow the paper to burn until about half of it has burned.
4. Place the greased cooking pot upside-down on top of the ungreased cooking pot so that they create a sort of ball and no air can escape.
5. Allow the pots to cool.
6. Try to separate the pots.

Results and Conclusions

After the pots have cooled it is very difficult to separate them. This is because when you burn the paper, the air in the pot expands and escapes. When you cover the pots, no more air can enter and the air inside cools, reducing the pressure inside the pots while the pressure outside the pots remains the same. The atmospheric pressure therefore presses the pots together so as to equalize the pressure on either side of the pot.

Clean Up Procedure

Collect all the used materials, cleaning and storing items that will be used later.

Discussion Questions

1. What is the reason for burning the paper and then covering the pot?
2. What happens when the pots cool?

Notes

The principle behind the Magdeburg hemisphere is used to create suction. When air is heated, it expands and escapes. If the hot container is sealed and allowed to cool, the reduced number of particles causes a lower pressure than atmospheric pressure. Thus, the force pushing the two pots together from the outside is greater than the force pushing out from the inside and thus the two pots are very difficult to separate.

1.5.13 Siphon

- Preparation Time: 1 minute
- Materials: two containers, half meter of rubber tubing/IV line/feeding tube, water
- Procedure: Place one jar with water on a table and the other empty jar on a chair just below the table. Place one end of the tubing into the water and the other in your mouth. Suck on the tube until the water starts coming out and place the end of the tube into the empty beaker, holding the middle of the tube at the level of your mouth. The water will continue to flow from the water jar to the empty jar, despite the water's initial uphill climb.
- Theory: By sucking on the tubing, you create low pressure on that side. The slightly higher pressure (atmospheric) at the water will cause the water to continue to travel as long as the pressure difference is enough to overcome gravity. If you raise the middle of the tube too high, the water will stop flowing.

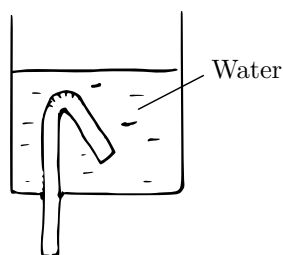


Figure 1.13: The Automatic Flushing Tank

1.5.14 Automatic Flushing Tank

Learning Objectives

- To identify the application of pressure differences

Background Information

The effect of pressure in a liquid can be observed in different ways. Automatic flushing tanks operate under the influence of pressure in a liquid. When the level of water in a container reaches the highest point in the exit pipe, water will drain from the tank until the level of the water in the tank is below the level of the outlet. The tank can then be refilled to repeat the cycle. This type of system is useful for flushing or when you need a certain amount of water for a given amount of time.

Materials

Empty drinking water bottle, straw, water, bucket, chewing gum OR superglue

Preparation Procedure

Cut off the top of an empty water bottle, make a hole at the bottom so as to fit the straw through it. Bend the straw inside the bottle so that it makes an upside down 'U' shape. Use the chewing gum or superglue to seal the hole.

Activity Procedure

1. Hold the bottle and place the bucket below the bottle.
2. Pour some water into the bottle up to and above the bend in the straw and observe what happens.

Results and Conclusions

The water will flow into the bucket through the bent straw.

Clean Up Procedure

Collect all the used materials, cleaning and storing items that will be used later.

Discussion Question

What causes the water to flow from the bottle to the bucket? How does this work?

Notes

The siphon principle states that liquid is able to flow without pumping because the combined pressure of the water and the atmosphere pushing down on the water is greater than the air pushing up on the straw. The automatic flushing tank does not require a handle to trigger the flush. Once the water flows into the tank up to the level of the siphon, the tank will flush automatically.

1.5.15 Reverse Air Pump

- Preparation Time: varies, about 1 hour
- Materials: Bicycle pump (the tall, metal kind), short piece of rubber tubing fitted to pump valves, utility knife, tightening sleeves, extra valve
- Procedure: There are two parts of the pump that control the direction of airflow: the first is a diaphragm inside the pump and the second is a ball valve at the base of the pump in the hose.
 1. You need to open the pump and pull out the dipstick with the diaphragm attached. At the bottom, there should be a diaphragm with holes around the top, a metal disc the same diameter as the diaphragm, and a few nuts and washers to keep it all together. In its normal configuration, the diaphragm is pulled down by friction away from the disc when the pump handle is pulled up, allowing air to enter the pump freely. When the pump handle is pushed in, the diaphragm is forced against the disc, restricting any back airflow, and forcing all the air forward through the hose. Switch the position and direction of the diaphragm and disc so that it has the opposite effect when the pump handle is pulled in or out.
 2. Next, you need to cut open the hose at the base of the pump and find the valve with the small bead inside. Normally, when air is forced forward through the valve, the bead does not restrict any airflow. When air tries to go back through the pump, the bead blocks the valve and stops any airflow. Switch the direction of the valve.
 3. From here, you need to reattach the hose to the pump. You may need to get another nozzle to attach to the pump, attaching the hose with reversed valve with the extra bit of rubber tubing. It depends on your pump, but if you have made it this far, you will find a way to make it work. Tightening sleeves will come in handy here to make sure no air is lost after all this cutting and jury-rigging.
- Applications: This suction pump is great for showing the gas laws and boiling points: suck the air out of a jar of water and watch the water boil, you could also kill stuff in the jar this way, but that is just morbid, and possibly cool, or that sound travels through a medium.

1.6 Work, Energy and Power

1.6.1 Work as Heat, Part A

- Preparation time: 5 minutes
- Materials: thin strip of metal, pliers
- Procedure: Take a piece of metal. Use a set of pliers to bend the metal back and forth. Feel the temperature of the metal.
- Theory: Work can manifest itself in a variety of ways. One of the most common ways is the rise in temperature. By moving the metal back and forth, you are doing work on the metal. This work is converted into heat. This heat is evidenced by the rise in temperature in the metal.

1.6.2 Work as Heat, Part B

- Preparation time: 0 minutes
- Materials: radio antennas, old or new
- Procedure: The radio antennas operate in a telescopic motion. Pull the radio antenna in and out for one full minute. Do not break the antenna in this movement. Observe the temperature of the antenna after the work is over.
- Theory: Again, you are doing work on the radio antenna by moving it in and out quickly. Through this action, the antenna heats up. This is the evidence of the work you have been doing. Work is defined as force times distance or. In this case, the force is the effort required to move the antenna in and out while the distance is the length of the antenna.

1.6.3 Work as Light

- Preparation time: 0 minutes
- Materials: duct tape, or other tape that holds together tightly.
- Procedure: Cut two pieces of duct tape. Press the ends of the bottom pieces of tape together but allow the top pieces of tape to be apart. Hold tightly to both pieces of tape at the top, and quickly rip them apart. Observe the blue light when the tape comes apart.
- Theory: Pulling the tape apart quickly creates a faint blue light. It is best to observe this light at night since it is so faint. In this activity, this is the work being done to pull the tape apart. Unlike the previous activities, this work is released as light. This phenomenon as where work manifests itself as light is called triboluminescence. This is the same phenomenon that causes the green light when snapping wintergreen mints.

1.6.4 Potential Energy of a Spring

Learning Objectives

- To observe the change in energy from potential to kinetic

Background Information

In a closed system, where no force acts on the objects, the total energy remains constant. In the case of mechanical energy, this means that potential energy and kinetic energy can change, but their total remains the same. Springs and other elastic materials also have potential energy in the form of elastic potential.

Materials

Clothes pin, thread, two pencils

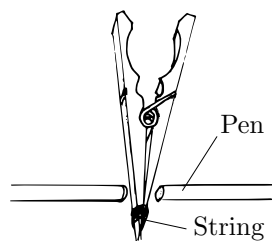


Figure 1.14: Energy conservation in a spring

Activity Procedure

1. A clothes pin has two ends: one for gripping clothes and one for pushing with fingers. Press the finger ends together so the gripping end is open as far as possible. Use a thread to tie the finger ends together so that the gripping ends stay wide open.
2. Place the clothes pin side-down on a table and place two pencils touching the clothes pins as shown in the figure below.
3. Cut the thread holding the clothes pin open, the clothes pin should open quickly and push the pencils away.

Cleanup Procedure

Return all materials to their proper places.

Discussion Questions

1. What two types of energy are being used here?
2. Describe the change in energy occurring here.

Notes

The spring inside the clip holds energy when it is forced to contract. When the clip is allowed to close, the potential energy of the spring is converted into mechanical energy as the clip moves, forcing the pencils away quickly.

The interconversion of potential and kinetic energy may also be shown with a simple pendulum. Another option is to hold a heavy book above the table and then to drop it on the table.

1.7 Light

1.7.1 Light in a Straight Line

Learning Objectives

- To explain the concept of light rays and beam of light
- To demonstrate that light travels in straight line

Materials

Torch/kerosene lamp/light source, cardboard, 6 large books, iron nail

Preparation Procedure

Cut 3 rectangular pieces of cardboard. Make a hole at the center of each piece of cardboard using a nail. The holes should all be the same distance from the bottom of the cardboard so they can be easily aligned.

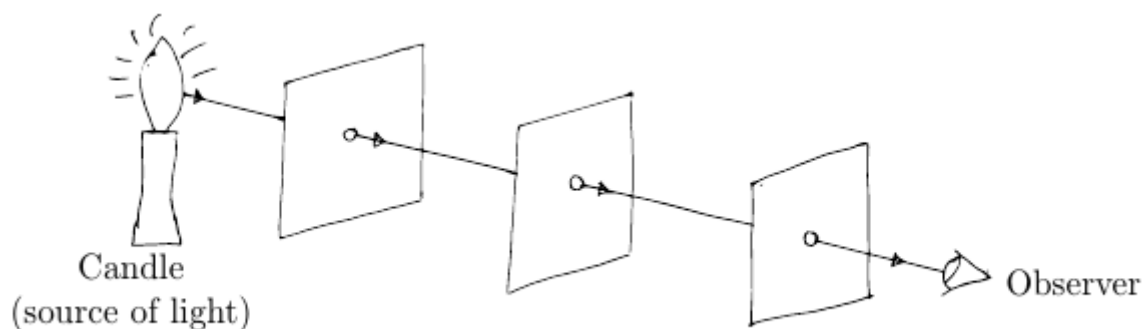


Figure 1.15: Experiment to show that light travels in straight lines

Activity Procedure

1. Arrange the cardboard pieces in between two books so they stand upright and arrange them in a straight line. The cardboard pieces should be at least 45 cm apart so that the holes are aligned.
2. Place a light source 30 cm from the first piece of cardboard. Have an observer stand at the other end of the table.
3. Look through the series of holes to see the light source.
4. Slightly displace one of the pieces of cardboard and again look through the holes.

Clean Up Procedure

Collect all the used materials, cleaning and storing items that will be used later.

Discussion Questions

1. What does this experiment show about the way that light travels?
2. Draw a ray diagram to show the two alignments of the cardboard pieces.

Notes

This activity is best done at night or in a dark room so that the light can be seen clearly through the holes.

1.7.2 Pin Hole Camera

Learning Objectives

- To construct a pinhole camera.
- To use a pinhole camera to demonstrate that light travels in a straight line.

Background Information

Light rays travel in a straight line. When the rays of light from a source pass through a small hole, the image of the source (any object producing or reflecting light) can be seen inverted on the other side of the hole. A simple, closed box can be used to demonstrate this property of light. This instrument is called a pinhole camera and it demonstrates the basis of photography.

Materials

Cardboard box, plain paper, candle, kerosene, pin, glue, matches

Preparation Procedure

1. Remove one side of an empty box and on the opposite side make a small hole using a pin.
2. Soak a piece of plain paper in kerosene to make it translucent.
3. Using glue, cover the open side of the box with the translucent paper to act as a screen.
4. Light the candle.

Activity Procedure

1. Place the candle in front of the box on the side with the small hole.
2. Observe and record the image of the candle on the plain paper.

Results and Conclusions

Rays of light travel in a straight line. The observed image is inverted as the result of the path of light rays from the object to the paper – the rays cross at the pin hole.

Clean Up Procedure

The pinhole camera can be stored for later use.

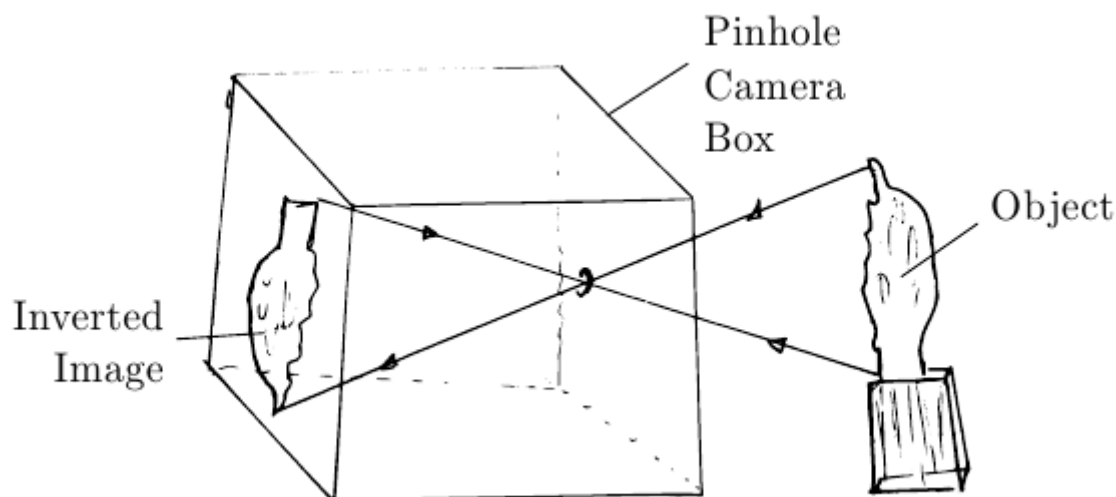


Figure 1.16: Construction of a pinhole camera

Discussion Questions

1. What properties of light allow the image to appear?
2. Why is the image of the candle inverted?
3. Draw a ray diagram to represent how a pinhole camera works.

Notes

The hole must be very small, clean for the pin hole camera to work properly. A large or jagged hole will create a blurred image. If it is difficult to see the image go to a darker room or try the experiment in the evening or night.

1.7.3 Light through a Comb

- Preparation Time: 1 minute
- Materials: comb, light source, optional mirror
- Procedure: In a dark place, shine the light parallel to a table surface through the comb. The apertures in the comb will act as beams of light. Reflect the beams off a mirror and observe the straight-line propagation of light.
- Theory: Light travels in a straight line, even when reflected at a surface.

1.7.4 Laws of Reflection

Learning Objectives

- To verify the laws of reflection in a plane mirror

Materials

Plane mirror, pins, thick cardboard, protractors and rulers, white paper, pen, pencil

Activity Procedure

1. Place a plane mirror vertically on a sheet of white paper on top of the cardboard.
2. Draw a line along the back of the mirror.
3. Construct a perpendicular line to the line on which the mirror stands.
4. Draw a line making an angle of incidence i from the normal.
5. Insert two pins on the line drawn which makes an angle i with the normal.
6. Look into the mirror such that the images of the pins look as if they are in straight line.
7. Insert two more pins so that they are in line with the images of the first two pins. These two more pins mark the path of the reflected ray.
8. Remove the pins and draw lines joining the marks of the pins.
9. Using a protractor measure and record the angle between the reflected ray and the normal.

Results and Conclusions

This practical is used to verify the Laws of Reflection and to observe and describe images formed in a plane mirror. It will be seen that the angles of reflection are equal to the angles of incidence in each case.

1.7.5 Kaleidoscope

- Preparation Time: 5 minutes
- Materials: 3 or more mirrors of equal size OR 3 or more pieces of glass of equal size with metal foil on one side, tape; Optional: colored objects
- Procedure: Tape the three mirrors together so that they form a triangular tube with the reflective sides facing in. Look through the kaleidoscope at any objects, especially colored beads or paper, and turn the scope to watch the pretty colors change!

Chapter 2

Physics Activities for Form II

2.1 Static Electricity

2.1.1 Salt and Pepper Trick

- Preparation Time: 1 minute
- Materials: salt, pepper flakes, pen, dish
- Procedure: Mix a spoonful of salt with a spoonful of pepper and place it on a piece of paper or dish. Charge the pen by rubbing it on your hair or a piece of cloth and hold it over the salt and pepper. Which flakes jump to the pen?
- Theory: Both salt and pepper will be attracted to the pen, but the salt is too heavy to move so only the pepper will make the jump.

2.1.2 Concept of Static Electricity

Learning Objectives

- To demonstrate the charging of an object
- To explain the concept of static electricity

Background Information

All objects carry charges which attract or repel other charges. Normally, the total charge on an object is zero, meaning an equal number of positive and negative charges. Sometimes, however, charges can be added to or removed from an object, causing the object to become charged. This can be seen when two objects attract or repel each other.

Materials

Sweater wool, dry plastic sheets

Activity Procedure

1. Place two transparent plastic sheets together on top of a book.
2. Rub the two plastic sheets with the sweater wool several times.
3. Separate the two plastic sheets slowly and listen to what happens.
4. Bring the plastic sheets closer and observe what happens.
5. Separate the two plastic sheets and rub them individually with the sweater wool several times.
6. Bring the sheets close to one another and observe what happens.

Results and Conclusions

When the two plastic sheets are separated a crackling sound is heard. When they are brought together they are attracted to each other. This is because the upper sheet acquires a different charge from the lower sheet. When the two plastic sheets are rubbed separately and brought closer, they tend to repel. This is because they acquire the same charge. Charging by rubbing removes electrons or adds electrons. When rubbing the plastic sheets with a sweater, electrons will move from the sweater to the upper plastic and the protons from the lower plastic will attract the electrons from the upper one. That is why the sheets attract when they are rubbed together. When rubbing the sheets separately, you give them both a negative charge (electrons) from the sweater. That is why they repel each other.

Clean Up Procedure

Collect all the used materials, storing items that will be used later.

Discussion Questions

1. Why do we hear a crackling sound when we pull a sweater over our head?
2. Why do the sheets attract each other in one case but repel each other in another case?

Notes

The crackling sound heard when the two sheets separate is caused by the movement of charges. The concept is the same as that of lightning, which involves moving charges. As the charges move, they displace air and leave a trail of low pressure. Air then rushes in to fill the empty space or low pressure, causing a crack sound.

2.1.3 Electrostatics

- Preparation Time: 5 minutes
- Materials: Plastic ruler and piece of nylon cloth, a glass object and silk cloth, or a latex balloon and piece of fur (or hair), small pieces of metal foil, thread
- Procedure: Rub the plastic ruler against the piece of nylon cloth. This transfers electrons between the two items, producing an electrostatic charge. If the piece of nylon cloth is small, try suspending it from a thread near the ruler. As the two items have opposite charges, they attract each other, causing the nylon to lean towards the ruler.
Crumple a piece of foil into a small ball, and suspend it from a thread. Bring the charged ruler near to the foil ball. The charge on the ruler should cause an induced dipole in the foil, which is in turn attracted to the charge on the ruler, causing the foil to lean towards the ruler.
If you rub the ruler on two different small pieces of cloth, try suspending the two cloths near each other. As they have the same charge, they will repel and lean away from each other.
N.B.: The above can be performed by rubbing a plastic ruler on nylon cloth, or by rubbing glass on silk, or by rubbing latex on fur. Some clothing is made out of nylon. Silk is commonly found in the liner to suit jackets. Other combinations of items can also produce static electric charges. It is best to try these on your own before showing them in front of class.
This demonstration is best performed in a room with no wind or air currents, which will make it difficult to see the objects leaning towards each other. The static charges will last for a longer time if there is low humidity and a low amount of dust. On humid or dusty days, the static charges will discharge faster. This is a good alternative to the Gold Leaf Electroscope, which is rather expensive and unnecessary.

2.1.4 Construction of an Electroscope

Learning Objectives

- To construct a leaf electroscope
- To understand the mode of action of an electroscope

Background Information

A gold-leaf electroscope is used to detect the presence of electric charge on an object. It consists of a conductor attached to a very thin leaf of gold. When a charged object is brought to the electroscope, the charge moves along the conductor and leaf, causing them to repel each other. If the leaf deflects it means that there is a charge on the electroscope and therefore on the object being measured. If the leaf does not deflect, it means that there is no charge present.

Materials

Clear jar with a plastic cap, iron nail, small piece of aluminium foil, glue

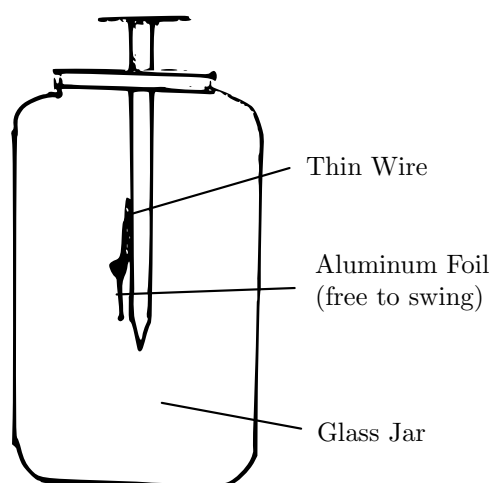


Figure 2.1: Aluminium foil electroscope

Preparation Procedure

1. Use the iron nail to make a hole in the plastic cap.
2. Insert the nail down into the hole so that only about 1 cm is sticking up above the cap.
3. Use glue to secure the nail in the cap.
4. Cut a piece of aluminium foil 0.5 cm by 2 cm.
5. Attach one end of the foil (only the tip) to the iron nail with glue about 2 cm from the bottom of the nail.
6. Bend the foil at its pivot (where the glue is) so make sure that it can swing easily. If it cannot, wrap the end of the foil around a piece of thin wire and glue the wire to the nail so that the foil is free to swing close to the nail.
7. Close the cap with the nail and foil on the jar.

Activity Procedure

1. Bring a charged object near the top of the nail.
2. Observe any deflection on the foil leaf.

Results and Conclusions

When a charged object is brought close to the nail, the foil leaf deflects from the nail. This is because the charged object repels one type of charge in the nail and attracts the opposite charge. This causes one type of charge to move down the nail into the bottom of the nail and into the leaf. The charges in the leaf and nail repel each other, so the leaf deflects away from the nail.

Clean Up Procedure

Return all materials to their proper places. Store the electroscope for later use.

Discussion Questions

1. Why is it necessary to use a metal nail instead of plastic or wood?
2. Why do we close the leaf in the jar?
3. What does the foil leaf do when a charged object is brought near the nail head?

Notes

A gold-leaf electroscope works as described above. Gold is used because it can be made very thin, so it has a very small weight and can deflect easily. Aluminium is not as thin so it cannot deflect as much, but it still shows the presence of charge.

2.1.5 Detection of Charges

Learning Objectives

- To determine the presence of charges
- To demonstrate the charging of the leaf electroscope

Background Information

Charges form the basis of our understanding of static and current electricity. They are simply electrons; the presence of electrons increases the negative charge on an object, the absence of electrons decreases the negative charge on an object, and it is electrons which move through a conductor to create electric current. However, electrons are too small to see, even with a microscope. Therefore, we can only detect the presence of charges, not the charges themselves.

Materials

Glass and silk or plastic pen and hair, leaf electroscope (see above activity to construct this)

Preparation Procedure

Collect the necessary materials.

Activity Procedure

1. Take glass and rub it with the silk or take the plastic pen and rub it in your hair, then quickly bring it close to the nail of the electroscope.
2. While the glass is still touching the metal cap observe the deflection of the foil in the electroscope (is there attraction or repulsion with the metal nail?).
3. Record the results from your observation and determine if charge is present.
4. Repeat these steps using notebook paper or any other objects you can find.
5. Compare results from different materials.

Results and Conclusions

By touching the charged body to the top of the metal cap, charges are transferred to the leaf of the electroscope. Because both are equally charged the leaf and conductor will repel each other showing the presence of charge whether negative or positive. The amount of deflection is dependent on the amount of charge on the electroscope. An object with greater charge will cause the leaf to deflect more than an object with less charge.

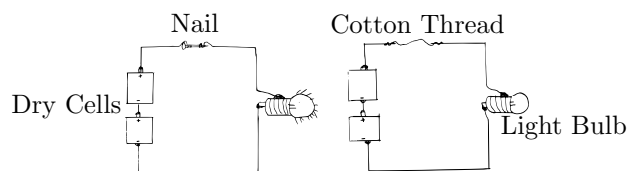


Figure 2.2: Testing the Conductivity of Different Materials

Clean Up Procedure

Store items for later use.

Discussion Question

From your experimental results, how can you know if there is charge on the object touching the electro-scope?

2.2 Current Electricity

2.2.1 Conductors and Insulators

Learning Objectives

- To distinguish between conductors and insulators

Materials

A nail, small piece of a bucket lid, aluminium foil from an empty cigarette packet, cotton thread, connecting wires, two dry cell, light bulb

Activity Procedure

1. Connect a bulb, dry cell, and a nail in a series using the connecting wire. Observe the effects.
2. Replace the nail with aluminium foil, a cotton thread, and a small piece of a bucket cap, one after the other. Observe the effects.

Results and Conclusions

The bulb lights when it is connected with a nail and aluminium foil, indicating that there is a flow of current. The bulb does not light when it is connected with a cotton thread and a small piece of a bucket lid, indicating that a current does not flow. A nail and aluminium foil are conductors of electricity while a piece of a cotton thread and a piece of bucket cap are insulators — they do not conduct electricity.

Clean Up Procedure

Collect all the used materials, cleaning and storing items that will be used later.

Discussion Questions

1. What is a conductor?
2. Give four examples of (a) conductors (b) insulators.

Notes

Metals like copper, aluminium, iron are used for connecting electric current. When electrons flow through the metal they reach the bulb and so it lights up. Such metals are called Conductors. On the other hand, plastics, wood, cotton threads are not used because electrons are not free flow through them so the bulb will not light. Such materials are called insulators.

2.2.2 Finding Electric Circuit Components

Learning Objectives

- To identify various components used in electric circuits
- To find circuit components locally

Background Information

All of the electrical components studied in secondary school are common devices. These include resistors, capacitors, wires, motors, rheostats, switches, diodes, transistors, transformers, speakers, inductors, bulbs, etc. These components are common enough that they can be found in varying numbers and combinations in any electrical device.

Materials

Broken radio, broken car stereo, broken computer, broken phone charger, broken disc drive, etc., pliers, screw driver, soldering iron (*optional*)

Hazards and Safety

- If you are using a soldering iron, be careful not to touch it or touch someone else with it. It can very quickly cause second degree burns.
- After breaking and removing components, dispose of any sharp pieces.
- NEVER open a component which is connected to an electrical source!

Preparation Procedure

1. Ask people to bring any broken electrical devices.
2. Go to a radio repair shop in town to find any broken or old components.

Activity Procedure

1. Open any electrical device.
2. Identify all of the components visible inside the device.
3. Remove as many components as possible from the devices and place them in a container. Pliers can be used to retrieve most things, but sometimes a soldering iron will be necessary to melt the flux holding some components into their boards.

Results and Conclusions

Circuit components can be found almost anywhere and can be used to perform many activities.

Clean Up Procedure

1. Collect all useful components in a container and store for later use.
2. Dispose of any unused pieces.

Discussion Questions

1. What components were you able to retrieve, and from what devices?
2. What components were you not able to retrieve, and where might you find them?

Notes

This should be an ongoing activity for any school. Circuit components are always needed as they are easily destroyed in the laboratory. Keep looking for more things to take apart.

2.2.3 Creating a Light Bulb

Learning Objectives

- To observe the luminosity effect of current in a thin wire
- To understand the mode of action of a light bulb

Background Information

When electricity pass through a wire, resistance converts electrical energy into heat energy. This heat energy causes an increase in the temperature of the wire. If the wire gets hot enough, it will release energy as radiation visible light, red at lower temperatures to yellow to white at very hot temperatures. The effect, however, causes the wire to degrade and eventually the wire is not strong enough to pass current. When a lot of electrical energy is converted into light energy, the effect is that of a light bulb, which consists of a single, thin wire in a glass bulb.

Materials

Glass jar with lid, glue, wires, power source, small length of thin iron wire, nail

Preparation Procedure

1. Use the nail to poke two holes in the jar lid.
2. Pass a wire through each hole about half way into the jar.
3. Connect the wires inside the jar with the length of iron wire.
4. Seal the wires into the lid with glue.
5. Close the lid on the jar.

Activity Procedure

1. Connect the wires outside the jar to the power source.
2. Observe the effect inside the jar.

Results and Conclusions

If enough current is passing, the iron wire will light up, creating a light bulb for a short time until the wire burns out.

Cleanup Procedure

Disconnect all wires and return all materials to their proper places.

Discussion Questions

1. Why does the wire produce light?
2. Why do bulbs eventually stop working?
3. Mention some other materials which produce light when heated.

Notes

You may need to try different types of wire for the bulb. If iron wire is not available or does not work, try other types. It should be very thin and have high resistance in order to work.

2.2.4 Measuring Emf of a Cell

Learning Objectives

- To identify the terminals of a cell
- To use a voltmeter or multimeter in parallel
- To measure the electromotive force of a single cell or battery

Background Information

Electromotive force (Emf) — also called voltage or potential difference — is the force from a cell or battery to move electric current through a circuit. A voltmeter reads the difference in voltage between two points in a circuit. If the difference in voltage is measured across a cell, the amount of voltage used in the entire circuit, from the positive terminal of the cell to the negative terminal, is being measured. This is the same as measuring the amount of voltage supplied by a cell, or the Emf.

Materials

Working dry cells, speaker wire / connecting wire, multimeter or voltmeter

Activity Procedure

1. Set the multimeter to the DCV (direct current voltage) setting.
2. Connect the terminals of the multimeter to the terminals of the battery so that the multimeter displays a voltage level.
3. Adjust the voltage magnitude on the multimeter until the voltage displayed is a clear, readable value.
4. Connect two batteries in series and measure the total Emf.
5. Connect two batteries in parallel and measure the total Emf.

Results and Conclusions

If a new battery is being used, the voltmeter should display the full Emf of a cell, which is 1.5 V. If an older battery is being used, the Emf may show a slightly lower value. Students will see that the voltage (Emf) measured across a single cell shows all of the force of the cell without losing any through resistors. Also, the Emf of batteries in series is more than that of batteries in parallel.

Clean Up Procedure

1. Turn off the multimeter.
2. Collect all the used materials, storing items that will be used later.

Discussion Questions

1. What causes the force of the cell?
2. What is moving through the circuit?
3. Why is a voltmeter connected in parallel across a cell in order to measure Emf?
4. What is the difference between the Emf of batteries in series and parallel?
5. How would you calculate the Emf of batteries in series? In parallel?

Notes

Electromotive force (Emf) is a kind of voltage. The other kind of voltage is Potential Difference and is used to measure the voltage difference across a resistor. Emf is always the same for a battery; it does not depend on the circuit it is connected to. Connecting batteries in series simply adds the forces of all the batteries together. Connecting batteries in parallel provides the same voltage as the battery with the largest voltage.

2.3 Magnetism

2.3.1 Magnetic and Non-magnetic Materials

Learning Objectives

- To identify magnetic and non-magnetic materials
- To observe the effect of a magnet on magnetic and non-magnetic materials

Background Information

The only naturally occurring magnet is Lodestone, which is a kind of mineral. However, we tend to use iron to make magnets as it is easily magnetized and very strong. Magnets can have a very strong attractive or repulsive force, but the force only acts on some materials.

Materials

Magnet*, various objects in the classroom or home like iron nails, plastic, wood, cloth, metal, etc.

Activity Procedure

1. Bring the magnet close to an object.
2. Observe if the object moves or if it is difficult to remove the magnet.
3. Repeat this for any object you or the students can find in the classroom.
4. Keep a list of what is attracted by the magnet and what is not.

Results and Conclusions

Many metals are attracted to magnets. Most other materials are not attracted to magnets.

Discussion Questions

1. What objects were attracted to the magnet?
2. In general, what materials are attracted to magnets?
3. What objects were not attracted to the magnet?
4. In general, what materials are not attracted to magnets?

Notes

Note that some common metals (e.g. copper and aluminium) are not attracted to magnets. Also note that some rare non-metals (e.g. liquid oxygen) are attracted to magnets. Of the elements students learn about in ordinary level, iron makes the strongest magnets.

2.3.2 Suspended Magnet Compass

- Preparation Time: 1 minute
- Materials: thread, bar magnet, Optional: second magnet
- Procedure: Tie the thread around the bar magnets center so that it hangs horizontally and is free to spin. Allow it to settle and you will see that it points north and south. Turn it away and allow it to settle again. Rotate your hand and the magnet will stay facing north and south. If you have a second magnet, pass it by the suspended magnet and watch the suspended magnet try to face the other magnet. Take the magnet away and the suspended magnet will return to its original direction.
- Theory: A magnet will naturally align itself with the Earths magnetic field. Usually there is too much friction for this to happen, but a suspended magnet is free to face North and South. Even if you try to confuse it by turning it or by bringing another magnet close, it will eventually align itself with the earths field.

2.3.3 Magnetizing a Nail

- Preparation Time: 1 minute
- Materials: nail, insulated wire (speaker wire), 2 or more D-cell batteries
- Procedure: coil the middle of the wire around the nail to create a solenoid. Connect the two ends of the wire to the battery. The nail and connectors will become hot and the nail will become magnetized. You can use it to pick up staples, paper clips, etc.
- Theory: The moving electric charge in the wire solenoid creates a magnetic field in the nail (use the RHR), aligning the domains in north-south. The stronger the current is, the stronger the magnetic field and therefore the stronger the magnet. If you use another material, you will find that the magnet is not as strong as the iron nail.

2.3.4 Magnetic Fields

Learning Objectives

- To map magnetic field lines of a given magnet using iron filings
- To explain the shape and direction of magnetic fields on a magnet or between magnets

Background Information

Magnetic fields are invisible lines of force that run between the poles of a magnet (from North to South) or between the poles of multiple magnets. We cannot see these lines, but we can feel them when we bring magnets close to each other.

Materials

Steel wool, magnets*

Preparation Procedure

1. Place a sheet of paper on the table
2. Take the steel wool and rub it over the sheet of paper. Small pieces (filings) of the steel wool will fall to the paper.

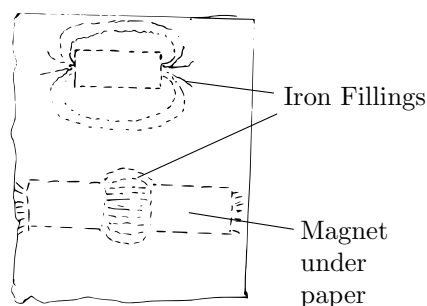


Figure 2.3: Observing Magnetic Field Lines

Activity Procedure

1. Place a magnet on the table.
2. Place a piece of paper over the magnet so that the paper is flat
3. Slowly and gently drop the iron filings on the paper. Spread them evenly.
4. Observe the positions of the filings and the shape they create.
5. If another magnet is present, place it near the other magnet under the paper.
6. Drop more filings on the paper to observe the shape of the field between the two magnets.
7. Repeat this process for the two magnets in various positions: repelling, attracting, etc.

Results and Conclusions

The iron filings are magnetic and light-weight, so they will move to follow the magnetic lines of force on a magnet. The filings will clearly show the curved lines around the magnet from one pole to the other. If the magnet is strong enough, the filings will show the three-dimensional field. Between magnets, the filings will show a strong concentration of force between opposite poles and a neutral point between like poles.

Clean Up Procedure

1. Store iron filings inside a *dry* bottle after using them
2. Return the magnets to a safe storage place.

Discussion Questions

1. Describe the shape of the magnetic field lines
2. Where is the magnetic force strongest? Where is it weakest?

Notes

You can visit any garage in town where there is a welder or metal saw and collect iron dust and use them as iron filings.

2.3.5 Creating a Simple Compass

Learning Objectives

- To construct a compass and understand its mode of action
- To observe the presence of Earth's magnetic field

Background Information

The earth is a magnet. Its magnetic field lines extend from its North pole (near the geographic South pole) to its South pole (near the geographic North pole). However, we cannot see these lines as they are simply lines of force. Any magnet feels the force of the earth's magnetic field and tries to turn to face North. If a light-weight magnet is allowed to rotate freely, it will turn, thus showing the direction of North and South.

Materials

Needle or pin, magnet, small plastic lid, water, small piece of paper, and a small plastic lid.

Preparation Procedure

1. Collect the needle or pin. If it has a heavy end, break it so that it is uniform.
2. If needed get the bar magnet from a broken radio or speaker from the radio repair shop.

Activity Procedure

1. Rub one side of the needle or pin on a bar magnet in one direction several times, do not scratch it.
2. Pour some water into the can cap.
3. Stitch the magnetized pin or needle into the piece of paper and place them on the surface of the water, let it rest. Observe it.
4. Give a slight push to the piece of paper so that it rotates slowly. Observe it.

Results and Conclusions

A magnetized pin or needle always comes to rest in the North-South direction. This implies that the needle is pointing in the direction of earth's magnetic field towards the geographical north pole.

Clean Up Procedure

Return all materials to their proper places and put the magnet in a safe place.

Discussion Question

Which direction does the magnetized pin always point? Why?

Notes

When magnetizing the pin or needle make sure you rub it only in one direction. Do not rub back and forth.

2.3.6 Magnetic Dip Gauge

Learning Objectives

- To observe the presence of magnetic dip
- To measure magnetic dip

Background

The earth's magnetic field extends from near the geographic south pole to the near geographic north pole. However, its lines of force pass through the surface of the earth because the lines are not perfect circles around the earth. Where the field passes through the surface of the earth, it has a certain angle which we call the magnetic dip, or the angle of the field lines relative to the earth's surface.

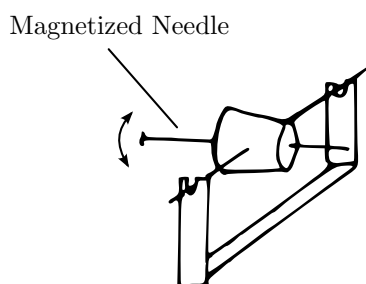


Figure 2.4: Magnetic Dip Gauge

Materials

magnet, sewing needle, cork or foam, two pins, paper, pen, cardboard or metal strip

Preparation Procedure

1. Push the two pins into the ends of the cork to create an axle.
2. Push the sewing needle through the cork perpendicular to the axle pins so that the needle rolls end-over-end when you roll the cork/pins between your fingers.
3. Adjust the needle so that it rests horizontally when the cork is free to pivot (equilibrium).
4. Use the magnet to magnetize the needle without changing its position in the cork. You can do this by stroking the needle in one direction on the magnet.
5. Bend the metal or cardboard strip into a U-shape to create a stand for the cork and pins.
6. Rest the pins on each vertical side of the U-stand so that the needle is free to rotate vertically.
7. Cut out a semicircular piece of paper and label the angles 0 to 90 degrees on it; tape or glue this to the stand.

Activity Procedure

1. Set up the magnetic dip gauge so that the needle is free to rotate vertically.
2. Measure the angle of the needle relative to the ground.

Results and Conclusions

Before magnetizing the needle, it will be able to balance horizontally in equilibrium. However, when the needle is magnetized, it will dip down to show the direction of the earth's field. Like a compass, the needle naturally moves to show the direction of the earth's magnetic field.

Cleanup Procedure

Return all materials to their proper places and put the magnet in a safe place.

Discussion Questions

1. What is the direction of the needle?
2. Why does the needle not point horizontally, as it did before it was magnetized?
3. What is the angle between the needle and the ground?

Notes

The magnetic dip gauge works only when it is facing North and South. If it is facing East/West, the magnetic field will be moving perpendicular to the poles of the gauge, so it will not be able to show the correct direction. Also, you may need to turn the gauge around if it is not showing the dip; if the needle is magnetized opposite to the direction of the earth's field, it will fail to show the correct direction.

2.4 Forces in Equilibrium

2.4.1 Door Tug-o-War

- Preparation time: none
- Materials: a strong door
- Procedure: Get 2 students. One is going to push against the door near the hinge; one will push the other way near the other side (handle) of the door. The one pushing near the edge of the door will find it easy to push the door her way.
- Theory: The student that pushes farther from the axis of rotation can exert less force, but still produce a greater torque, or moment of force, than the one pushing close to the hinge, because.

2.4.2 Verification of the Principle of Moments

Learning Objectives

- To determine the moment of forces of a uniform wooden bar

Background Information

The body will be in equilibrium when the clockwise moments equal the anticlockwise moments. The turning forces depend on the product of the distance from the pivot to the point of application of the force and the magnitude of the perpendicular forces acting on the mass.

Materials

Metre rule, three dry cells or any two objects of equal weight, thread, triangular wooden block or any object that will create a pivot point.

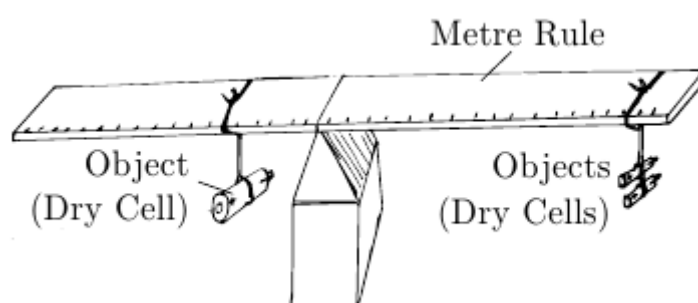


Figure 2.5: Equilibrium of Moments

Activity Procedure

1. Balance the metre rule on the pivot point so that it remains horizontal.
2. Place two equal weights 20 cm from the pivot on the right and left sides of the pivot so that the ruler remains balanced.
3. Now move the right weight 5 cm further away from the pivot point and observe what happens.

4. Return that weight to the 20 cm mark and the system back to equilibrium. Now move the same weight 5 cm closer to the pivot point and observe what happens.
5. Now balance the metre rule itself on the pivot and place one weight at the 20 cm on the left side of the pivot and the two other weights at the 10 cm mark on the opposite side of the pivot. The metre rule should remain balanced.

Results and Conclusions

When the system is in equilibrium the product of the distance to the pivot point and the weight on opposite sides of the pivot are equal.

Clean Up Procedure

Put the instruments back in their respective places.

Discussion Question

Explain the relation between the masses and distance from the pivot when the metre rule is at equilibrium.

Notes

The wooden bar or metre rule should be uniform in order to simplify this experiment. Many objects and tools operate by the principle of moments. For a turning force to be more effective, the distance of the force from the pivot should be large. A force close to the pivot will have a smaller effect. This explains why the handle of a door is far from the hinge, or why a bottle opener has a long handle.

2.4.3 Centre of Gravity

Learning Objectives

- To determine the centre of gravity of uniform wooden rod

Background Information

The weight of object is concentrate at single point. This point is called the centre of gravity. For a uniform rod, the centre of gravity is normally at the centre of the rod. Finding the center of gravity is something used often in daily life – especially when balancing a bucket or large stick on the head.

Materials

Uniform wooden rod about 1 m long, triangular blocks, ruler, wooden block

Activity Procedure

1. Place the wooden block on the table.
2. Place the triangular block on the table so that the sharp edge is pointing upward.
3. Slowly place the wooden rod on top of sharp edge of the triangle block and move it until it balances horizontally.
4. Mark this balancing point on the wooden rod and measure its distance from both ends.

Results and Conclusions

The wooden bar balances near the middle. The balance point is known as the centre of gravity.

Clean Up Procedure

Collect all materials and return them to their proper places.

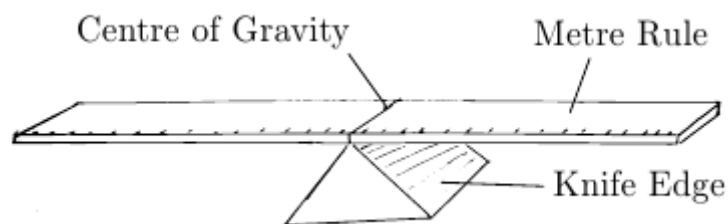


Figure 2.6: Finding the Centre of Gravity

Discussion Questions

1. Was the centre of gravity at the centre of the wooden rod? How do you know?
2. Discuss another method to locate the centre of gravity of a uniform rod.

2.5 Simple Machines

2.5.1 Pulley

Learning Objectives

- To determine the mechanical advantage, velocity ratio and efficiency of a pulley system

Background Information

A pulley is a wheel which can be turned by a rope or string. You can have many pulleys in different configurations in order to reduce the effort needed to do work. The mechanical advantage of a pulley is calculated by dividing the load by the effort needed to lift the load.

$$\text{mechanical advantage} = \frac{\text{load}}{\text{effort}}$$

The velocity ratio of a pulley is calculated by dividing the distance moved by the effort by the distance moved by the load. This is also equal to the number of pulleys in the system. The efficiency of the pulley and all other simple machines is equal to the mechanical advantage divided by the velocity ratio.

Materials

Piece of cardboard from a box, thread, stones, spring balance (see the “Spring Balance” activity in order to make one), two empty water bottles, retort stand or piece of wood

Preparation Procedure

1. Cut off the tops of the water bottles just below the lip where the cap rests.
2. Cut the piece of cardboard into two equal size pieces. They should be at least 5 cm squares.
3. In the middle of each piece of cardboard, cut a hole just big enough for the water bottle tops to fit through.
4. Thread the water bottle tops into the holes so that they are secure.
5. Make a small hole near the edge of each piece of cardboard.
6. Fix one of the cardboard pieces vertically on a retort stand or up high on a piece of wood.
7. Tie a piece of thread to the hole in the cardboard on the retort stand.
8. Fix a stone or other weight to the other cardboard piece and measure its weight, or measure its mass and convert this to weight.

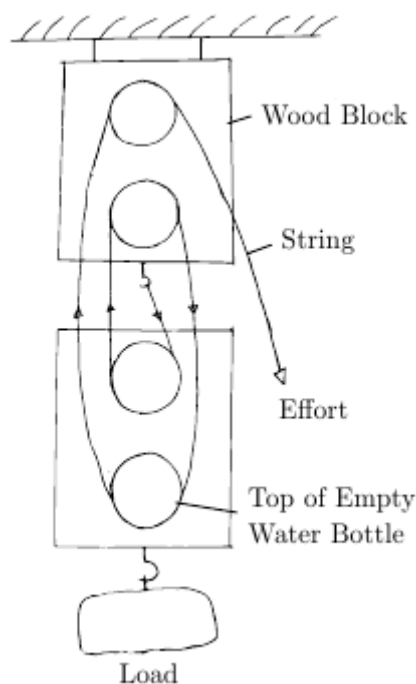


Figure 2.7: Simple Machines: The Pulley

9. Use the thread to suspend one of the cardboard pieces from the piece on the retort stand. Pass the thread over the rails of the water bottle tops so that it can roll over the thread like a pulley. Extend the thread back up to the top of the retort stand and wrap it over the top of the water bottle top.
10. Place a metre rule on the retort stand.
11. Attach the free end of the thread to a spring balance which can be pulled down to lift the load on the pulley at the bottom. You now have a pulley system consisting of one fixed pulley and one move-able pulley.

Activity Procedure

1. Pull the spring balance down a certain distance and record the distance moved by the load (the lower pulley with the stone) and the effort (the spring balance).
2. Use these distances to calculate the velocity ratio of the pulley system.
3. Record the force used on the spring balance to lift the load.
4. Use this force and the weight of the load to calculate the mechanical advantage of the pulley system.
5. Use your calculated values of velocity ratio and mechanical advantage to calculate the efficiency of the pulley system.

Results and Conclusions

The velocity ratio calculated by measuring the lengths is equal to the number of pulleys in the system, in this case two. When this number is divided from the mechanical advantage, the efficiency of the system should be close to 100% (the ratio is 1). It will not be exactly 100% because there is friction in the system which reduces the mechanical advantage.

Discussion Questions

1. What is the relationship between the distance moved by the load and the distance moved by the effort for this pulley system?
2. Compare the velocity ratio of this system to the number of pulleys present.
3. What would be the velocity ratio of a pulley system with 5 pulleys?
4. What was the mechanical advantage of this system?
5. What was the efficiency for this system?
6. Why is the efficiency not exactly 100%?

Notes

The efficiency of this pulley will not be 100% because of friction. Try to use other resources to make a better pulley in order to reduce the effect of friction.

2.5.2 Pulleys and Inclined Planes

- Preparation Time: 15 minutes
- Materials: thread spool or water bottle, cardboard, thread: meter rule, spring or spring balance, various masses, stiff wire
- Procedure Pulleys: A thread spool works well as a pulley, but you can also cut out the ridged section of a water bottle and insert a circle of cardboard into the center as a support. Bend the stiff wire through the hole of the pulley so it can rotate easily without sliding off. Tie the masses to the thread and drape it over the pulley. You can make any fixed or moveable pulley with these resources.
- Procedure Inclined Planes: Prop up a meter rule at an angle. Hang a mass from a spring or spring balance and drag it up the slope. Measure the extension of the spring (or weight) for the mass when it hangs freely, and again as it moves up the slope. If friction is low, there will be a noticeable decrease in spring extension from the free-hanging mass to the mass on the slope.

2.5.3 Bottle Cap Gearworks

- Preparation Time: 30 minutes
- Materials: handful of bottle caps, pliers, nails, small piece of flat wood, hammer
- Procedure: Find the exact center of each bottle cap and poke a hole through it for the nail. Bend the edges of the bottle caps in so that the ridges along the sides will act as gear teeth when the cap rotates. Nail the caps into the wood at even intervals so that they can freely rotate and in turn cause others to rotate. Make different configurations and note the direction of rotation from one gear to another.

2.6 Motion in a Straight Line

2.6.1 Object Toss

- Preparation time: none
- Materials: Any object(s)
- Procedure: When teaching projectile motion, it is productive to throw objects in the classroom. This is useful, and extremely simple. Almost any object may be used. In the past, I have used the keys from my pocket, lemons from the lemon tree next to our classroom, small pieces of chalk, and my coffee cup.
One good demonstration consists of repeatedly throwing an object vertically up in the air and

then catching it when it returns to your hand. Point out that when you first throw it up, it has an upward velocity. As it moves up, the velocity becomes less. At the top of its trajectory, it momentarily has a zero velocity. After that, it gains a downward velocity, at first a small one and then increasing in magnitude.

If you are walking across the classroom at a constant rate while performing this demonstration, you can additionally show that the projectile continues to move horizontally at the same rate, matching your motion. This shows that the horizontal velocity of a projectile is a constant.

2.6.2 Simple Oscillator

- Preparation time: 1 minute
- Materials: Spring, thread or piece of rubber strip, several weights
- Procedure: Attach the spring or rubber strip to your weight. The weight could be anything: a laboratory weight, a set of keys, or a small padlock. Start the weight oscillating, while explaining to the students how simple harmonic motion works. Add more weight (more keys, another padlock) and observe that there is no change to the period. Now increase or decrease the length of the pendulum and observe any changes to the period. You can tabulate the results for different masses and lengths (keeping one thing constant each time) so that students can see experimentally the dependence of period on length or mass.
- Theory: The period of a pendulum depends on the length of the pendulum (neglecting air resistance), so no change should be noticed if the mass is changed.

2.7 Newton's Laws of Motion

2.7.1 Verification of Newton's First Law of Motion

Learning Objectives

- To explain the concept of inertia
- To Verify Newton's first law of motion

Background Information

An object will tend to resist changes to its motion. This is called inertia and is explained by Newton's first law of motion. This law states that "an object at rest will tend to stay at rest unless acted upon by an external force. An object in motion will continue in that motion unless acted upon by an external force." In short, this means that an object will continue doing what it is doing. The concept of inertia explains the reason why passengers move forward when the driver applies brakes, or fall back when the car starts moving suddenly.

Materials

Empty soda bottle, small manila sheet OR card, knife, coin

Preparation Procedure

Cut a small piece of card from the manila sheet.

Activity Procedure

1. Place the bottle on top of the table.
2. Cover the mouth of the bottle with the card.
3. Put a coin on top of the card on the rim of the bottle.
4. Flick or quickly pull the piece of manila sheet horizontally off of the bottle.

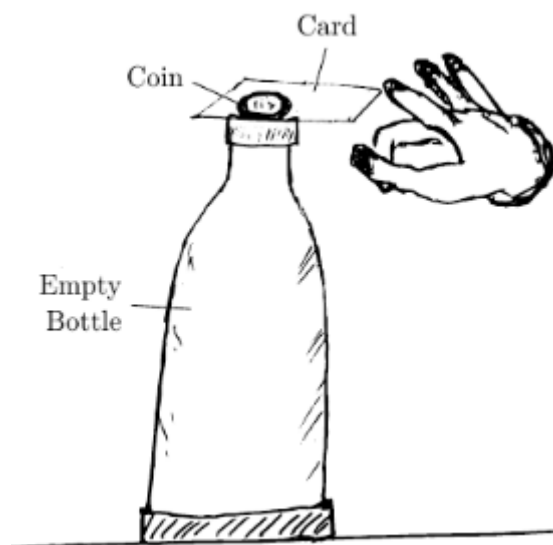


Figure 2.8: Demonstration of Newton's First Law

Results and Conclusions

As you flick the piece of card quickly the card flies away and the coin remains in the same position (on top of the bottle rim). The coin remains at the same point due to its tendency to maintain its position. This property of resisting change to motion is called inertia.

Clean Up Procedure

Return the materials to their proper places.

Discussion Questions

1. Discuss your daily experience with the concept of inertia.
2. Design another way to demonstrate the concept of inertia.
3. Explain why Newton's first law is known as the "Law of Inertia."

2.7.2 Inertia and Newton's First Law of Motion

Learning Objectives

- To understand the concept of inertia
- To demonstrate Newton's First Law (the Law of Inertia)

Background Information

Newton's first law, also called the Law of Inertia, states that "an object in motion will continue in that motion, and an object at rest will remain at rest unless acted upon by an external force". This simply means that an object will continue doing what it is doing and will resist any changes. The inside of a fresh egg is liquid while the inside of a boiled egg is solid. Therefore, if you change the motion of the shell of a fresh egg, the liquid inside will resist the change and continue with whatever motion it had. If you change the motion of a boiled egg shell, the inside of the egg will follow the same motion as the shell.

Materials

1 fresh egg and 1 boiled egg

Activity Procedure

1. Place both eggs on the table and note that it is impossible to tell which egg is fresh and which egg is boiled.
2. Spin the first egg.
3. While the egg is spinning, stop it briefly with your hand and then release the egg. Record any observations.
4. Spin the second egg.
5. While the egg is spinning, stop it briefly with your hand and then release the egg. Record any observations.

Results and Conclusions

The fresh egg, which is liquid inside, will continue spinning even after its rotation is stopped briefly by your hand. The boiled egg, which is solid inside, will stop spinning after its rotation is stopped briefly by your hand. The fresh egg continues spinning because the liquid inside continues to spin and causes the shell to move with it. However, the boiled egg stops spinning because the solid inside has stopped moving and thus will remain stationary.

Discussion Questions

1. Which egg is fresh and which egg is boiled?
2. Why does the boiled egg stop completely when your hand releases it while the fresh egg continues spinning?
3. Explain the motion of the eggs in terms of inertia.

2.7.3 Tin Can Piata

- Preparation Time: 5 minutes
- Materials: Two cans or buckets, sand, string or rope, stick
- Procedure: Hang the two cans/buckets from the stick with the string so that they hang at equal lengths. Pour a small amount of sand in one can and a large amount in the other. Support the stick between two desks and start the cans swinging. Have students stop each can, feeling the difference in the force it takes to stop the almost empty can as opposed to the full can.
- Theory: Inertia, or momentum, of an object is directly proportional to its mass. The full can, therefore, has more inertia and will tend to continue its motion more than the empty can. You can also offer to throw a piece of chalk or a desk to a student. They usually choose the chalk.

2.7.4 Conservation of Linear Momentum

Learning Objectives

- To demonstrate the principle of conservation of linear momentum

Background Information

Everything has momentum which depends on its mass and velocity.

$$\text{momentum} = \text{mass} \times \text{velocity}$$

The momentum of an individual body can change as its velocity or mass changes. However, if two objects collide, the total momentum of the objects is conserved. This means that the total momentum of the objects before the collision is equal to their total momentum after the collision.

Materials

Toy car with motor, plane surface or smooth table, metre rule or tape measure, beam balance*, different sized stones, and stop watch

Preparation Procedure

1. Measure the masses of different stones on the beam balance.
2. Measure the mass of the toy car.
3. Measure a distance of 2 m on the plane surface or table.
4. Make a mark at 0 m and place an obstacle at 2 m.

Activity Procedure

1. Place the toy car at the 0 m mark on the table.
2. Release the car and start your stop watch.
3. Record the time it takes for the car to move from the 0 m mark to the obstacle at the 2 m mark.
4. Use this time and distance to calculate the average velocity of the car.
5. Place a stone on top of the toy car (use tape or string if necessary in order to secure it).
6. Measure the new mass of the car with the stone on top.
7. Start the car and release it on the table at the 0 m mark.
8. Again, measure the time it takes for the car to reach the obstacle at the 2 m mark.
9. Calculate the average velocity of the car and stone.
10. Repeat these steps for various stones, measuring the masses and average velocities for each case.
11. For each case, calculate the momentum of the car and stone.
12. Record your results in a table. Fill in values for mass, time, velocity and momentum.
13. Compare the values for momentum.

Results and Conclusions

The momentum for each experiment is almost the same. As the mass increases, the velocity decreases. However, the product of the two remains the same. However, the momentum decreases slightly more than expected with increased mass because friction on the axles of the car is also increased. When two bodies, one heavy and one light, are acted upon by the same force for the same amount of time, the lighter object's velocity increases more than that of the heavy object. However, the momentum that each gains is the same.

Clean Up Procedure

Return all materials to their proper places.

Discussion Questions

1. What factors affect the momentum of the car?
2. When the mass of the car is increased by adding stones, what happens to the average velocity?
3. What do you observe when comparing the values for momentum?

Notes

Conservation of momentum is only true in a frictionless environment. However, the effects can be seen clearly even if friction is present. The toy car has friction between its wheels and axles, so adding mass to the car will increase the effect of friction. However, it will still be seen that the momentum is relatively equal for each mass.

2.7.5 Balloon Rocket

- Preparation Time: 0 minutes easy: 15 minutes advanced
- Materials: easy: balloon; advanced: also 2 m (or longer) string, nails, paper, tape, 1 large rubber band, paper clip
- Procedure:
 - Easy Inflate the balloon by blowing into it. When it is big, release the balloon. It will fly around the room.
 - Advanced Cut paper into a strip about 5 cm by 10 cm. Roll the paper strip into a cylinder 5cm long, with a small diameter, maybe 0.5 cm. Tape the cylinder so it stays, and attach the rubber band with tape. Put the string through the cylinder. Attach the ends of the string to nails in the ceiling, or perhaps stretched between 2 retort stands (or even have students holding the ends) so that the string is horizontal. Put the paper clip on the string. Inflate the balloon and then use the rubber band to hold the big part to the paper, and attach the mouth of the balloon to the paper clip. Release the balloon and it will shoot across the string. This demonstrates the same principles as the easy version above, but because the balloon goes in a straight line, it is somewhat easier to see.
- Theory: The balloon pushes the air out, so there is an equal and opposite force of the air pushing the balloon. Momentum is conserved; as the air goes backwards, the balloon goes forwards.

2.7.6 Bottle Rocket

Learning Objectives

- To observe the effect of Newton's Third Law of Motion

Background Information

Newton's Third Law tells us that, for every action, there is an equal and opposite reaction. This means that if you apply a force to something, it applies an equal force back on you. Rockets make use of this principle by ejecting gas at high speeds out of one end so that they are forced in the opposite direction.

Materials

Empty 500 mL water bottle, nail, rubber stopper, straight pin, bicycle pump, needle attachment for pump (the type used to fill a football), tape, old pen, rigid straight wire (approx 1 meter), water

Preparation Procedure

1. Make a small round hole (between 0.5 and 1.0 cm in diameter) in the lid of the water bottle by heating a nail and using it to put a hole in the lid.
2. Cut a round piece of the rubber stopper so that it can be used to stop this hole.
3. Pierce the stopper with a straight pin so that you can pass the needle attachment for a bicycle pump through the stopper.
4. Insert the stopper into the hold in the bottle top. The stopper should form a good seal in this hole, and it should be possible to push the stopper through the hole by exerting force on it.
5. Insert the needle attachment through the stopper so that you can increase the pressure inside of the bottle.

6. Disassemble a pen and take the plastic case.
7. Cut the case in half so that you have two hollow cylindrical pieces approximately 3 cm long each.
8. Attach them to the side of the bottle using adhesive tape. They should be in a straight line with each other.

Activity Procedure

1. Insert the rigid straight wire into the ground outside.
2. Fill approximately half the bottle with water.
3. Push the stopper into the inside of the lid.
4. Put the needle attachment through the stopper.
5. Put the lid on the water bottle and tighten it so that air cannot escape.
6. Pass the rigid wire through the pen cylinders and lower the bottle to the ground.
7. Pump the bicycle pump until the stopper is pushed out completely.

Hazards and Safety

- This is a rocket and will take off quickly and travel far. Be sure that no one is standing in the way of the rocket, and launch it in a large, open space where no one and nothing can be hit by it.

Results and Conclusions

Once the pressure in the bottle becomes great enough, the stopper will be forced out of the bottle, and the rocket will fly into the air. It should be possible to reach a height of 10 meters or more. When the stopper leaves the bottle, pressurized air forces water out of the bottom of the bottle at a high speed. Just as with the matchstick rocket, this results in a reaction force forwards on the rocket. We can also consider this from the perspective of conservation of momentum.

Discussion Questions

1. What causes the rocket to launch?
2. Explain the two opposing forces present in this experiment.

Notes

All rockets use this principle; that rapidly expanding gases in one direction causes motion in the opposite direction. This combines Newton's third law and conservation of momentum. This activity takes practice. Test this several times before doing it with students.

2.7.7 Matchstick Rocket

Learning Objectives

- To explain the mode of action of a rocket
- To apply Newton's Third Law to the motion of a rocket
- To understand the application of Newton's Third Law to propulsion

Background Information

The motion of a rocket is due to the simple principle of reaction. Newton's third law explains that a force in one direction will be opposed by a force in the opposite direction. In other words, if an object pushes backwards against an obstacle, the obstacle will push forward on the object. When a match burns, the gases that are produced are very hot and expand rapidly. In order for the match to continue burning, the match pushes the gases backwards, and the gases need to escape.

Materials

Matches, aluminium foil, pin or syringe needle

Hazards and Safety

- When the rocket ignites, some foil and hot air may be expelled, so no one should be very close. When igniting it yourself, keep your face away from the rocket.

Preparation Procedure

If you are using a syringe needle instead of a pin, break the needle near the plastic base so that your needle is only the metal part.

Activity Procedure

1. Cut or rip a small piece of foil, about 2 cm x 3 cm. Make sure it is flat and does not contain any holes.
2. Hold the pin next to a match so that the tip of the pin touches the head of the match.
3. Hold the pin and match tightly together and wrap the foil around the head of the match (with the pin) so that about 1 cm of foil covers the match and pin, and about 1 cm extends beyond the tip of the match and pin. Wrap the foil tightly so that no openings can be seen around the shaft of the match and pin.
4. Fold the extra foil down over the match head tightly so that there are no openings.
5. Remove the pin by sliding it out of the bottom of the foil, leaving a thin tunnel.
6. Support the match rocket at a 45-degree angle on a stone or other object. Make sure that no one is standing in front of the rocket.
7. Light another match and hold it under the foil of the rocket to ignite the first match. It may take a few seconds to work.
8. Repeat all steps until you have a good rocket.

Results and Conclusions

The matchstick rocket moves forward quickly when the match-head ignites inside the foil. The match moves forward because the gases are moving backward; a force in one direction must be balanced by an equal force in the opposite direction.

Clean Up Procedure

Return the supplies to their proper places.

Discussion Questions

1. What causes the rocket to move forward?
2. Where do the gases from combustion of the match go when the rocket ignites?
3. What would happen if the exhaust hole left by the pin was facing another direction?
4. What would happen if you increase the amount of gas escaping from the match?
5. What would happen if you increase the weight of the match?

Notes

As a match ignites, the gases quickly expand. By removing the pin from the foil over the match head, you leave a small path for the gases to expand: they cannot go any other direction but backward. Newton's Third Law tells us that "For every action (or force) there is an equal and opposite reaction." The action in this case is the rapid movement of gases backward. The reaction produced is the movement of the matchstick forward.

Chapter 3

Physics Activities for Form III

3.1 Friction

3.1.1 Concept of Friction

Learning Objectives

- To describe the methods of reducing friction

Background Information

Friction is the force which opposes motion. When two bodies in contact are moving against each other, there is opposition to the motion. Friction between two surfaces depends on the nature of the surfaces in contact.

Materials

Lubricants*, rollers*, ball bearings, 50 cm wood board

Activity Procedure

1. Place the block of wood on the rollers.
2. Slide the block and observe how easily it moves.
3. Place the block of wood on the table without rollers and push it slightly.
4. Smear a lubricant on the table top, then place the block of wood on the table and push it slightly.

Results and Conclusions

The block of wood will be easier to push on the rollers and lubricated table because these things reduce friction.

Clean Up Procedure

Clean up the smeared surface with oil/grease.

Discussion Questions

1. Why does a car slide on the road during a heavy rainstorm?
2. Which surface do you think has more friction, a tile floor or a dirt floor? Why?

Notes

Friction causes noticeable effects; these effects can be reduced in class by using rollers, wheels and lubricants like oil and air.

3.1.2 Limiting Friction and the Coefficient of Static Friction

Learning Objectives

- To make use of an inclined plane to determine the limiting friction
- To observe the effect of static friction on a body
- To calculate the coefficient of static friction of a body on an inclined plane

Background Information

Friction opposes the motion of all bodies. As a body slides along a surface, the surface itself opposes the motion of the body, causing a force in the opposite direction of the body's motion. This type of friction is called Dynamic Friction and depends on the nature of the surfaces in contact.

Static friction, however, opposes the force on an object that is not moving. If you push an object gently, it will not move. In order to cause the object to move, you need to increase your force. The force which is opposing you is the static friction between the object and the surface it is resting on. Static friction is present until the object starts moving. At that point, the force of friction is called Limiting Friction: the minimum force needed to cause an object to move.

Materials

Two smooth wooden boards about 60 cm by 10 cm by 2 cm, wood block about 10 cm by 5 cm by 2 cm with one rough side and one smooth side, nails, hinge from a door or window, objects of different masses, thread, pulley, beam balance or spring balance (see the balance construction activities to make one yourself), protractor, plastic water bottle

Preparation Procedure

1. Connect the boards together at one end with a hinge and nails.
2. Find a pulley from a broken tape deck or other source.
3. Fix the pulley to the end of one of the boards (the end that is not attached to the hinge).
4. Prop up the board with the pulley to create an inclined plane.
5. Cut the bottom 5 cm off of the water bottle to create a scale pan.

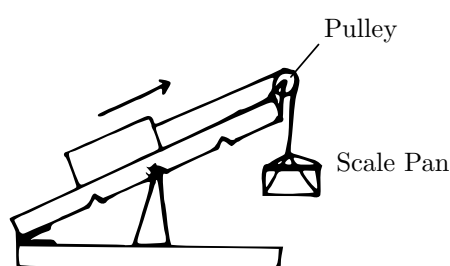


Figure 3.1: Determining the Limiting Friction

Activity Procedure

1. Use a balance to measure the mass of the wooden block. Record this value.
2. Use a protractor to measure the inclination of the inclined plane. Do this by measuring the angle between the two boards at the hinge.
3. Place the wood block on the inclined plane and attach one end of the thread to it.
4. Pass the thread over the pulley fixed to the top of the inclined plane so that it hangs vertically.

5. Attach the hanging thread to the plastic water bottle bottom (scale pan).
6. Add objects to the scale pan until the block begins to slide up the inclined plane.
7. Measure the mass in the scale pan and record this value.
8. Increase the angle of the inclined plane and repeat these steps, measuring the mass needed to move the block in each case.
9. Convert the masses from the scale pan to weight. These weights are equal to the limiting friction.
10. Use these values and the weight of the block to calculate the coefficient of static friction between the block and the inclined plane.

Results and Conclusions

The mass, and therefore weight, needed to move the block increases when the angle increases. The weight is the force on the block, or the Limiting Friction. The limiting friction is the minimum force necessary to move the block; this is measured using the weights in the scale pan.

The values for limiting friction can be used to calculate the coefficient of static friction. First we need the normal reaction on the block, which is the force perpendicular to the inclined plane. The normal reaction will be equal to the weight of the block times the cosine of the angle of the inclined plane.

We find the coefficient of static friction by dividing the limiting friction by the normal reaction.

$$\text{coefficient of static friction} = \frac{\text{limiting friction}}{\text{normal friction}}$$

Clean Up Procedure

Remove the masses and return all materials to their proper places.

Discussion Questions

1. What is the limiting friction in each case?
2. Does the limiting friction increase or decrease as the angle increases?

Notes

Limiting friction is used to find the coefficient of static friction. It is possible in this activity to calculate the coefficient of static friction if you first calculate the normal reaction, which will be equal to the weight of the wood block times the cosine of the angle of inclination of the inclined plane.

3.2 Light

3.2.1 Refraction of Light in Glass

Learning Objectives

- To demonstrate refraction of light

Background Information

Buckets and basins appear shallow due to refraction. When light passes from one medium to another it changes its direction. This is because the light moves slower in a medium of high density than in a medium of low density. Because the light is moving slower, distances seem shorter.

Materials

Glass block, pen/pencil

Hazards and Safety

- Hold the glass carefully if it is sharp.

Preparation Procedure

Collect a glass block from the laboratory equipment dealers.

Activity Procedure

1. Take a glass block and place it in-front of your eyes. One student should hold a pencil in front of the glass block about 25 - 30 cm away.
2. From above, move your hand straight and touch the pointer of the pencil.

Results and Conclusions

It is not easy to locate exactly the pointer of the pencil due to change of wavelength as light passes from one medium to another. Light slows down in the glass, so the distance to the pencil seems shorter than it actually is.

Clean Up Procedure

Return the glass block to its proper place.

Discussion Questions

1. Why it is difficult to locate exactly the position of the pencil when looking through the block?
2. What is happening to the speed of light as it enters the glass?

Notes

When light passes from one medium to another medium it undergoes refraction because its wavelength is changing.

3.2.2 Measuring Refractive Index of Glass

Learning Objectives

- To explain the refraction of a light ray from one medium to another
- To show the refraction of a ray of light at different angles
- To apply Snell's Law to find the refractive index of a medium by measuring incident and refracted angles
- To see the effect of refraction on an image

Background Information

Light bends as it moves from one medium to another. When moving from a medium of low density to one of high density, a ray of light will bend inward towards the normal; when moving out again from the medium of high density to the medium of low density, the light ray will bend outward away from the normal.

Refracted light obeys Snell's Law, which states that $n_1 \times \sin i = n_2 \times \sin r$ where n_1 is the refractive index of the first medium, i is the incident angle of the light, n_2 is the refractive index of the second medium and r is the refracted angle of the light in the second medium. Because we know the refractive index of air, and we can measure the angles of incidence and refraction with a protractor, we can calculate the refractive index of any material.

Materials

Protractor from a mathematical set, pen, 30 cm square piece of thick cardboard from a box, piece of white paper, four-figure or calculator, tape or glue, 4 pins or syringe needles, rectangular glass block at least 6 mm thick from a glass shop (the glass block does not need to be large: 8 cm \times 10 cm is easily enough). Often the glass block can be found for free, just make sure that the edges are even and that you can see through the block by looking through the edges.

Hazards and Safety

- Be careful when using the glass. If you are using a local glass block from a glass cutter, the edges may be sharp enough to cut skin.
- If using syringe needles, use pliers or a hammer to bend the end of the needles so that they may not be used for any other purpose.

Preparation Procedure

1. Collect all of the materials on a table.
2. Tape or glue the white paper to the cardboard and cut the paper so that it is the same size as the cardboard.

Activity Procedure

1. Place the cardboard flat on the table with the paper-side up.
2. Place the glass block in the center of the paper and trace it with a pen.
3. Remove the block from the paper; you should see its outline clearly from the pen.
4. Use a protractor to draw a line perpendicular (90°) near the center of one of the long sides of the glass block outline.
5. Extend this line through both sides of the glass block so that on the paper you should have a picture of a rectangle with a line through its center.
6. Where the line intersects one of the long sides of the rectangle, make a mark and label it O .
7. From the point O , draw a line outward at an angle of 10 degrees to the normal. Use a protractor to do this.
8. Repeat this step to draw lines at angles of 20° , 30° , 40° and 50° to the normal, all converging on the point O .
9. Replace the glass block in its outline on the paper.
10. Place two pins or needles on the line for the incident light at 10° . Place one of the pins close to the glass block and the other as far away as possible on the 10 degree line. The pins should stick upright easily in the cardboard
11. From the opposite side of the glass block, look through the block so that you can see the two pins on the other side through the block (do not look over the block).
12. Close one eye and move left or right until the two pins you see through the block are perfectly aligned so that they look like one pin.
13. On this side of the glass block, place another pin close to the block so that all three pins are aligned.
14. Repeat this step with a fourth pin closer to your eye.
15. Make sure that, as you look through the glass block, all four pins are aligned perfectly.
16. Remove the pins on this side of the block and mark their positions (the holes in the paper) with a pen.

17. Use the straight edge of the protractor to trace a line through the two points to the edge of the glass block.
18. Mark this line as 10 degrees.
19. Repeat steps 10 through 18 for the incident rays of 20, 30, 40 and 50 degrees. At the end you should have five lines coming from your side of the glass block at different points, each labeled with a different angle. These lines should be diverging from one another.
20. Remove the glass block from the paper.
21. Using the straight edge of the protractor, trace a line from O to the point on the edge where the ray labeled "10 degrees" emerges.
22. Repeat this step for each line so that you have five lines inside the glass block outline, each connecting point O with one of the lines emerging from the block. These lines inside the block are the refracted rays corresponding to each of the incident rays (10, 20, 30, 40 and 50 degrees).
23. Use the protractor to measure the angle between the normal inside the block and the first refracted ray.
24. On a separate piece of paper, record the incident angle (10°) and the corresponding refracted angle (which should be around 7° , though this will change depending on the material you are using).
25. Repeat these steps for the incident angles of 20, 30, 40 and 50 degrees and their respective refracted angles.
26. Record these results in a table showing each incident angle and its respective refracted angle.
27. Use a four-figure or calculator to find the Sine of each of these angles and record these in your table as well.
28. Use a ruler to make a graph of $\sin r$ against $\sin i$. The x-axis (horizontal axis) should contain the values for the Sine of the incident angles, and the y-axis (vertical axis) should contain the values for the Sine of the refracted angles.
29. Mark each of the five data points on the graph using your table of values for $\sin i$ and $\sin r$.
30. Use a ruler or other straight edge to draw a straight line through the five points. Extend this line back through the y-axis (the axis containing values of $\sin r$).
31. Calculate the slope of this line by using:

$$\text{slope} = \frac{\text{change in } y}{\text{change in } x}$$

32. Calculate the refractive index of glass by using:

$$\text{refractive index} = \frac{1}{\text{slope}}$$

Results and Conclusions

It will be observed that the angle of a ray of light changes when moving from one medium to another. An object seen through two or more media appears to be in a different place than where it actually is. We can measure the angles of incidence and refraction, then use Snell's Law to find refractive index.

Clean Up Procedure

Return all supplies to their proper places making sure that the glass block is in a safe place where it will not break.

Discussion Questions

1. Why does light bend when moving from one medium to another?
2. In what direction does light bend when moving from a low-density medium to a high-density medium?
3. In what direction does light bend when moving from a high-density medium to a low-density medium?
4. What other materials could you use to measure refractive index instead of the glass block?
5. Why is it better to repeat the experiment for many angles of incidence instead of just one angle?
6. On the graph, what is the y-intercept? Why?

Notes

This activity is very simple to perform but requires some practice, especially when trying to align all of the pins. Make sure that you can do the entire activity easily before you do it with students. Any material may be used; the glass block is only one option. Stained glass, water and plastic also work well. This activity appears often as a practical on the exams, so you can repeat it many times with students so that they know it very well.

3.2.3 Total Internal Reflection in Water

Learning Objectives

- To observe the effect of Total Internal Reflection of light inside water

Background Information

When light passes from a high-density medium to a low-density medium, it can undergo total internal reflection if the angle of incidence is great enough. If light is passing through water, some of it will pass into air but some will be reflected at the surface back into the water. This is the mechanism behind fibre-optic cables, which use total internal reflection in a clear wire to move light over great distances..

Materials

Opaque container like a Nido can, nail, torch, water, bucket

Preparation Procedure

1. Use the nail to poke a hole at the bottom of one side of the opaque container.

Activity Procedure

1. Pour water into the opaque container so that it can flow out of the hole near the bottom into the other container.
2. In a dark room, shine a torch down into the water.
3. Observe the light in the water falling from the hole.

Results and Conclusions

The light is reflected at the surface of water (total internal reflection), so when it travels through the stream of pouring water, it continues to be reflected inside the stream until it reaches the container below. The light that only escapes farther down in the pouring water is what we see as the glowing effect.

Cleanup Procedure

Clean up the water and return materials to their proper places.

Discussion Questions

1. What causes the water to glow?
2. What is the light doing inside the water stream?

Notes

While the light is being reflected inside the water stream, what we are seeing with our eyes is the light that escapes. A certain percentage of light will escape each time it hits the surface of the water and air. Light that enters the air at a small angle will escape and reach our eyes; light that hits at a large angle will be reflected again inside the water.

3.2.4 Focusing an Image through a Convex Lens

- Preparation Time: 1 minute
- Materials: convex lens (magnifying glass on a Swiss army knife works well), white paper or screen, tissue paper (the paper used to wrap the Rexa toilet paper is perfect), pen, point light source (your headlamp, desk lamp, etc.), optional retort stands
- Procedure: cut a piece of tissue paper to fit over your light source. Flatten this paper in a book overnight if necessary. Draw a thick arrow on this tissue paper and tape it over your light source. With students, set up the light source to shine directly on a white screen or paper about half a meter away. The distance depends on how strong the light is). Move the magnifying glass/convex lens back and forth between the light and screen until the image of the arrow is focused on the screen. Measure the distances from the lens to the screen and lens to the light source. Now you can calculate the focal length of the lens.
- Variation: Fry some bugs with sunlight! If the sun is strong enough, you should be able to get paper to smoke, and no one likes siafu anyway.
- Theory: The lens equation is given as $1/f = 1/u + 1/v$ where f is the focal length of the lens, u is the distance from the object to the lens, and v is the distance from the focused image to the lens. In our case, the object is out light source and arrow, and the image is on the white screen. By focusing the image, we set u and v , allowing us to calculate f .

3.2.5 Refraction of Light Through Water

- Preparation Time: 5 minutes
- Materials: cardstock or cardboard, jar, water, Nido or powdered soap, light source
- Procedure: Cut a small hole, about half a cm, in the cardstock. Put some Nido or soap into the water in the jar so that it becomes cloudy. Shine the light through the hole in the card so that a thin beam can be seen in the cloudy water on the other side. Change the direction of the beam through the water to see the different refracted angles.
- Theory: The Nido or soap provides particles in the water that will reflect light, clearly showing the path of the light through the water (picture headlights on a foggy day). Light slows down as it enters a denser medium, like water, from a less dense medium, like air. As such, the direction of the light changes in order to reduce the traveling time through the medium. This effect, called refraction, can be seen in the cloudy water.

3.2.6 Newton Colour Wheel

Learning Objectives

- To identify the colours of visible light in the electromagnetic spectrum
- To observe the mixing of colours to form white light

Background Information

The colours of light are somehow different from the colours of pigment. The primary colours are red, green and blue, and the secondary colours are cyan, magenta and yellow. These are different from pigment. Also, when the colours of light are mixed, the product is white. White is the presence of all colours while black is the absence of all colours. By mixing the colours of light, we can see that they form white. The easiest way to mix colours is to use the spectrum of visible light, namely ROYGBIV, or Red, Orange, Yellow, Green, Blue, Indigo and Violet.

Materials

coloured pencils in red, orange, yellow, green, blue, indigo and violet; white paper, scissors, plastic lid to a Nido can or other container; 1-inch screw, tape or glue, optional compass from a mathematical set

Preparation Procedure

1. Place the plastic lid flat on the white paper.
2. Use a pencil to trace the outline of the lid on the paper.
3. Cut the circle of paper out.
4. Use a pencil to divide the circle into seven equal slices meeting at the center of the circle. If you have a compass it can be used to divide the circle more evenly into seven slices.
5. Find the center of mass of the plastic lid by balancing it on a pencil.
6. Thread the screw through the center of the lid so that it sticks out the bottom of the lid and is flat on top.
7. Tape or glue the coloured paper to the top of the lid.

Activity Procedure

1. Hold the colour wheel on a table so that the wheel balances on the tip of the screw and the colours face upward.
2. Spin the wheel between your fingers so that it spins on its own on the table.
3. Observe the change in colour.

Results and Conclusions

When the colour wheel is stationary, all seven colours can be seen clearly. When the wheel spins quickly, the colours blend together to form white. This is because when all the colours of light are mixed, white is produced.

Clean Up Procedure

Return all materials to their proper places.

Discussion Questions

1. What are the colours on the colour wheel?
2. Why is it better to use all the colours rather than just a few?
3. What colour is seen on the wheel when it is spinning quickly.

Notes

The colour wheel works best if the screw is placed in the exact center of the plastic lid. If it is off center, the wheel will not spin well. Also, you can get a clearer white colour if you divide the wheel into more sections of colour. 14 is better than 7, though 7 will work well.

3.2.7 Dispersion of White Light: Part 1

Learning Objectives

- To demonstrate the dispersion of white light

Background Information

White light is light which contains all colours. The light from the sun and some bulbs is white light, so we can divide it into its component colours. When light travels from air to a denser material, each wavelength of light (colour) bends at a different angle so the white light splits into all the colours of the visible spectrum, of which the most visible are red, orange, yellow, green, blue, indigo and violet (ROYGBIV). This may be easily shown by placing a mirror in a basin of water, as shown below:

The dispersion of light may also be shown with soap bubbles, as discussed in the following activity.

Materials

Water, soap, beaker*, light, and straw

Preparation Procedure

Make a soap solution by mixing water and soap.

Activity Procedure

1. Place the beaker with the soap solution near a source of white light or in open sunlight.
2. Immerse the straw into the soap solution and blow into it to form bubbles.
3. Describe and record any observations.

Results and Conclusions

Different colours are observed as the sunlight hits the soapy bubbles and undergoes refraction into its component colours. This is because the light is refracted when passing into the soap and then again when passing back into air.

Clean Up Procedure

Collect all materials and return them to their proper place.

Discussion Question

What colours did you see in the soap bubbles? Why?

Notes

The dividing of white light into its colours is called dispersion. Dispersion of sunlight can be observed in a rainbow, a thin layer of oil or soap, etc. This can be demonstrated most easily with soap bubbles or a triangular prism.

3.2.8 Thin Film Interference

- Preparation time: 5 minutes
- Materials: A small bowl or other dish, water, oil
- Procedure: Pour water into the dish. Touch your finger to the oil, then to the surface of the water. A small amount of oil should be transferred to the surface of the water, where it will form a thin film. A colorful rainbow pattern should be visible in the thin film. Try looking at it from different angles. If you are having trouble seeing the colors try moving the dish into brighter light (direct sunlight works well), or using a dark-colored dish.

- Theory: When light strikes the surface of the water, some is reflected off the top of the film of oil, and some is reflected from the oil-water interface. When the difference in the path length between these two paths is an integer number of wavelengths, light of that wavelength will be strongly seen. This gives rise to the rainbow pattern.

3.2.9 Water Prism

- Preparation Time: 1 minute
- Materials: mirror, clear rectangular container, water, white light source
- Procedure: Fill the container with water. On the inside of one of the sides, place the mirror with the reflective side facing in. In a dark place, shine a light through the opposite side of the container at an angle so that the light passes through the water, reflects off the mirror, and exits the container on the original side. The light leaving the container should be dispersed into the color spectrum.
- Theory: Light refracts when entering a dense medium like water. As white light is refracted, each color that makes up the white light (the whole color spectrum) refracts at a different angle depending on its wavelength, and so a refracted ray creates a slight rainbow pattern. Normally this effect can be seen only partially as white light passes through water, but as you are refracting the water twice, once into the water and once back into air, the dispersion effect will have twice the magnitude.

3.3 Thermal Expansion

3.3.1 Expansion of Solids: Screw and Loop

- Preparation Time: 5 minutes
- Materials: screw, length of thick-ish metal wire about 10 cm, heat source, tongs
- Procedure: Bend the wire into a loop such that the head of the screw will just fit through. Demonstrate that the screw fits, then heat the screw in a candle or jiko for a minute or so. Try to pass the screw through the loop again; demonstrate that it no longer fits! Try alternately heating the loop and screw, then let them cool and see if the screw fits again.
- Theory: Metals expand when heated. When you heat the screw, the diameter of the head increases slightly. It is not noticeable to the naked eye, but it becomes obvious when the screw becomes too large to fit into the loop.

3.3.2 Thermal Expansion of Solids - Breaking Glass

Learning Objectives

- To observe the effects of thermal expansion of solids
- To break glass containers evenly

Background Information

Solids expand when heated, though not always noticeably. However, it is enough that if an object is heated on one side but not on another, the side that is heated expands and the other side does not. If the object is rigid, like glass, it will break instead of bending. In this way, glass containers like soda bottles and beakers can be broken evenly.

Materials

Soda bottle or other open glass container (bottles with uniform sides are best), water, heat source

Hazards and Safety

- The glass will break and may leave sharp edges. It is important that the glass is properly disposed of.
- Be sure that the bottle is not covered. If you cover the bottle it could explode rather than just break evenly.

Preparation Procedure

1. Collect all materials.

Activity Procedure

1. Place some water in the soda bottle so that it is about half full. It is best if the water level is at a point where the bottle's side is uniform.
2. Place the bottle over a heat source and wait.
3. If the bottle does not break before the water boils, remove the bottle from the heat until the water stops boiling, then place it in a container of cold water.

Results and Conclusions

The glass bottle will break evenly at the level of the water inside. This is because the water is gaining more heat than the air above it, so the glass bottle touching the water gains more heat than the glass touching the air. Therefore the glass below the water level expands more than the glass above the water level, so the glass breaks evenly.

Clean Up Procedure

1. Dispose of broken glass.
2. Return all materials to their proper places.

Discussion Questions

1. Why does the bottle break at the level of the water?
2. Which part of the glass bottle is expanding most?

Notes

Glass is one of the few materials which does this. Metal bends when heated, hence the bimetallic strip. However, a similar technique is used in many places to break large stones, especially in villages where other equipment is not available.

3.3.3 Bimetallic Strip

Learning Objectives

- To identify components of a bimetallic strip
- To observe and explain the function of a bimetallic strip
- To understand the mode of action of a bimetallic strip

Background Information

Solids expand when heated, but every solid has a different expansivity which depends on what material it is. For example, copper expands noticeably when heated, but wood barely expands at all.

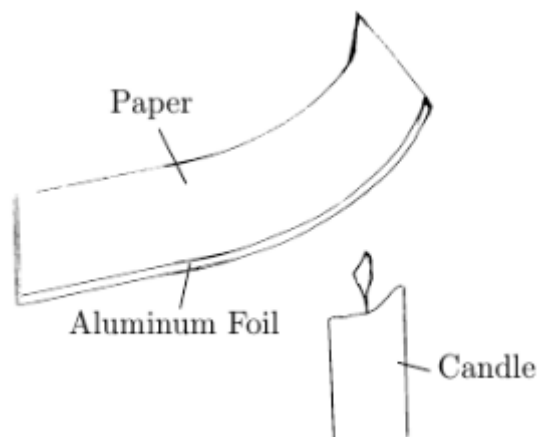


Figure 3.2: A Bimetallic Strip

Materials

Aluminium foil, paper, glue, candle, matches

Preparation Procedure

1. Cut one piece of aluminium foil and one piece of paper of equal size. About 3 cm by 10 cm works well.
2. Lay the foil flat on the paper so that they are aligned.
3. Glue the pieces together and leave them to dry.

Activity Procedure

1. Light the candle.
2. Hold the strip above the candle far enough away that it won't burn or blacken, but close enough that it can feel the heat of the flame.
3. Observe any changes in the shape of the strip.

Results and Conclusions

The strip bends towards the side of the paper because the aluminium foil expands more than the paper, forcing the paper to bend in to accommodate the expanding foil.

Clean Up Procedure

Snuff the candle and return all materials to their proper places.

Discussion Questions

1. What happens when the strip is held above the flame with the paper on the bottom and foil on top?
2. What happens when the strip is held above the flame with the foil on the bottom and paper on top?
3. Why does this occur?

Notes

A real bimetallic strip contains two metals: usually copper and iron or two other strong metals. The metals, as with the paper and foil, have different expansivities. When they are heated, the metal with the larger expansivity expands more than the other. But as they are attached along their lengths, the more expansive metal pulls the other metal and therefore bends inward toward the metal with lower expansivity. In this activity, the paper acts as the metal with lower expansivity, bending inward to accommodate the expanding foil while not expanding much itself. It helps in this activity to hold just a piece of foil or piece of paper over the flame first to show that, alone, neither one will bend. They only bend when they are glued together.

3.3.4 Thermal Switch

Learning Objectives

- To observe the thermal expansion and contraction of solids
- To explain the mode of action of a thermal switch
- To explain the effect of heating on solids

Background Information

All substances expand when heated. Solids expand only a small amount, but metals expand noticeably.

Materials

flat piece of wood, 2 thick sticks about 5 cm tall, several small nails, short piece of thick wire (about 8 cm), connecting wires, 2 dry cells, bulb or galvanometer, candle, matches

Hazards and Safety

- The thick wire will become very hot in the candle, so be sure not to touch it.

Preparation Procedure

1. Collect all materials.
2. Nail the two sticks upright on the piece of wood, about 6 cm apart.
3. Fix one nail into the side of one stick near the top so that it sticks out horizontally towards the other stick.
4. Bend the end (about half a cm) of the wire at a right angle.
5. Place the wire on the top of the other stick so that the bent end just touches the nail fixed to the other stick.
6. Move the wire back slightly so that there is a gap of about 1 mm between the bent end of the wire and the nail.
7. Fix the wire where it is by putting a nail in the top of the stick to hold the wire in place.
8. Attach one connecting wire to the back of the thick wire and the other connecting wire to the nail fixed to the top of the other stick.
9. Attach the connecting wires to the bulb and batteries in series.
10. You should now have a circuit in series which is disconnected by the small gap between the thick wire and the nail.

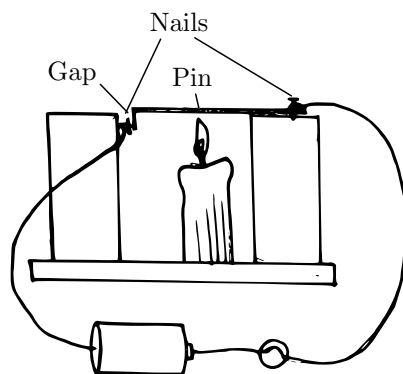


Figure 3.3: A Thermal Switching Circuit

Activity Procedure

1. Set up the switch circuit on the table.
2. Check to make sure that the batteries and bulb are working and that there is a small gap between the thick wire and the nail.
3. Light the candle.
4. Hold the candle under the thick wire until the wire expands to touch the nail. The bulb should light.
5. Take the candle away to let the wire cool. The bulb should turn off.
6. Repeat these steps until it is clear what is causing the bulb to turn on and off.

Results and Conclusions

The wire's length increases when it is in the candle flame and decreases when the candle is removed and the wire is allowed to cool. This is because the wire (a solid) expands when it is heated. This application of thermal expansion is used in thermostats.

Clean Up Procedure

Disconnect all wires and return all materials to their proper places.

Discussion Questions

1. What happens to the wire when it is heated? What happens when it is cooled?
2. What causes the circuit to be completed and the bulb to turn on?
3. What causes the bulb to turn off?

Notes

Solids typically expand very little so that it is difficult to see with the naked eye. Metals expand enough that they can be used to demonstrate thermal expansion. The wire in this activity expands in the candle flame to complete the circuit, thereby lighting the bulb. When the source of heat is removed, the metal cools quickly and contracts, breaking the circuit and turning off the bulb.

3.3.5 Thermal Expansion of Liquids

Learning Objectives

- To observe the expansion of liquids when heated
- To observe that different liquids expand at different rates

Background Information

All substances expand when heated. While solids expand with specific dimensions, liquids and gases expand in volume only.

Materials

500 mL plastic water bottle with cap, nail, source of heat, small cooking pot, water, food colouring (optional), clear plastic straw or tubing, super glue, various liquids (cooking oil, kerosene, milk, etc.)

Hazards and Safety

- The water in the small pot will boil after a short time, so be careful not to touch it.

Preparation Procedure

1. Collect all materials.
2. Heat the nail.
3. Use the hot nail to put a hole through the center of the bottle cap.
4. Insert the straw through the hole half way so that half of the straw is below the cap and half is above.
5. Use the hot nail and super glue to seal the hole so that no air can pass through the bottle cap. Be careful not to seal the straw itself.

Activity Procedure

1. Fill the bottle three quarters with water and add a pinch of food colouring.
2. Close the cap on the bottle so that the bottom of the straw is in the water.
3. Fill the small pot half way with water.
4. Place the pot over the heat source and place the water bottle in the pot (water bath).
5. Allow the water to heat and observe the water level in the straw.
6. Remove the water bottle from the pot and place it in cold water.
7. Observe again the water level in the straw.
8. Repeat all of these steps for various other liquids.
9. If possible, prepare one water bottle for each liquid and observe their levels at the same time in the water bath.

Results and Conclusions

Liquids expand when heated and contract when cooled. This is because their atoms are moving with more energy and so must increase in volume. Because the water is sealed in the bottle and is expanding, it can only move up the straw.

Clean Up Procedure

1. Turn off the heat source.
2. Empty all the water and return all materials to their proper places.

Discussion Questions

1. What happens to the water level in the straw when the water is heated?
2. What happens to the water level in the straw when the water is cooled?
3. What causes the water level to rise and fall?
4. Which liquid expands the fastest?
5. Which liquid expands the slowest?

Notes

Liquids expand noticeably when heated so it is simple to see the effect. By using a capillary tube, we can see the effect much more easily as the liquid level will rise in the tube only. By sealing the cap on the bottle, we allow the liquid to expand in only one direction: up through the capillary tube.

3.3.6 Thermal Expansion of Gases

Learning Objectives

- To observe the expansion of a gas when heated
- To explain why gases expand when heated

Background Information

Unlike solids, gases expand quickly when heated. Because the molecules of a gas are spread out and moving, the volume increases quickly when more energy is added.

Materials

Source of heat, small cooking pot, water, clear thin plastic straw or tubing

Hazards and Safety

- The water will boil and the steam will hurt your hand, so use a long straw and keep your hand out of the way of the steam. Use tongs to help you hold the straw if necessary.

Preparation Procedure

Collect all materials.

Activity Procedure

1. Light the heat source.
2. Fill the small pot half-way with water and place it over the heat.
3. Place one end of the straw or tubing just below the surface of the water.
4. Place your thumb over the other end of the straw and remove it from the water so that a single drop remains in the bottom of the straw.
5. Turn the straw over and remove your thumb so that the water drop moves down to the center of the straw.
6. Place one end of the straw back in the water, leaving the other end open.
7. Observe the motion of the water drop in the straw as the water in the pot is heated.
8. Hold your thumb over the open end of the straw.
9. Remove the straw from the water and insert it into cold water.
10. Remove your thumb and observe again the motion of the water drop in the straw.

Results and Conclusions

As the gas in the straw is heated, the water drop rises. This is due to the expansion of the gas below the drop, as the gas can only expand up. It will be seen that as the gas in the straw is cooled, the drop falls. This is due to the contraction of the gas below the drop, as the gas decreases in volume when its temperature decreases.

Clean Up Procedure

Turn off the heat source and return all materials to their proper places.

Discussion Questions

1. Describe the behavior of the drop when the straw is heated.
2. Describe the behavior of the drop when the straw is cooled.
3. What causes the drop to move up the straw?
4. What causes the drop to move down the straw?
5. What is expanding in this experiment? What is expanding the fastest?

Notes

The behavior of gases is actually more complicated; gases will expand as much as the pressure will allow.

3.3.7 Charles' Law, Part A – Coin Cap

- Preparation time: 30 minutes
- Materials: 2 coins, 2 bottles, some way to cool the air in one bottle either through refrigerator or ice.
- Procedure: Take a coin and a bottle. Place the coin over the mouth of the bottle so it covers the entire opening. This is the control bottle. In a second bottle, place the bottle coin a refrigerator with the coin next to it. After 25 minutes, the air inside of the bottle cools down. Remove the bottle from the refrigerator and immediately cover with a coin as before. If no refrigeration is available, take some ice water or cold water and pour into the bottle. Swirl and mix the cold water to ensure the bottle is cold. Pour out the water and cover with the coin. Let the two bottles sit next to each other. After a short time, the coin on the refrigerator bottle will be blown off the top.
- Theory: Charles' law states that temperature is directly proportional to volume. As the temperature increases, the volume increases. As temperature decreases, the volume decreases. In this activity, the temperature of the first bottle remains constant so nothing happens. However, the air in the second bottle is at a lower temperature so it has less volume. When the temperature increases, the volume of the air expands in volume. This is shown by the coin being pushed off the lid of the container. The air expands but the coin stands in the way. The air pushes the coin so that it is possible to expand further in volume.

3.3.8 Charles' Law, Part B – Spray Time

- Preparation time: 15 minutes
- Materials: 1 can of non-CFC aerosol spray (e.g. Rungu insect repellent), 1 balloon.
- Procedure: Place the plastic bag or balloon to act as a container over the mouth of the spray container. Use the container and spray it into a balloon. If the balloon is too small, use a funnel. The spray will liquefy and be cold inside the balloon. Tie the balloon. As the liquid warms up to room temperature, it will change from a liquid to a gas. Students should be able to hear and feel it boiling. Further, as the gas heats up, the balloon will expand in size.

- Theory: Charles' Law states that temperature of a gas at constant pressure is directly proportional to volume. Inside of the spray cans, there is a chemical held under high pressure. Phase diagrams show that gases under high pressure become liquids. The pressure is released and the temperature cools. This is called Joule-Thompson effect. It is an adiabatic expansion. However, by spraying long enough the temperature will cool down to the point that the chemicals will change back to a liquid. This liquid can be transferred to the balloon where it changes back into a gas quickly. This is where Charles' Law comes into play. As the gas comes to room temperature, the volume of the trapped gas will increase.

This activity also works quite well for showing phase transitions. As liquids change to a gas, they do not disappear. They still exist even though they may not be seen. Here, the liquid changes to a gaseous state, which accompanies the expansion of the balloon. The size of the balloon is the direct representation of the liquid molecules that have evaporated. The mass of the balloon will also be different than that of one filled with normal air.

3.3.9 Egg Suck

- Preparation time: 0 minutes
- Materials: 1 peeled egg, 1 glass bottle with a narrow mouth, like a konyagi bottle, matches, small piece of paper
- Procedure: With the egg ready to cap the alcohol bottle, use a match to light the piece of paper on fire. Drop the paper into the alcohol container. Let it burn for a second, and then cap the bottle with the egg. The egg should be sucked slowly into the bottle if the egg is not too large. If it does not pull into the bottle, you can try again but use petroleum jelly on the mouth. Even if the egg is not sucked into the bottle completely, there will be a suction holding the egg to the bottle. It is possible to lift the bottle by the egg.
- Theory: The burning match and paper heat the air inside the bottle. When we cap the bottle with the egg, we seal the air inside of the bottle. This air sealed inside is at a higher temperature than the surroundings. As the bottle cools down, the pressure of the air inside the bottle decreases. This is a direct example of Charles's law. As the pressure inside drops, the atmospheric pressure still pushes down onto the egg. If pressure difference is sufficient, the egg will be pushed slowly into the bottle.

3.3.10 Charles's Law

Learning Objectives

- To observe the relationship between volume and temperature when pressure is constant
- To explain the meaning of Charles' Law in terms of pressure, volume and temperature

Background Information

Gases can be measured by three quantities: pressure, volume and temperature. For this reason, we have laws to relate them to each other. When one quantity is held constant, the other two prove to be either directly proportional or inversely proportional.

Materials

A 5 Litre water bottle with cap, heat source, small cooking pot, water

Hazards and Safety

- Be careful when pouring the water from the pot to the bottle. Use a funnel if necessary.

Preparation Procedure

Collect all materials.

Activity Procedure

1. Light the heat source.
2. Fill the small pot with water and place it over the heat source.
3. Allow the water to boil.
4. When the water is boiling, pour it into the water bottle.
5. Close the cap on the bottle and shake the water.
6. Pour the water out of the bottle and close the cap again.
7. Observe any changes to the bottle.

Results and Conclusions

After pouring the boiled water into the bottle and closing the cap, the volume of air in the bottle increases. This is because the air is gaining heat, and therefore kinetic energy, from the water and therefore increasing in volume. Pouring the water out removes the air's source of heat. When you replace the cap on the bottle, you return the bottle to a state of constant pressure. As the air in the bottle cools, the temperature goes down. Temperature and volume are directly related, so the volume of the bottle decreases. We see this as the bottle being crushed.

Clean Up Procedure

1. Turn off the heat source.
2. Dispose of the water and return all materials to their proper places.

Discussion Questions

1. What quantity of a gas is constant during this experiment?
2. Which two quantities are changing?
3. What causes the bottle to be crushed?
4. Based on this experiment, what is Charles's Law?

Notes

Charles's Law states that, when pressure is constant, temperature varies directly with volume. This means that, in an air-tight system, the volume will increase when something is heated or decrease when something is cooled. This is the principle behind thermal expansion and can be seen easily in the thermal expansion demonstrations. In this demonstration boiling water is used initially to increase the temperature of the air in the bottle. It is removed and the bottle is sealed, forcing the pressure to remain constant. As the air inside the bottle cools, it decreases the volume, causing the bottle to be crushed from the inside. $T \propto V$ when P is constant.

3.3.11 Boyle's Law

Learning Objectives

- To observe the relationship between volume and pressure when temperature is kept constant
- To explain the relationship between pressure and volume
- To explain Boyle's Law

Background Information

Gases can be measured by three quantities: pressure, volume and temperature. For this reason, we have laws to relate them to each other. When one quantity is held constant, the other two prove to be either directly proportional or inversely proportional.

Materials

Syringes without the needle for each student

Preparation Procedure

Collect the syringes and remove the needles.

Activity Procedure

1. Pull the syringe plunger back as far as it will go without removing it.
2. Place your thumb over the open end of the syringe.
3. Push the plunger in as hard and as far as you can.
4. Observe any effects.
5. Remove your thumb from the syringe and push the plunger in as far as it will go.
6. Replace your thumb over the opening of the syringe.
7. Pull the plunger out as hard and as far as you can.
8. Observe any effects.
9. Have students try this themselves.

Results and Conclusions

It will be seen that as you push the plunger in, there is a strong force pushing both the plunger and their thumb out. This is the increased pressure of the air inside the syringe. As you pull the plunger out, there is a strong force pulling both the plunger and your thumb into the syringe. This is the decreased pressure of the air inside the syringe. As volume is decreased, pressure is increased; as volume is increased, pressure is decreased. From this we can say that pressure and volume are inversely proportional.

Clean Up Procedure

1. Collect all syringes and return them to their proper place.

Discussion Questions

1. What quantity is being held constant in this experiment?
2. What quantities are changing in this experiment?
3. What do you feel on your thumb when you are trying to pull the plunger out? What do you feel when you are trying to push it in?
4. Describe the relationship between pressure and volume in this experiment.
5. Based on this experiment, state Boyle's Law.

Notes

Pressure varies inversely with volume. As you push the plunger in, you are decreasing the volume and therefore increasing the pressure, which you feel as an outward force. As you pull the plunger out, you are increasing the volume and therefore decreasing the pressure, which you feel as an inward force.

3.3.12 Boyle's Law, Part A – Syringe

- Preparation time: 0 minutes
- Materials: One syringe of any size minus metal needle
- Procedure: Fill the syringe with air until the end of the graduations. Place a finger at the tip of the syringe to create a seal. Press the plunger as far as possible. Make a competition with the students to see which person can decrease the volume the greatest. It should be easy to decrease the volume most of the way but impossible by human means to completely squeeze out the air.
- Theory: Boyles law states that the pressure of a gas at a constant temperature is inversely proportional to the volume. As the pressure increases, the volume decreases. As the pressure decreases, the volume increases. As the plunger pushes down on the gas, the volume decreases. As the progressively decreases, the pressure to push the plunger progressively increases. The pressure becomes so great that it is hard to puss the plunger in all the way.

3.3.13 Boyle's Law, Part B – Cartesian Diver

- Preparation time: 5 minutes
- Materials: 1 clear plastic water bottle with cap that forms a good seal, syringe, some weights like small nuts or nails, water
- Procedure: Fill the water bottle completely with water. The water should be at the brim. Place the syringe, with the inside loaded with some weights and some air, carefully in the top of the bottle. The wings on the syringe may need to be cut in order to make the syringe fit through the bottleneck. It might bob out of the top of the bottle a little. Seal the bottle with the cap. Squeeze the bottle. The syringe should sink. Release the pressure and the syringe rises again. If the force required to squeeze the bottle in order to make the syringe sink is too great, there are two things to be done. First, ensure that the water is completely to the brim of the bottle. Second, adjust the size of the bulb on the syringe to minimize the volume of air. Find a new syringe if the syringe leaks water on the inside.
- Theory: An object will float or sink depending on its density relative to the liquid it is in. In this case, if the syringe is less dense than water, it floats. If the density becomes greater than the density of water, it will sink. This is exactly what is happening inside the syringe. Inside, there is some air trapped on the inside. This gas is subject to Boyles law. Applying pressure to the bottle increases the pressure pushing on the syringe. This pressure makes the volume of the syringe contract. Since density is defined as the mass over the volume, by squeezing the bottle the density changes. The mass does not change, but the volume of the syringe decreases because the volume of air is compressed. As the volume decreases, the density of the syringe increases. If the density increases sufficiently, the syringe sinks. This is also known as a Cartesian Diver.

3.3.14 Boyle's Law, Part C – Filling a Balloon

- Preparation time: 0 minutes
- Materials: 1 bottle, 1 balloon
- Procedure: First, blow up the balloon to stretch out the balloon and show that there are no holes. Release all air. Stretch the balloon such that it hangs in the bottle. Have students try blow up the balloon inside the bottle. It is impossible for a normal person to fill this bottle.
- Theory: This is another good example of Boyles Law. Usually when balloons are used, we think of the gas inside the balloon. However, this time we are concerned with the air inside of the bottle. By filling the balloon, the air of the balloon increases. This means that the volume of the air inside the bottle decreases. In order to decrease the volume of the air inside the bottle, Boyles Law says that the pressure needs to increase. The normal humans lungs cannot blow enough air at a high enough pressure to fill the balloon inside the bottles.

3.3.15 Boyle's Law, Part D – Sucking a Balloon

- Preparation time: 10 minutes
- Materials: balloon, plastic water bottle, straw
- Procedure: In the plastic water bottle, put a straw through part of the wall. Seal it up so that it does not leak air. Place a balloon over the mouth of the bottle so it falls into the bottle. Use the straw to suck air out of the bottle to have the balloon fill with air.
- Theory: As we suck the air out of the bottle, the volume of the air inside of the bottle gets smaller due to Boyle's Law. The atmospheric pressure compensates by pushing the balloon into the bottle, which fills up with air.

3.4 Transfer of Thermal Energy

3.4.1 Heat Conduction

Learning Objectives

- To observe the progression of heat through a solid
- To differentiate between good and bad heat conductors
- To explain the progression of heat through solids in terms of the motion of molecules

Background Information

Heat moves through solid bodies by conduction. Some solids are very good conductors of heat while others are not. Heat energy always moves from a hot body to a cold body, which it can do easily in a good conductor but not in a bad conductor. In this way, heat moves through an object from the hot end to the cold end.

Materials

iron nail, piece of glass, wooden stick, candle with a holder, matches, chair, books or other supports

Hazards and Safety

- The nail will become quite hot after being in the candle flame. It is best to wait a minute after removing the candle before you pick it up to clean it off.

Preparation Procedure

1. Collect all materials.
2. Light the candle.
3. Use the lit candle to drip wax at even intervals along the glass, iron and wood (about 1 cm apart).
4. Set the iron nail, glass and stick on the edge of a chair so that one end of each sticks out at least 4 cm beyond the edge of the chair and converge at the same point. They should not be touching at any point.

Activity Procedure

1. Make sure that the glass, nail and stick are secure on the chair and meet at one point beyond the edge of the chair.
2. Place the candle under the three objects so that the flame just touches the end of each. Use books if necessary to prop up the candle.
3. Wait and observe the rate at which the wax melts on each of the three objects.
4. Have students find other objects which they want to test for heat conduction.

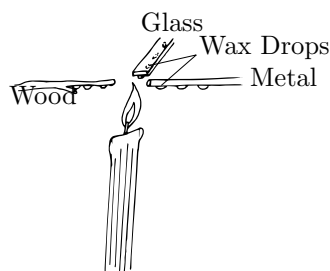


Figure 3.4: Heat Conduction in Different Materials

Results and Conclusions

It will be seen that the wax on the iron nail melts quickly, near the candle at first and then moving back along the nail. The wax on the glass, however, melts very slowly and does not progress very far while the wax on the stick does not melt at all. This shows that heat moves quickly through metal and slowly through wood and glass, or that metal is a good conductor and glass and wood are bad conductors.

Clean Up Procedure

1. Blow out the candle.
2. Clean the wax off of the three objects and return all materials to their proper places.

Discussion Questions

1. On which object did the wax melt the fastest?
2. On which object did the wax melt the slowest?
3. Which object is a good conductor?
4. Which objects are bad conductors?
5. What causes the wax to melt?
6. How does heat move through the objects?

Notes

Metal, a good conductor of electricity, is also a good conductor of heat. This is why we use metal cooking pots but we pick them up with fabric. Metal has many free electrons which carry energy easily through the metal, whether the energy is heat or electricity. Wood and glass, however, cannot transmit heat easily and so will burn or melt before heat is transmitted through the whole body. This is why we can hold firewood from one end while it burns at the other end. If you use plastic, be careful as it will melt quickly before the wax does. This shows it to be a very bad conductor and is a good demonstration, but it is also dangerous if it melts on your skin.

3.4.2 Hot Water Hold

- Preparation time: 10 minutes
- Materials: 3 beakers or drinking glasses, a thermos of very hot water 3 metal coins, a piece of cloth, a piece of rubber strip
- Procedure: Pour hot water into the three beakers. Ask for three students to help with the demonstration. One student will hold his glass using rubber strip to protect against the heat. One will use fabric. One will use metal coins. Tell the students they can put down their beaker if it becomes too hot.

- Theory: Metal is a good conductor of heat, and so we expect that the student using metal coins will only be able to last a short time. rubber strip is a poor conductor of heat (a good insulator), and so will protect its students hands for a longer time. Thus, we expect the student using rubber strip to last a long time.

3.4.3 Copper Coil Candle Snuffer

- Preparation Time: 5 minutes
- Materials: thick copper wire about 40 cm, candle, match
- Procedure: Bend the copper wire into a spiral coil, leaving a length enough for a handle. It should be in the shape of a candle snuffer but clearly open. Light a candle and then put out the flame with your new snuffer.
- Theory: Metal, especially copper, conducts heat readily. By putting the copper coil over a flame, you allow the copper to conduct all of the heat away from the flame, careful not to hurt your hand, depriving the flame of its own heat source.

3.4.4 Convection

Learning Objectives

- To observe convection currents in water
- To explain the transfer of heat in fluids

Background Information

While solids transfer heat by conduction, liquids and gases transfer heat by convection. In convection, energy is carried by molecules as they move through a liquid or gas, thereby transferring the heat from one place to another.

When a fluid is heated, the molecules with the most energy, namely the hot fluid, rises as its density decreases with temperature. The cooler fluid, or molecules with less energy, move down to replace the warmer liquid. By moving down, the cooler fluid then gains heat. The warmer fluid which moved up loses its heat and moves down again. This cycle repeats forever. It is called a convection current.

We normally cannot see the convection currents in a fluid because the fluid is invisible or uniform. However, if we put particles in the fluid so that they float in the middle, they will follow the convection currents.

Materials

Water, clear water bottle, sawdust, source of heat

Hazards and Safety

- Do not hold the bottle too close to the heat source as it will melt. The convection will work even if the heat is not strong.

Preparation Procedure

1. Collect all materials. Sawdust can be found at a carpenter's shop or can be made at home. You want small pieces.
2. Fill the water bottle about 10 cm with water.
3. Pour some sawdust into the bottle so that it is visible in the water but does not absorb the water.

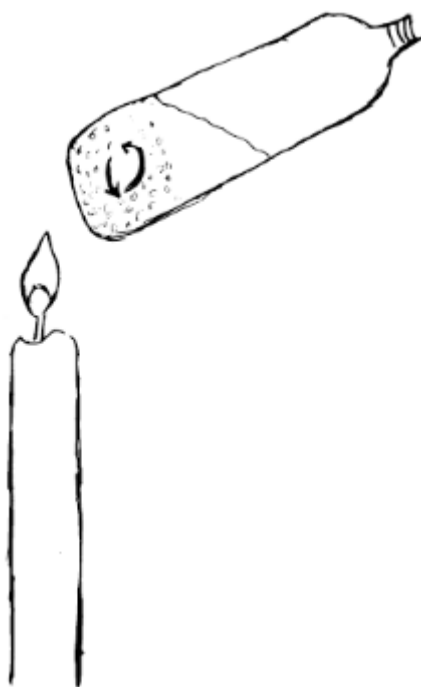


Figure 3.5: Thermal Convection

Activity Procedure

1. Turn on or light the heat source.
2. Hold the bottle with the water and sawdust above the heat so that the bottle receives heat but does not melt.
3. After a few minutes, observe the motion of the sawdust in the water.

Results and Conclusions

As the water in the bottle becomes warmer, the sawdust will be seen to move up. After that it will begin to sink again. This is because it is following the water in which it rests. As the water at the bottom becomes warmer, it moves up. At the top, there is less heat so the water cools again. Then it sinks again to replace the new warm water rising again. This cycle continues and causes the sawdust to continue circling from top to bottom and back.

Clean Up Procedure

Dispose of the water and return all materials to their proper places.

Discussion Questions

1. Describe the motion of the sawdust.
2. Why does the sawdust move like this?
3. How is this type of heat transfer different from that in solids?

Notes

Convection occurs in all gases and liquids. The currents can be seen in many forms, like the movement and formation of clouds or the movement of smoke.

3.4.5 Thermal Windmills

- Preparation Time: 1 minute
- Materials: Windmills from another demo Windmills, candle, match
- Procedure: If you have already created the windmill, set it up so that it spins horizontally about 10 cm above a candle. Light the candle and watch the windmill rotate.
- Theory: As air is heated, it rises, displacing the cooler air above it. The heated air from the candle will force the windmill to rotate horizontally just as wind would cause it to rotate vertically.

3.4.6 Radiation

Learning Objectives

- To explain the concept of radiation
- To observe the heating effect of radiation
- To explain the difference between reflection and absorption of heat

Background Information

Radiation is the transfer of heat through a vacuum. It also occurs in air but it is difficult to detect because of the effect of convection. However, the effects of radiation can be seen by observing the relative absorption and reflection of light and heat by various bodies. A dark, rough surface will absorb heat while a shiny, smooth surface will reflect heat. This is why many cars in hot places are painted white and why solar cookers are black.

Materials

Two small pieces of flat wood, two metal plates, short candle, matches, small nails or glue, small kerosene burner or kibatari, steel wool

Hazards and Safety

- This activity should be done indoors to avoid any wind.

Preparation Procedure

1. Cut the pieces of wood into equal sizes about 4 cm by 6 cm. The exact size and shape is not important.
2. Cut two metal plates of equal size. The metal around the outside of a D-cell battery is best.
3. Use the steel wool to rub the metal plates until they are clean and shiny.
4. Fix the metal plates to the pieces of wood so that the plates stand upright and the wood lies flat. You can use glue or nails for this.
5. Light the kibatari.
6. Hold one of the metal plates above the kibatari until the plate's face is entirely coated in soot. You should now have two upright metal plates: one black and one silver.

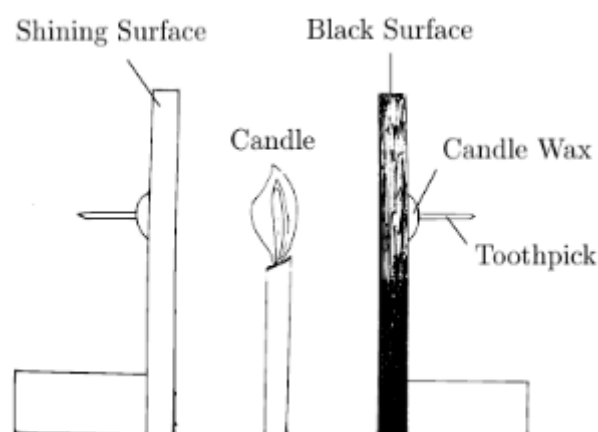


Figure 3.6: Demonstration of the effect of surface colour on radiative heat transfer

Activity Procedure

1. Light the candle.
2. On the back top of each of the metal plates, drip some wax from the candle.
3. Fix the used matches into the the wax so that they stick out horizontally from the back of the metal plate when the wax dries.
4. Place the candle on the table so that the flame is at the same height as the middle of each plate.
5. Place the metal plates a few inches to either side of the candle flame, facing in.
6. Wait and observe any changes.

Results and Conclusions

The wax on the back of the black plate melts quickly and slides down the plate, bringing the match with it. The wax on the silver plate takes a long time to melt. This is because the black plate tends to absorb radiation while the silver plate tends to reflect radiation. This causes the black plate's temperature to increase quickly, melting the wax.

Clean Up Procedure

1. Blow out the candle.
2. Return all materials to their proper places.

Discussion Questions

1. What happened to the wax on the back of the black plate?
2. What happened to the wax on the back of the silver plate?
3. Explain why the wax behaves differently on the black plate than on the silver plate.

Notes

Two forms of heat transfer are present here: convection in the air and radiation. However, the convection in the air carries heat equally to the black plate and silver plate. The difference in heating rate is caused by the absorption rates. Black materials absorb light and therefore heat, while shiny materials reflect light and therefore stay cool.

3.5 Measurement of Thermal Energy

3.5.1 Specific Heats

- Preparation Time: 5 minutes
- Materials: thermometer, water, any liquid, measuring cylinder, small pot, glass container or jar, heat source
- Procedure: Measure a known volume of the liquid into a glass container. Heat the water in the pot over a jiko or stove until it is significantly warmer than the other liquid. Measure the volume of the water in the measuring cylinder. Before mixing the liquids, measure each temperature and record it. Now pour the hot water into the other liquid and wait for the temperature of the mixture to equalize. When the temperature levels off, measure and record it. With this data, you can calculate the specific heat capacity of the liquid.
- Theory: Specific heat capacity is given by where H is the heat needed to raise a mass m a temperature T . Since the liquid and water are being mixed, the same amount of energy used to raise the liquids temperature is lost by the water to cool it down. We can set the heat of water H_w equal to the heat of the liquid H_l . The masses of the substances are known (by using the mole equations), and you measured the changes in temperature with the thermometer. The specific heat capacity of water is 4200 J/kgK , so you can solve for the specific heat capacity of the liquid.

3.5.2 Designing a Calorimeter

Learning Objectives

- To create a calorimeter
- To measure specific heat capacity of different materials

Background Information

Materials can be distinguished by their specific heat capacity. Using the relation: Heat = mass x specific heat capacity x change temperature. You can calculate specific heat capacity for liquid objects or solid objects.

Materials

Box made from wood, ceiling board or a piece of wood, aluminum cup, aluminum wire, pieces of blanket or sweater, and a thermometer.

Preparation Procedure

1. Use wood to make a box with $10 \text{ cm} \times 10 \text{ cm} \times 12 \text{ cm}$ width.
2. Prepare a top cover with wood or ceiling materials.
3. Use aluminium wire to make a stirrer.
4. Prepare a stirrer-holder with an insulator material like rubber.
5. Remove the aluminum cup handle.

Activity Procedure

1. Place the piece of blanket in the box.
2. Put the aluminum cup in the box.
3. Put stirrer in the aluminium cup.
4. Place the top cover on the box.

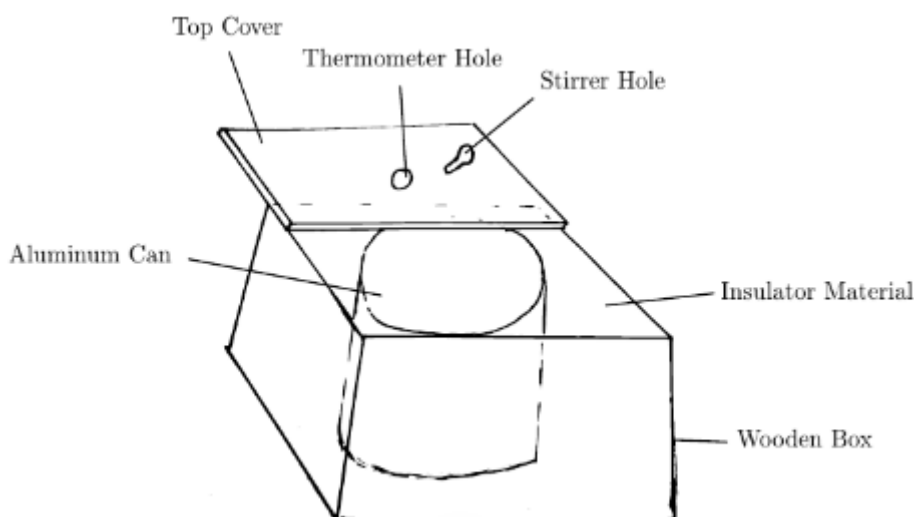


Figure 3.7: Construction of a calorimeter

5. Place the stirrer holder.
6. Insert the thermometer in the middle hole.

Results and Conclusions

Calorimeter can be used to determine the specific capacity of liquid and solid objects.

Discussion Questions

1. Why is it important for the calorimeter and stirrer to be made of the same material.
2. Discuss an experiment that requires a calorimeter?

Notes

Heat energy transfer depends on the material. Different materials transfer heat differently. The specific heat capacity can be obtain by finding heat transfer from one material to another. By using a calorimeter you can find the specific heat capacity of the material. The specific heat capacity tell the ability of material to loose or gain heat energy.

3.5.3 Boiling Water at Room Temperature

Learning Objectives

- To observe the effect of pressure on the boiling point of water
- To explain why the boiling point of water decreases with pressure

Background Information

Boiling and melting points are usually assumed to be constant. For example, the melting point of ice is 0-degrees C and the boiling point is 100-degrees C. However, this is only true at STP, or Standard Temperature and Pressure. Standard pressure is 760 mm Hg, which is only true at sea level. Pressure decreases with elevation, therefore the boiling point of water also decreases. The boiling point of water at sea level will be measurably different from the boiling point on a mountain.

Materials

10 mL or 20 mL syringe without needle, water

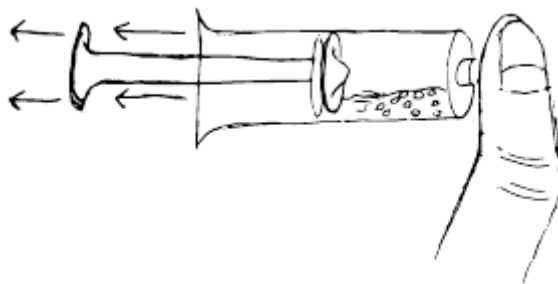


Figure 3.8: Boiling Water at Room Temperature

Preparation Procedure

Collect the syringe and remove the needle.

Activity Procedure

1. Fill the syringe with a small amount of water.
2. Place your thumb over the opening of the syringe.
3. Pull the plunger out as far as you can.
4. Observe the behavior of the water in the syringe.

Results and Conclusions

When the plunger is pulled out as far as it will go (without removing it from the syringe), the water will begin to bubble, meaning that it is boiling. This is because the pressure inside the syringe is decreasing, and the boiling point of the water is decreasing with the pressure. When the boiling point is reduced to room temperature, the water begins to boil.

Clean Up Procedure

Dispose of the water and return all materials to their proper places.

Discussion Questions

1. Why is it difficult to pull the plunger out when your thumb is covering the syringe opening?
2. By pulling out the plunger, are you increasing or decreasing the pressure in the syringe?
3. What happens to the water when you pull the plunger as far as you can?

Notes

When pulling water into the syringe, you only need to take a small amount. If you take too much water, you will not be able to reduce the pressure in the syringe before the plunger comes out. Before doing this activity, be sure that the students understand that the presence of bubbles means that a liquid is boiling.

3.5.4 Latent Heat of Fusion

Learning Objectives

- To observe the process of fusion
- To explain the difference between heat capacity and latent heat
- To observe the constant temperature of latent heat

Background Information

As a substance is heated, there are two types of heat involved. Heat capacity is the heat needed to raise the temperature of the substance; latent heat is the heat needed to change the substance from one state to another. Heat capacity is the heat that we normally see: you can measure it with a thermometer as it raises the temperature of a body. Latent heat, however, is "hidden." This means that latent heat does not raise the temperature of a body, so it cannot be measured with a thermometer. When a substance is heated, its temperature increases as it gains heat as per its heat capacity. However, when it changes state from solid to liquid or liquid to gas, its temperature remains constant as it is absorbing latent heat.

Materials

Heat source, water, small cooking pot, thermometer.

Preparation Procedure

The thermometer may be a real thermometer if you want to measure the temperature at which latent heat is absorbed. However, you can use any liquid in a capillary tube to see the expansion of the liquid. When the latent heat is used and the water is changing state, the liquid in the tube will stop expanding.

Activity Procedure

1. Fill the pot about half-way with water.
2. Place the thermometer in the water.
3. Turn on the heat and place the pot over the heat.
4. Observe the rise in temperature as the water is heated. Record the temperature every 10 seconds.
5. Continue recording the temperature every 10 seconds after the water begins to boil.
6. Plot a graph of temperature (vertical axis) against time (horizontal axis).

Results and Conclusions

The temperature will be seen to increase steadily as the water is heated. When the water begins to boil, the temperature stops increasing and remains constant while the water vapourizes. The graph will show a steadily increasing temperature until it reaches the boiling point on the vertical axis. This value should be about 100 degrees C. At this point, the temperature will level off as time continues to increase.

Clean Up Procedure

1. Remove the thermometer from the water and pour it out.
2. Turn off the heat and return all materials to their proper places when they are cooled.

Discussion Questions

1. What happens to the temperature when the water begins to boil?
2. What happens to the temperature as the water is heated but before it boils?
3. What heat is involved in heating the water?
4. What heat is involved in changing the water from a liquid to vapour?

Notes

It is important to periodically measure the temperature and time as the water heats. This will allow you to see clearly the boiling point when the latent heat of water becomes a factor.

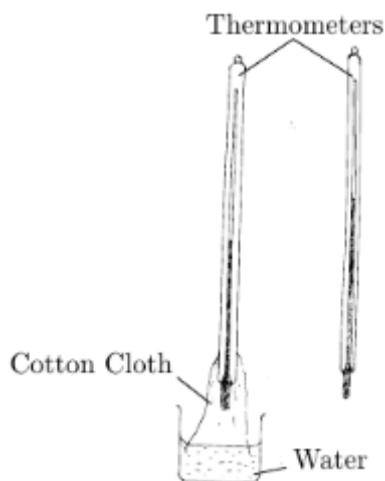


Figure 3.9: A hygrometer for measuring humidity

3.6 Vapour and Humidity

3.6.1 Measuring Humidity with a Hygrometer

Learning Objectives

- To measure relative humidity
- To explain relative humidity

Background Information

Humidity is the concentration of water vapour present in the air. We measure humidity by using a hygrometer, which measures the difference in humidity between two thermometers, one of which is in open air and one of which is being cooled by evaporation. If air contains a lot of vapour, wet objects do not evaporate much. However, if the air is dry, wet objects evaporate a lot. By using the evaporation of water from a thermometer, we can measure the amount of vapour in the air.

Materials

Two mercury or alcohol thermometers, container of water, piece of cotton cloth, thread

Hazards and Safety

- Be careful when spinning the thermometers over your head. The thread needs to be strong so that the thermometers do not fly off. Also, be sure that the area around you is clear so that the thermometers don't hit anything.

Preparation Procedure

1. Collect two thermometers. These are necessary and can be found in any laboratory or hospital supply shop.
2. Find a small piece of cotton cloth and a small container of any kind.

Activity Procedure

1. Pour some water into the container.
2. Wrap the bulb of one of the thermometers with the cotton cloth.

3. Tie the cloth with thread so that it stays on the thermometer.
4. Dip the cloth into the water.
5. Remove the thermometer from the water and tie the tops of both thermometers with thread.
6. Holding the thread tightly, quickly spin the thermometers together over your head for at least 30 seconds.
7. Read the temperature on the thermometers and record both values.

Results and Conclusion

s When both thermometers are rotated at a high speed, the reading of the thermometer attached to the cotton cloth drops. This is because, when it is rotated, the cloth loses water and is therefore cooled (cooling by evaporation). The amount of water that the cloth loses depends on the humidity of the air. By observing the difference between the temperature of the wet cloth and the air, we can tell the relative humidity.

Clean Up Procedure

Remove the cloth from the thermometer and return all materials to their proper places.

Discussion Questions

1. Why do the thermometers show two different temperatures?
2. Explain the formation of dew in terms of humidity.

Notes

A hygrometer is used for measuring the relative humidity of the atmosphere. Its use depends on the fact that evaporation causes cooling. If the air is saturated with vapour, no water evaporates from the cloth and the two thermometers show the same reading. However, if the air is dry, a lot of water can evaporate from the cloth, cooling the thermometer significantly. A table is used to find the relative humidity.

3.7 Current Electricity

3.7.1 Circuit Board

- Preparation Time: 1 hour
- Materials: Piece of flat wood, staples or small nails, hammer, broken radio case, glue, any circuit components
- Procedure: Draw out a grid on the wood with squares about 5-6 cm on a side. At each grid intersection, gently tap in a staple or small nail. From the radio, take the battery casing with its terminals and clips and glue it to one side of the wood; this will be your power supply. Using any configuration you like, set up a circuit on the board using the pins as wire holders. This makes the circuit easier to handle and see.

3.7.2 Breadboards

- Preparation Time: 3-4 hours
- Materials: shower sandal (new), knife, glue, sewing needle, metal strips or aluminum foil (0.5 - 1 cm wide, 5 - 10 cm long), sharpie or marker, simple circuit components

- **Construction:** Remove the sole of the sandal and cut the bottom layer (about 0.5 cm; keep this piece whole for later) off the sandal. Inlay the metal strips at angles into the other section of the sandal in the arrangement shown below. These are the wires of your breadboard. The two long, thin sections are your power strips; the larger section is the board itself where circuit components will be placed. The angle of the metal strips allows the components to remain in contact with the strips under the constriction of the rubber sandal, but if another configuration works better, do that.

The diagram shows the layout of a typical breadboard; change this as necessary. Replace the cut-off section of sandal; you will need to cut slots for the metal strips to fit snugly. Using the sewing needle, punch thin holes into the bottom of the sandal along the lines of the metal strips, about 1 cm apart. Use a sharpie or marker to indicate the positions of the holes and the outlines of the different sections on the breadboard, as shown above. On the power strips, label one line as positive and the other as negative. Use glue to keep the pieces of sandal together. Now your breadboard is done; some modification may be necessary depending on the resources available.

As for electrical components, broken radios, cell phone chargers, old computers, etc., can be stripped for parts. Resistors, transistors, capacitors (parallel plate or cylindrical), diodes, variable resistors (rheostats), switches, fans, LEDs, heat syncs, speakers, and wires can be found easily, even in villages without electricity. If you are stuck, drop a few shillings at the Broken Stuff shop in town.

- **Procedure:** Using your new broken radios, pull out the various components and place them in the breadboard as the circuit you desire. Connect the negative and positive ends of this circuit into the power strips, and the appropriate terminals of the power strips to some batteries, or an accumulator. If you smell burning resistors, that is another lesson. If not, then you have a circuit to play with.
- **Theory:** Students spend plenty of time staring at circuit drawings on the board and sometimes become fairly adept at analyzing them, but when shown a real circuit they cannot tell parallel from series. When teaching simple circuits, accompany any real circuit with a drawing for students to follow.

3.7.3 Construction of a Metre bridge and Potentiometer

Learning Objectives

- To construct and use a metre bridge and potentiometer

Background Information

A metre bridge can be used to determine the resistance of various conductors and also to compare the Emf of batteries. It consists of a piece of resistance wire 1 m long attached in series to either a rheostat or other conductors and resistors. By using a galvanometer we can find the length of resistance wire needed to equal the resistance of the other conductors. Or we can use a voltmeter to find the potential difference along a length of the resistance wire. There are several activities that can be done with a metre bridge and each requires different materials. The construction of the metre bridge itself, however, is the same, and follows below.

Materials

Piece of wood 110 cm by 4 cm, shoe tacks or small nails or screws, connecting wire, Constantine or nichrome wire, dry cells, resistors of known and unknown resistance, galvanometer. Alternative: Voltmeter, rheostat, micrometer screw gauge

Hazards and Safety

- Make sure all nails are removed.

Preparation Procedure

1. From one side of the piece of wood, measure 5 cm and fix 2 shoe tacks or nails side by side about 2.5 cm apart, as shown in 3.10. From one of the nails measure 10 cm and fix another nail. Leave

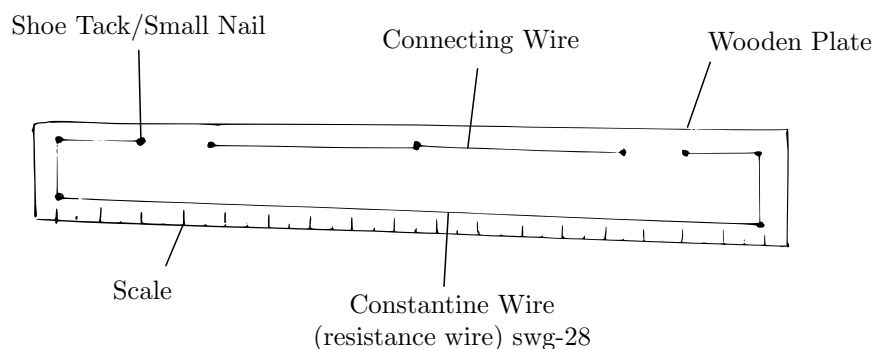


Figure 3.10: A Metre Bridge

a space of about 6-8 cm and fix another nail. From the first nail again measure 50 cm and fix another nail.

2. Again from the first nail measure 100 cm and fix two nails apart as with the first end. From this end on the side of one of the nails measure 10 cm and fix another nail, leave a gap and fix another nail.
3. On the other long side place a meter ruler from first nail to the last nail, mark each cm and write the scale interval of 10 cm.
4. Fix Constantine wire from the first nail to last nail along the side with the cm markings and make sure the wire is tight.

Activity Procedure

1. Use connecting wire to join one of the nails holding the resistance wire to the second nail along the side without the cm markings. Then leave a gap and connect another wire to the central nail and then to next nail. Leave another gap and connect a wire from following nail to nail holding the other end of the resistance wire.
2. Connect a metre bridge circuit by connecting one known and one unknown resistor into each of the gaps.
3. Connect one terminal of a galvanometer to the center nail of the metre bridge. Connect the other terminal to a connecting wire which can be moved easily along the resistance wire.
4. Move the galvanometer wire along the resistance wire until the galvanometer reads zero; that is no current is flowing.
5. Measure the length of resistance wire on both sides of the galvanometer wire. Call the left side of the metre bridge “one” and the right side “two” so these lengths are L_1 and L_2 .
6. Write these two lengths as a ratio, for example the length on the left side divided by the length on the right side, $\frac{L_1}{L_2}$.
7. Set this ratio equal to the ratio of resistances of the resistors, in this case the resistor on the left divided by the resistor on the right (one of these resistances is known, one is not).

$$\frac{L_1}{L_2} = \frac{R_1}{R_2}$$

8. Solve this equation to find the resistance of the unknown resistor, that is

$$R_1 = R_2 \frac{L_1}{L_2}$$

OR

$$R_2 = R_1 \frac{L_2}{L_1}$$

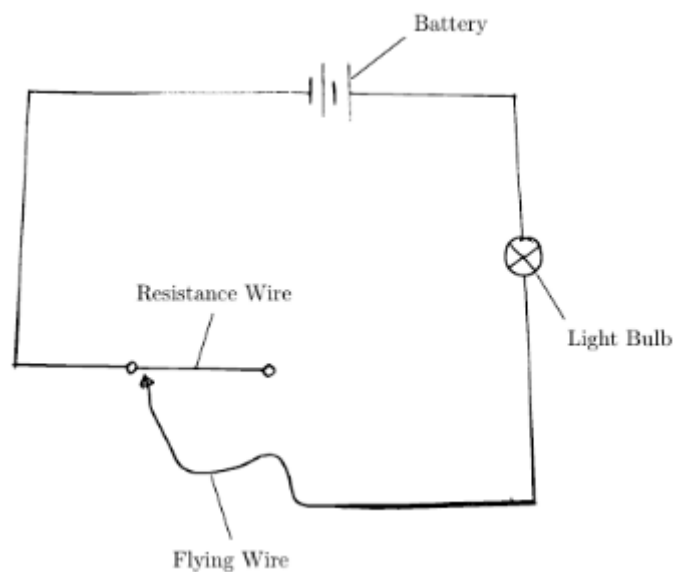


Figure 3.11: Metre bridge circuit

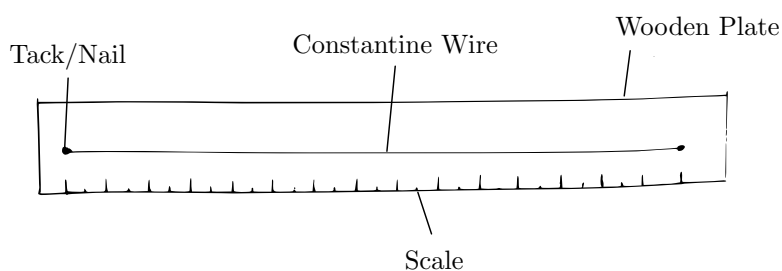


Figure 3.12: Layout of a Potentiometer

Alternative Activity: Potentiometer

1. In the gaps of the metre bridge, place a rheostat, dry cells and a switch.
2. Connect one terminal of a voltmeter to the nail holding the resistance wire at the 0 cm mark.
3. Connect the other terminal of the voltmeter to a connecting wire which can easily move along the resistance wire.
4. Close the switch so that current is moving through the circuit.
5. Move the voltmeter wire to the 10 cm mark and read the voltage. This is the potential difference across 10 cm of the resistance wire.
6. Move the voltmeter wire to the 20 cm mark and read the voltage. Repeat this process for 30, 40, 50, etc. cm and record all of the values.
7. Use the callipers to measure the diameter of the wire.
8. Make a graph of resistance and length. Use this graph to find the resistivity of the resistance wire.

Results and Conclusions

A constructed metre bridge functions using the relationship between a wire's length and its resistance. This principle can be used to find the resistivity of the wire or to find the resistance of any other conductors.

Clean Up Procedure

Remove any remaining nails, pieces of wood and other equipment.

Discussion Question

How can you manufacture a potentiometer?

Notes

Metre bridges are used to determine unknown resistance and to compare electromotive force. When you are using a metre bridge to find the resistance of an unknown resistor, be sure to use two resistors that are similar in resistance. If the resistances are too different, it will be difficult to find with precision the point on the wire where the galvanometer reads zero.

This setup can also be used as a potential meter (potentiometer) in order to find the resistivity of the resistance wire.

3.7.4 Making an Electric Heater

Learning Objectives

- To prepare and demonstrate an electric heater

Background Information

Electricity and heat are both forms of energy, so it is possible to change energy from one form to another.

Materials

1 m of resistance wire (nichrome) of swg 30 or 32, small piece of wood or paper, connecting wires, two to four dry cells (batteries), container of water, optional thermometer

Hazards and Safety

- If the heater is connected to the cells while not in the water, the wire can melt or burn other objects.

Preparation Procedure

1. Collect all materials.
2. Cut a small piece of wood about 4 to 6 cm long, or roll a piece of paper.

Activity Procedure

1. Coil the resistance wire onto the piece of wood or rolled paper so that the coils are close but not touching. Use the entire wire.
2. Use connecting wires to connect the ends of the resistance wire to the terminals of the batteries.
3. Place the coil of resistance wire into the container of water.
4. Observe any effects on the water when current is flowing through the coil. Use your hand on the outside of the container to test the temperature.

Results and Conclusions

When the heater (coil) is left in the container of water for a few minutes, the temperature of the water rises enough that it can be felt by your hand on the outside of the container. If the heater is left for a long time, the water may boil.

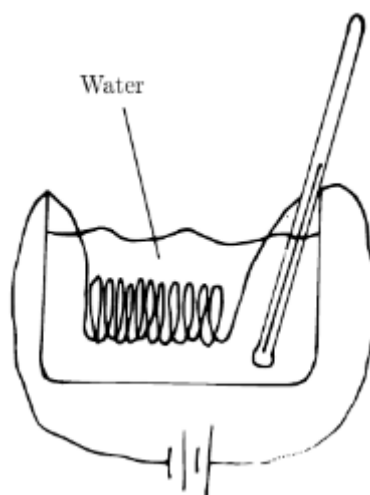


Figure 3.13: An Electric Water Heater

Clean Up Procedure

1. Remove the waste products and dry the water on the table.
2. Return all materials to their proper places.

Discussion Questions

1. What kind of energy is being produced?
2. What kind of energy is being converted?

Notes

The electric heater converts electrical energy into heat energy. It can be used to boil water or other liquids, or to heat houses. The larger the coils are, the more efficient the heater will be.

3.7.5 Fuse

Learning Objectives

- To understand the effect of a strong electric current on a wire of high resistance
- To understand the use of a fuse in electrical devices and installations

Background Information

When a strong current is passed through a wire of high resistance (depending on the material, area and length), some of the electrical energy is converted into heat energy. If enough heat is produced, the wire burns and stops conducting electricity, breaking the circuit. This device can be used to protect electrical devices like radios or computers from electrical surges. If placed before all the components in a circuit, this thin wire, called a fuse, will break if too much current is passed through the circuit.

Materials

Power source, wires, two small nails, small piece of wood, metal foil (from Blueband container, wrapper, etc.)

Preparation Procedure

1. Hammer the nails into the wood about 5 cm apart.
2. Connect wires to each of the nails.
3. Place a thin strip of foil between the nails, bending it around the nails to secure it.

Activity Procedure

1. Connect the wires to a power source to complete the circuit.
2. Observe the effect of the current on the foil when a large current is passing.

Results and Conclusions

If the source is powerful enough, it will cause the foil to heat and eventually burn, breaking the circuit. It will be seen that the circuit will work at first, but then the foil will burn. Foil has a very small cross-sectional area compared to that of a wire, so it has a low tolerance for current. If too much current passes through the foil, it will burn away. This is essentially how a fuse works in a radio or other electrical device.

Cleanup Procedure

1. Disconnect the wires from the battery.
2. Dispose of the burnt fuse and return all materials to their proper places.

Discussion Questions

1. What causes the fuse to burn?
2. Why would a fuse be useful in an electrical device?

Notes

It is best to use a rheostat in this circuit. Begin with a high resistance on the rheostat; slowly decrease it so that the foil is taking more of the voltage. As the voltage is increased, the foil will eventually burn as its resistance reaches a maximum. You can find fuses in most electrical devices; show these in class after performing this activity.

3.7.6 Creating a Leclanche Cell.

Learning Objectives

- To describe the production of electric current by an electrochemical cell
- To construct a simple electrochemical cell

Background Information

A cell converts chemical energy to electrical energy. We know cells as batteries or accumulators.

Materials

Many lemons, zinc plate and carbon rod from a dead dry cell battery, connecting wires, galvanometer, bulb

Hazards and Safety

- The black powder found in the dry cell is poisonous. The black powder will also corrode metal – wash all tools well that touch the powder.
- The outer case of the dry cell battery can be quite sharp – take care when opening.

Preparation Procedure

Open a dry cell battery and extract the inner shell of zinc metal and the central carbon rod.

Activity Procedure

1. Make two holes in each lemon then insert the carbon rod and zinc plate in the holes.
2. Connect one lemon with the galvanometer and then add more in series. Note changes in the galvanometer.
3. Arrange the lemons in series with the switch and bulb using connecting wire.

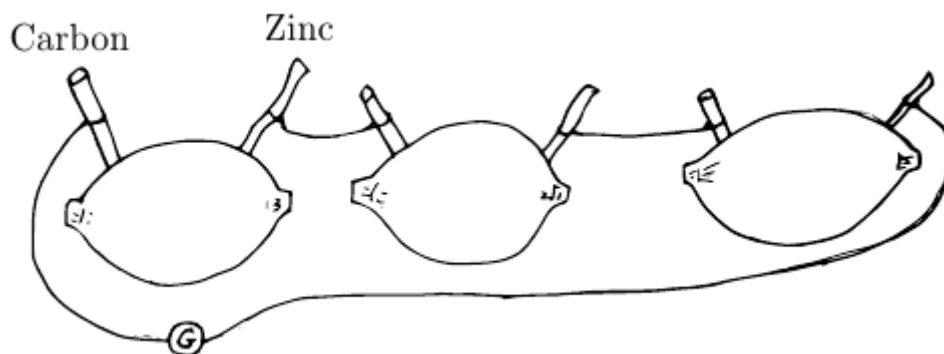


Figure 3.14: Building a Leclanche Cell

Results and Conclusions

With one lemon connected to the galvanometer a deflection will occur. The deflection will increase with the number of lemons arranged in series. After completing the circuit with enough lemons, the bulb will light up. This shows that a lemon can be used to produce a wet cell known as Leclanche cell.

Clean Up Procedure

1. Collect lemons and throw them in the dust bin. Make sure that people and animals do not eat the used lemons – they will contain poisonous residual manganese (IV) oxide from the battery and an unhealthy amount of zinc.
2. Put other materials in their respective places

Discussion Questions

1. Explain your observations of the completed circuit.
2. In the absence of lemons what other materials can be used to create the Leclanche cells?

Notes

Electric current can be produced from different sources (cells). There are dry and wet sources of electric cells. Wet cells can be made from natural fruits and foods such as lemon, Irish potatoes and salts which produce electric current based on the principle of Leclanche cells.

Chapter 4

Physics Activities for Form IV

4.1 Waves

4.1.1 Construction and Use of Slinky Spring

Learning Objectives

- To construct a slinky spring
- To observe the propagation of transverse and longitudinal waves

Background Information

A mechanical wave is the oscillation of particles in a medium, either side-to-side or back-and-forth along the direction of the wave's motion. A transverse mechanical wave is produced when particles oscillate side-to-side as on a guitar string. Its crests and troughs can be seen clearly. A longitudinal wave is produced when particles oscillate back-and-forth as passengers on a bus that stops and starts repeatedly. It can be seen because of the alternating compressions and rarefactions along the wave.

Materials

Two (2) m of flexible steel or copper wire, long cylindrical object (rod, stick) at least 3 cm diameter

Hazards and Safety

- Every spring has a maximum length that it can be stretched. If you stretch it beyond this point, it will not work again. Don't stretch the slinky too far.

Preparation Procedure

1. Collect all materials.
2. Hold one end of the wire against the cylindrical object.
3. Use your other hand to coil the wire around the cylinder, keeping the coils close together. When you finish coiling all of the wire along the cylinder, you should have a slinky spring.

Activity Procedure

1. Have one student hold one end of the spring.
2. Hold the other end with your hand and stretch the slinky slightly so that the coils separate.
3. Hold the slinky flat against the floor.
4. Move your end of the slinky quickly from side to side (the student should keep her end stationary). Observe the motion of the slinky.

5. Move your hand quickly back and forth, alternately pushing and pulling the spring. Observe the motion of the slinky.
6. Move your hand quickly to one side and then back to the center only once. Observe the progression of the wave along the slinky.

Results and Conclusions

Students will see that a transverse wave progresses by alternating crests and troughs as the points on the slinky oscillate back and forth perpendicular to the direction of the wavefront. Students will see that a longitudinal wave progresses as points on the slinky alternately push and pull each other in the direction of the wavefront. Students will see that a single transverse wave (one crest and one trough) is reflected on the opposite side, or that the crest and trough trade places when reflected. Students should understand that a wave is caused when particles oscillate.

Clean Up Procedure

Return the slinky to its proper place.

Discussion Questions

1. What is the type of wave produced when you move your hand from side to side? Describe this wave.
2. What is the type of wave produced when you move your hand back and forth? Describe this wave.
3. When there is only one wave crest moving along the slinky, how is it reflected at the opposite end?

4.1.2 Speed of Sound in Air

Learning Objectives

- To understand the relationship between a wave's frequency, speed and wavelength
- To calculate the speed of sound in air using a resonance tube

Background Information

A wave's speed or velocity is directly related to the wave's frequency and wavelength. If the wavelength and frequency can be determined, the speed can be calculated easily. We can use a resonance tube or sonometer to find the wavelength and frequency of a wave, therefore allowing us to calculate the speed of the sound wave in that medium.

Materials

Resonance tube (this can be made: see the activity about constructing a resonance tube in this book), tuning fork or wind instrument like a flute or recorder, water, metre rule

Hazards and Safety

- If you are using tuning forks, do not hit them on a table or any other hard object. Over time, this will damage the tuning forks and changes their frequencies until they are no longer useful. Instead, hold the middle of the handle and hit one of the fork's prongs on the sole of your shoe or any other hard rubber object.

Preparation Procedure

1. Set up the resonance tube with water.
2. Place the metre rule next to the resonance tube so that the 0 cm mark is at the top of the resonance tube.

Activity Procedure

1. Use a tuning fork or flute to make a single musical note.
2. Place the fork or flute over the resonance tube and adjust the water level until the resonance can be heard in the tube. The note produced by the fork or flute will be heard at the top of the tube when the water is at a certain level.
3. Record the distance between the water level and the top of the tube at the level when the water reaches a level where resonance can be heard.
4. Also record the frequency of the note. If you are using tuning forks, the frequency is written on the handle. If you are using a flute, the frequency depends on the note you are playing. A table of musical notes and their frequencies can be found in any textbook. The easiest to use is A, which has a frequency of 440 Hz.
5. Use your values of length (wavelength) and frequency to calculate the speed of sound in the tube.
6. Repeat these steps for several notes and compare your values of speed of sound.

Results and Conclusions

It will be seen that the product of wavelength and frequency will be almost the same. This is because the speed of sound in air is constant (depending on humidity and density). Therefore, the product of wavelength and frequency must be constant. As frequency increases, the wavelength (the length of the tube above the water level) decreases.

Clean Up Procedure

1. Empty the water from the resonance tube.
2. Return all materials to their proper places.

Discussion Questions

1. What was your average value for the speed of sound in air?
2. As the frequency of the musical note increased, did its wavelength increase or decrease?
3. If the speed of a wave remains constant, what is the relationship between wavelength and frequency of a wave?

Notes

There is room for error in this experiment because you are trying to measure length as the water level is moving. Also, the flute or other instrument you are using to create a note may not be perfectly in tune and so may have a slightly different frequency. Do several experiments in order to find a consistent value for the wavelength.

4.1.3 Bottle Sine Graph

- Preparation time: 5 minutes
- Materials: Empty water bottle, string (approximately 0.5m), water
- Construction: Remove the cap of a water bottle and make a small hole in the center of the bottom with a syringe needle or a nail. Tie a string around the top of the water bottle.
- Procedure: Fill the water bottle. Swing it as a pendulum from left to right while walking forwards. Water will pour out from the bottom of the water bottle in a thin stream, leaving a wet mark on the floor, which creates a graph of its position.
- Theory: As you walk forward, you cause the forward direction to be the time axis. The bottle swings left to right, leaving a watery record of where it has been. Because a swinging pendulum executes simple harmonic motion, this demonstration allows us to see that simple harmonic motion has the shape of a sine curve.

4.1.4 Construction of a Ripple Tank

Learning Objectives

- To construct a ripple tank

Background Information

A ripple tank uses a container or shallow water to create waves and observe their behavior. A light source projects the shadow of the waves onto the paper below so that all behavior at obstacles and sources can be seen clearly.

Materials

pane of glass 45 cm by 45 cm, four pieces of wood 50 cm long and 4 cm thick, nails or screws, putty or caulk, small ball of plastic or rubber, stiff wire, small motor from a car stereo or other device, connecting wires, two D-cell batteries, four thin pieces of wood about 30 cm long, two thin pieces of wood about 50 cm long, various small pieces of straight wood, glue

Preparation Procedure

1. Obtain the 45 cm x 45 cm piece of glass.
2. Make a groove 1 cm thick along one side of each of the four pieces of wood.
3. From the groove on each piece of wood, cut the wood back at a 45-degree angle.
4. Fit the pane of glass into the grooves and join the pieces of wood at the corners with nails or screws. It should resemble a window frame.
5. Use caulk or putty to secure the glass to the wood frame so that water cannot pass.
6. Make or find a small ball of rubber or plastic (no more than 2 cm diameter).
7. Bend a 6 cm piece of wire into an L shape.
8. Attach one end of the wire to the small ball.
9. Along two opposite sides of the frame, attach two pieces of wood 30 cm tall vertically. These should be about 10 cm from the side and directly across from each other.
10. Attach the two vertical pieces of wood at the top with the 50 cm piece of wood. You should now have a beam across the ripple tank.
11. Attach the motor to a piece of wood 30 cm long. Try to balance the motor so that the piece of wood stays flat.
12. Attach the ball and wire to one side of the piece of wood just under the motor. If the wood is flat, the wire should extend out and down.
13. Suspend the wood and motor from the beam with thread so that the ball rests about 1 cm above the glass pane.
14. Connect the terminals of the motor to connecting wires and extend these wires up to the beam.
15. Attach two D-cell batteries to the beam so that the connecting wires can be easily attached.
16. Glue a screw to the motor so that it vibrates when it spins.

Activity Procedure

Set up the ripple tank with water, a light source and plane paper to check that it works.

Results and Conclusions

The motor on the hanging bar provides a vibration, which in turn produces waves in the water. Different objects can be attached to the hanging bar to produce different types of waves, and the waves can be seen clearly on the paper under the tank.

Clean Up Procedure

1. Disconnect the wires.
2. Remove the water from the ripple tank.
3. Return all materials to their proper places.

Discussion Questions

1. Why is it necessary to attach an object to the motor?
2. What is the shape of a wave produced by the ball?
3. What is the shape of a wave produced by a ruler?

Notes

It is easier to ask a carpenter to make this. Bring the glass to the shop and describe the construction of a ripple tank. The motor can be found easily in broken electrical devices.

4.1.5 Behaviour of Waves

Learning Objectives

- To demonstrate and explain the reflection, refraction, diffraction and interference of waves

Background Information

The periodic mechanism which transfers energy from one point to another is called a wave. There are two types of waves: mechanical and electromagnetic. While these are produced differently, they share similar properties of reflection, refraction, interference, diffraction, etc. Reflection occurs when a wave hits a barrier and reverses or changes its direction. Refraction occurs when a wave passes from one medium into another and changes its speed and direction. If the wave is allowed to pass only through a small opening, it will undergo diffraction which changes the shape of the wave. If two small openings are used, the two diffraction patterns will pass over each other, forming interference.

Materials

Ripple tank (see the activity for constructing a ripple tank), two D-cell batteries, large white paper(flip chart), water, torch, various objects to place in the water

Hazards and Safety

- Use a small source of power to run the motor.

Preparation Procedure

Create the ripple tank as described in the construction activity.

Activity Procedure

1. Place the ripple tank between stools.
2. Pour some water into the ripple tank so that it is about 1.5 cm deep.
3. Place the dipper on the wood beam; it should just touch the surface of water.
4. Connect the motor to the batteries.
5. Place the white screen/paper underneath the stools.
6. Light a torch above the ripple tank and observe the waves formed.
7. Exchange the dippers so as to obtain spherical and plane waves. Using these waves you can now observe the different behaviours of waves, such as reflection, refraction, diffraction and interference. You can place obstacles in the water to see diffraction and interference.

Results and Conclusions

The manufactured and mounted ripple tank can be used to study the behaviour of water waves. For instance, when a round ball is used, a circular wavefront is formed, while a ruler produces a plane wave. If a barrier is placed in front of the wave, the wave is reflected back on itself or in a new direction, depending on the shape of the barrier. When the wave passes between two barriers, it diffracts and changes form. A plane wave becomes a circular wave, and two diffracted waves interfere to form points of constructive and destructive interference.

Clean Up Procedure

Dismantle the ripple tank and remove the water after the experiment. If there is any water, it should be dried up.

Discussion Question

Besides the ripple tank, what other method can be used to propagate the water waves?

Notes

A ripple tank can be used to demonstrate the properties or behaviour of a wave as described above. However, you can also use it to show the relationship between wavelength and frequency, and that the speed of a wave is constant in one medium.

4.1.6 Sound in a Medium

- Preparation Time: half hour
- Materials: Large jar with lid, glue, bicycle pump needle, string, cell phone, vacuum pump (see Reverse Pump)
- Procedure: Poke a small hole in the jar lid and insert the pump needle with at least 1 cm above the lid. Secure the needle with glue, rubber, whatever you need to ensure that it is airtight. Program your cell phone to play something repeatedly at full volume. Hang the phone by the string in the jar so that it is not touching the sides; close the lid on the jar (if the glue is dry) and listen for the phone. You should still be able to hear the phone. Attach the vacuum pump from Reverse Air Pump to the needle on top of the jar and start pumping out the air. You should hear the sound of the phone decrease until it is not heard at all.
- Theory: Sound requires a medium to travel. The denser the medium, the faster sound will travel. Without a medium, there is nothing to vibrate and therefore no sound. By removing the air in the jar, you are removing any material medium and the sound will not be able to travel beyond the cell phone speaker itself.

4.1.7 Wave Propagation in Solids

Learning Objectives

- To observe the propagation of vibrations through a solid
- To understand how sound is transmitted through a medium

Background

Sound is a pressure wave, which means it can travel through any medium so long as the molecules in that medium are free to vibrate. In fact, this is every medium, though air and water transmit sound much more efficiently than solids. However, solids can transmit waves, as in the case of a guitar, which uses vibrating strings to produce sound waves. If a wave is produced on one end of a string, the string transmits the energy of that wave to the other end.

Materials

Spoon, string 1 m

Preparation Procedure

1. Tie the spoon into the middle of the length of string so that it will hang freely when you hold the string ends.
2. Have a student hold the string ends to his or her temples or the bone just under his or her ears as you strike the spoon with a pen or other object.

Results and Conclusions

The student will hear a clear sound when the spoon is struck. The vibrations of the spoon propagate up the string and into the student's head. Bone, especially around the temples and outer ear, resonates readily in response to sound.

Cleanup Procedure

Untie the string and return all materials to their proper places.

Discussion Questions

1. What causes the sound to be loud when the string is held to your head?
2. Why does the bone in front of your ear transmit vibrations more easily than other bones?
3. What is the purpose of the string in this activity?

Notes

The bone in front of your ear is the most resonant bone in the body, so it is ideal for transmitting vibrations and hearing sound. The vibrations from the spoon are transmitted easily through the string and your skull, which you hear as a sound.

4.1.8 Sound Amplifier

Learning Objectives

1. To understand the amplification of mechanical waves
2. To observe the amplification of sound in a hollow cavity

Background Information

Everything can vibrate. If a wave drives the vibration of another object or surrounding air, we say that the wave is amplified as its amplification has increases with the resonating body. This principle is used when marimbas are played inside gourds.

Materials

Plastic water bottle, string or thread, match or small stick

Preparation Procedure

1. Make a small hole in the bottom of the bottle.
2. String one end of the thread through the hole.
3. Tie the end on the inside of the bottle to the match or small stick so that it cannot be pulled back through the hole.
4. Leave the length of string hanging out of the bottom of the bottle

Activity Procedure

1. Pull the string taught and have a student hold the top of the bottle.
2. Pluck the string.
3. Try plucking just the string and then the string and bottle together.
4. Try plucking the string with the cap on or off.
5. Observe the various effects of the sound.

Results and Conclusions

When the string is plucked by itself, the sound it creates is very small. However, when the string is attached to the bottle, the sound is louder. The vibration of the string causes the bottle itself to vibrate. Rather than hearing just the sound of the string vibrating, we hear the sound of the bottle, which produces noticeably greater amplitude.

Cleanup Procedure

Return all materials to their proper places.

Discussion Questions

1. What was the difference between the sound produced by the string and the sound produced by the string and bottle together?
2. What causes the sound you hear to be louder?
3. What was the difference in sound between using the cap and not using the cap?

Notes

This effect can be difficult to detect if the bottle is small or if the frequency of the string is much higher or lower than that of the bottle. Vary the length of the string until you get clear resonance.

4.1.9 Musical Rubber Strip

- Preparation time: none
- Materials: a length of rubber strip
- Procedure: Stretch the rubber strip taut and pluck it. It should produce a musical note. Demonstrate that increasing the tension but keeping the length the same gives a higher note. Demonstrate that keeping the tension the same but increasing the length gives a lower note. Allude to tuning a guitar, which many students will have seen in church.

4.1.10 Musical Soda Bottle

- Preparation time: none
- Materials: 2 soda bottles of the same type and size, water
- Procedure: By blowing over the top of a soda bottle it is possible to create a musical note. Add water and blow again several times to demonstrate that the higher the water level in the bottle, the higher the pitch of the note produced. Empty one bottle entirely, and in the other add enough water to achieve a depth of approximately one millimeter. Ask for a volunteer to help at this point. Blow over one bottle to produce a note. Ask the volunteer to blow over the other bottle to produce a note. Point out that the two notes sound almost identical. Now blow over your bottle at the same time as the volunteer. A beat frequency should be heard.
- Theory: Because the soda bottle is open at the top and closed at the bottom, it acts as a half-open pipe, and produces notes with a wavelength of four times the height of the column of air in the bottle. Thus, by adding water, we shorten the height of the column of air, shortening the wavelength and increasing the frequency. When two soda bottles with slightly different heights of water are blown, they produce slightly different frequency notes, and so a beat frequency can be heard.

4.1.11 Doppler Whirl

- Preparation time: 5 minutes
- Materials: string of length 1 or 2 meters, mobile phone, sock
- Procedure: You will need a mobile phone that can be programmed with user generated ring tones. Program a ring tone that consists of one note repeated for a period of at least 20 seconds. Demonstrate to the class that the ring tone consists of just the one note. Now place the phone in the sock, tie it to the string, and swing the string rapidly around your head so that the phone moves in a large circle around you. As the phone moves towards the students, they will hear the pitch increased, and as it moves away, they will hear the pitch decreased, because of the Doppler Effect. Note that for the person swinging the phone, their phone neither approaches nor moves away from their ears, but circles around them. For them, there will be little or no discernable Doppler Effect.
- Theory: Sound waves are pressure waves, so they depend on the medium through which they travel as well as the motion of the source. If the source of sound is moving, the sound waves in front of the source become compressed (much like they are being pushed), which translates as higher frequency or shorter wavelength. The sound waves behind the source are extended (much like they are being stretched behind), so the frequency is lower or wavelength longer. A higher or lower frequency is heard as higher or lower pitch.

4.1.12 Bartons Pendulums

- Preparation time: 5 minutes
- Materials: Several pieces of string, one large weight (approximately 0.5kg), several small weights

- Construction: Suspend a piece of string horizontally between two fixed objects. Hang the various weights from different points along the string. Each of the small weights should hang from a string of different length. The large weight should hang from a string of similar length to one of the small weights.
- Procedure: Start the large weight swinging. Tell the students to take note of how this affects the behavior of the smaller weights. You should find that the small weight hanging from a string of the same length as the large one exhibits the largest oscillation.
- Theory: The large weight acts as a driving force. Each small weight can swing as a simple harmonic oscillator. We know that a driving force will have the largest effect on a simple harmonic oscillator if the driving force is operating at the natural frequency of the oscillator. When the lengths of the two pendulums are the same, their frequencies are the same. You should be able to get harmonics going if you measure the lengths accurately (see string instruments).

4.1.13 Transverse Waves on a String

- Preparation time: depends, but in any case a long time
- Materials: Show a design to a fabricator/welder and let them decide this. You can supply thin string, a small pulley, and a weight.
- Construction: Using whatever driving device available. (I used a bicycle, like the men who pedal a bike wheel to drive a grinder), drive a piston with a very small amplitude (1 mm is fine). Whomever you find to do this will have their own way of doing this, but the easiest thing to do is just an offset axle, where the axle being driven jogs to one side a small amount. When you have a piston which can be driven at a very small amplitude by a bike wheel, car motor, etc., attach a string to the top of the piston and hang the other end of the string over a pulley about two meters (varies) away, suspended by a weight. Now you have a string that is driven at whatever frequency you choose.
- Procedure: Pedal the bicycle or turn on the motor and increase the speed (frequency) until you see the fundamental on the string, a standing wave with one antinode and two nodes the ends of the string. Chat about that for a minute, then increase the frequency until you get the first harmonic, then the second harmonic, etc., until you run out of juice in one way or another.
- Variation: Drive the string with a speaker connected to a single-tone generator. This could be a simple circuit, in fact, allowing you to combine two of the biggest physics topics ever! Use a rheostat to vary the frequency of the circuit, ergo the speaker.
- Theory: Every string has a natural frequency at which it will vibrate with ease, meaning with the greatest possible amplitude. This is called the fundamental (and is directly related to the fundamental as known in music theory, since all harmonics which follow are the octave, 5th, 4th, 3rd, etc.) and is the simplest standing wave. Doubling the frequency will give you the 1st harmonic (octave), which is the next simplest standing wave. All harmonics which follow are closer in frequency and become gradually more complex, but might be difficult to do on this machine unless you have a super-high gear ratio on the bike wheel or a speedy car motor.

4.1.14 Construction and Use of a Simple Sonometer

Learning Objectives

- To construct and use a simple sonometer
- To explain the propagation of waves on a string

Background Information

Sound waves can be produced when a string vibrates. The frequency at which the string vibrates depends on several things, like the length of the string and the material. A sonometer consists of a metal string which can vibrate between two supports. This is a standing wave and is driven by a tuning fork or other source of sound. If the natural frequency of the string (the frequency it will have because of its length and material) is the same as the tuning fork, the string will vibrate.

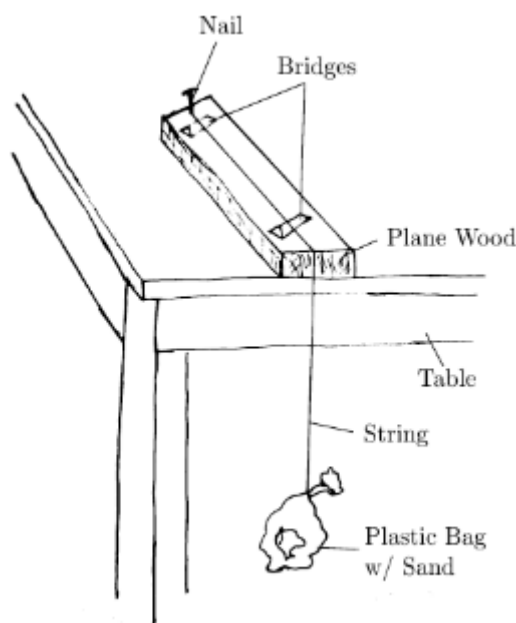


Figure 4.1: Construction of a simple sonometer

Materials

Soft wood board about 80 cm long, thin wire (steel works best) or string, nails, 2 small triangular pieces of wood(pegs) or two pencils, heavy stone

Preparation Procedure

1. Place the soft wood on a table.
2. Fix a string/wire with a nail to one end of the soft wood.

Activity Procedure

1. Hang the heavy mass of a stone to the free end of the string/wire so that the mass hangs below the edge of the table.
2. Insert the two pegs/triangular pieces under the string/wire so as to raise the wire off the surface of the wood.
3. Pluck the string/wire between the two pegs. If the wire does not make a clear note, add mass to the end.
4. Vary the distance between the two pegs (increase and decrease) and observe the effect on the frequency of the wire/string.
5. Vary the mass hanging on the end of the wire (increase and decrease) and observe the effect on the frequency of the wire/string.

Results and Conclusions

A higher tone is heard/produced if the distance between the two pegs is reduced. A higher tone is also heard/produced if the mass is increased. The tone which is produced by the vibrating string/wire depends on its vibrating length and the tension on the string/wire.

Clean Up Procedure

Remove the mass from the string/wire.

Discussion Question

What do you hear in steps 4 and 5?

Notes

The same activity can be used to show that the frequency of a vibrating tuning fork is inversely proportional to the length of a vibrating string. It can also show that the frequency of a vibrating tuning fork is directly proportional to the tension in a vibrating string. Using different tuning forks and finding the corresponding length and tabulating the values, a graph of Frequency against Reciprocal length can be drawn and is a straight line passing through the origin. Also, wires of different diameters can be fixed on the plane wood. Collect the plane wood, nails from a nearby carpenter and it cost about Tsh. 3,000/=. Instead of heavy stones, dry sand packed in plastic bags can be used. Also, instead of two pegs you can use two pencils.

4.1.15 Determination of Resonance Frequency

Learning Objectives

- To explain the concept of resonance as applied to sound

Background Information

Every object has a natural frequency depending on its size, shape, material, etc. If a wave drives the object at its natural frequency, the object itself will begin to vibrate along with the wave. This effect is called resonance.

Materials

Fluorescent tube (tube light), thick rubber tubing, two 1.5 litre plastic water bottles, super glue, wax, tuning Fork, retort stand, bucket, water, long stick, knife, metre rule, rubber or cork, piece of cloth

Hazards and Safety

- Precautions should be taken when cutting the pipe as it will be sharp.
- Do not touch the fluorescent dust in the tube; it is poisonous.
- Use glue carefully, do not touch it with you bare fingers.

Preparation Procedure

1. Create a hollow tube from the fluorescent tube by cutting its rims off on both sides.
2. Clean the tube with a piece of cloth attached to a long stick
3. Cut the bottom 5 cm off of one of the bottles (bottle 1) and cut the top 5 cm off the top the other bottle (bottle 2).
4. Make a hole in the cap of both bottles.
5. Attach one end of the pipe with the glue and wax to the inside top of bottle 2. Insert the rubber tubing through the holes of both bottle caps.
6. Hold the tube with retort stand together with a metre rule upright(vertically)
7. Raise bottle 1 vertically until you have created a U-shape.
8. Pour water into bottle 1.

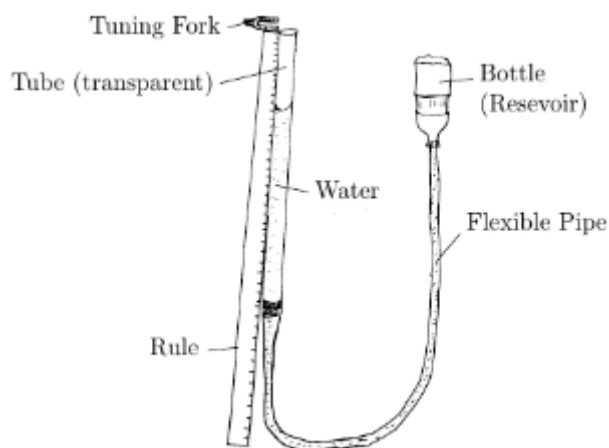


Figure 4.2: Construction of a resonance tube

Activity Procedure

1. Strike the tuning fork with the soft material such as rubber
2. Place the tuning fork at the top of the tube
3. rise and lower the water level in the tube by changing the vertical position of bottle 1
4. Repeat for the other two more different tuning fork
5. For each tuning fork note the fundamental note and overtone.

Results and Conclusions

Student should hear the tube resonating at two or more water levels. The lowest water level is the fundamental and each smaller water level are higher harmonics. Student should understand that: The length of the tube from the water to the top can be used to calculate speed of sound in air. Resonance frequency occurs when the natural frequency of the air column is equal to the forced frequency from the tuning fork.

Clean Up Procedure

1. Water from the pipe and reservoir pour in the bucket
2. Keep the system on the shelves

Discussion Questions

1. Design another way to perform the same experiment.
2. Think of material that can be used instead of fluorescent tube and flexible pipe

Notes

The vibrating air column in the pipe produces a loud sound when the node of a waveform is at a closed end and the anti-node at the open end. At this point the vibrating air is at resonance with the vibrating tuning fork is held at the open end. Teacher should also know that: This experience can be used to determine the velocity of sound in air. In absence of the listed materials using the tub in a bucket of water will also work.

4.2 Electromagnetism

4.2.1 Spinning Compass

- Preparation Time: 1 minute
- Materials: batteries or other power supply (the stronger the better), wire, switch or bulb, compass (the pin in the compass demo will do)
- Procedure: Connect the wire and switch/bulb to the battery or power source so that there is a strong current running through the wire. Run the wire over the compass in a straight line. If the current is DC, the compass will turn to face a new direction. If the current is AC, the compass will spin or waver back and forth quickly.
- Theory: Current in a straight wire creates a magnetic field around the wire in concentric circles. The direction of the magnetic field can be found using the first right-hand-rule. DC current produces a steady magnetic field in one direction (circular), so the magnet of the compass will align itself with the field. AC current produces a constantly shifting magnetic field, so the compass will spin, trying to align itself as the field changes direction.

4.2.2 Construction of Galvanometer

Learning Objectives

- To construct a galvanometer
- To explain the uses of a galvanometer
- To explain the mode of action of a galvanometer

Background Information

A galvanometer uses the principle of electromagnetism to detect the presence of electric current. Whenever there is a flow of current in a wire conductor, magnetic fields are created around it. The magnetic fields produced are perpendicular to the direction of current and concentric around the current itself. For this reason, a coil produces a strong magnetic field through its center, and a magnet suspended in that coil will pivot to show the direction of the magnetic field. A suspended magnet, when not placed in another field, will always face in the direction of the earth's magnetic field.

Materials

Magnet; sewing needle, pin or the metal part of a syringe needle; coated copper wire or speaker wire; dry cells; water; empty water bottle; small piece paper; knife, connecting wires

Preparation Procedure

Cut the empty water bottle so that the bottom 3 cm act as a shallow dish.

Activity Procedure

1. Instruct students to rub the pin/needle on the magnet several times in one direction without scratching it. This is magnetization by stroking and may take a minute depending on the strength of the magnet.
2. Have students coil the wire around the water bottle dish about 20 times and secure it with cello tape so that it is secure.
3. Use a knife or razor blade to scrape at least 2 cm of the insulating coating off of each end of the copper wire.
4. Have students pour water into the dish so that it is about half full.
5. Stitch the pin into a small piece of paper so that the pin is secure against one side of the paper.

6. Place the pin and paper gently onto the surface of the water in the dish so that it floats. The pin will rotate on the water to point North and South because it is a magnet and is following the earth's magnetic field.
7. Use connecting wires to connect the dry cells to both ends of the coiled wire. Observe the reaction of the needle.

Results and Conclusions

The needle/pin will rest pointing in the N-S direction. After connecting the dry cells, the needle/pin deflects because the magnetic field produced by the coil is stronger than the earth's field. The galvanometer detects whenever there is the flow of current in the wire.

Clean Up Procedure

1. Pick up magnetized pin/needle, keep it in a safe place. Pour the water from the cap.
2. Return all materials to their proper places

Discussion Questions

1. What causes the needle/pin to deflect?
2. Why does the pin face one direction when there is no current in the coil?
3. Use the Left Hand Rule to predict explain which end of the pin/needle is North and which end is South.

Notes

The stitched magnetized pin should rest parallel to the coiled wire so that it can be easy to observe the deflection. The pin will turn until its direction is perpendicular to the turns in the coil. Also, the paper on which the pin is resting will eventually sink, so you will need to replace it.

4.2.3 Force on a Current-Carrying Wire in a Magnetic Field

Learning Objectives

- To observe the deflection of a current-carrying wire in a magnetic field
- To use the Left Hand Rule to predict the direction of deflection or force on a current-carrying wire in a magnetic field
- Students will be able to explain the relationship between motion, electric current and a magnetic field

Background Information

Electromagnetism is the relationship between three quantities: electric current, magnetic fields and motion. When two of these quantities are present and perpendicular to each other, the third quantity is created. When electric current is running perpendicular to a magnetic field, a force is produced which pushes the wire in a third perpendicular direction to the current and field. The Left Hand Rule can be used to predict the direction of force and therefore the direction that the wire will move.

Materials

Speaker magnet from a broken radio or speaker, thin copper wire about 20 cm long, books or other objects to use as supports, two stones, two clothes pegs, knife, connecting wire, two D-cell batteries, white paper, pen.

Preparation Procedure

1. Rip off a small piece of paper the size of the magnet or smaller.
2. Use a straight-edge to draw a grid on the paper like graph paper.
3. Place the speaker magnet flat on the table so that one of the poles is facing up.
4. Stack books or other solid objects to either side of the speaker magnet to the same height of the magnet.
5. Scrape the ends (about 2 cm) of the copper wire so that the conductor is showing.
6. Stretch the copper wire across the magnet so that it is resting on top of the books on either side but not quite touching the magnet.
7. Secure the copper wire on either end with clothes pegs.
8. Place stones or other heavy object on the clothes pegs so that the wire is pulled tight and cannot move easily.
9. Attach connecting wires to each end of the copper wire.
10. Place the paper with the grid on top of the magnet just below the copper wire.

Activity Procedure

1. Position yourself directly over the copper wire and magnet so that the wire's position in relation to the grid is clearly visible.
2. Connect the connecting wires to the battery terminals to start a current in the wire.
3. Observe any movement by the wire.

Results and Conclusions

It can be seen that the wire is deflected to one side the current is allowed to pass through it. When the current is disconnected, the wire returns to its original position. This deflection is the result of the force on the wire which is produced by a combination of the electric current and the magnetic field. If the direction of current is switched, the direction of the wire's deflection is also switched.

Clean Up Procedure

Disconnect all wires and return all materials to their proper places.

Discussion Questions

1. Explain the the sources and directions of both the magnetic field and the electric current that are present.
2. In what direction is the wire deflected when the circuit is completed?
3. Use the Left Hand Rule to find the direction of the magnetic field assuming that the direction of force and the direction of electric current are known.

Notes

This activity demonstrates the same concept which powers a motor, namely that an electric current running perpendicular to a magnetic field feels a perpendicular force. The deflection of the wire, while small, is observable and obviously in a direction perpendicular to both the current and magnetic field. If the direction of the field is known, students can use the LHR to predict the direction of motion. If the direction of the field is not known, students can find it by observing the direction of force and then using the LHR to find the magnetic field. It will be seen that the wire vibrates when it first deflects. This is simply because of the sudden motion to one side, not because the current is producing a wave. However, if alternating current is used, it will be seen that the repeated back-and-forth deflection of the wire does produce a standing wave. If an AC source is available, this is a good demonstration of standing waves.

4.2.4 Mapping Induced Magnetic Field from a Coil

- Preparation Time: 15 minutes
- Materials: power source, length of wire about 50 cm, bulb or switch, cardboard, scissors, iron wool
- Procedure: Cut the cardboard so that a single tab about 10 cm long and 3 cm wide sticks out from the larger piece. Notch this tab every 1 cm on either side and coil the wire around the tab, keeping it in place in the notches. Connect the wire to the switch/bulb and power source so that there is a strong current in the wire. Use the iron wool to sprinkle iron filings onto the tab inside the wire coil. The filings will create a single solid line the length of the coil, spreading out at each end. @Theory: A coil of wire creates a single, strong magnetic field inside it in one direction. At the poles (for it is indeed an electromagnet) the field spreads out again. You can use the 2nd Right Hand Rule to find the direction of the field. The filings will align themselves with the strong field inside.

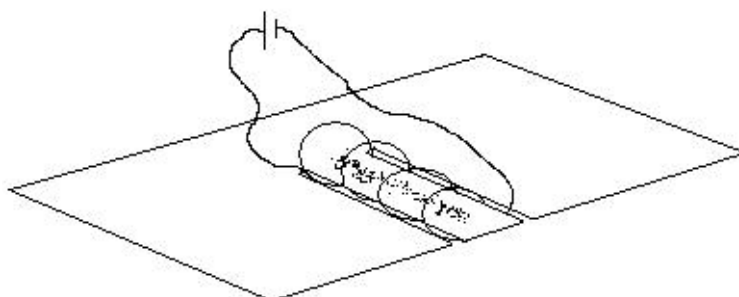


Figure 4.3: Induced magnetic field in a coil

4.2.5 Mapping Induced Magnetic Field from Wire

- Preparation Time: 10 minutes
- Materials: power source, length of straight wire, switch or bulb, paper or cardstock, iron wool
- Procedure: Cut a hole in the paper or cardstock so that the wire passes vertically through the middle of the paper so it lies flat. Connect the wire, hanging vertically, to the switch/bulb and power source so that there is a strong current in the wire. Using your thumb and forefinger, rub the iron wool to create iron filings, distributing them widely onto the paper. The filings should form concentric circles around the wire.
- Theory: Current in a straight wire produces a magnetic field around the wire (use the Right Hand Rule to find the direction) in concentric circles. At the surface of the paper, the magnetic field is a series of circles and the filings will align themselves with the field.

4.2.6 Creating a Current in a Wire

- Preparation Time: 5 minutes
- Materials: Wire about 50 cm, ammeter or sensitive bulb, strong magnet
- Procedure: Coil the wire to create a solenoid, connecting the free ends to the ammeter or bulb. Use a bar magnet or one pole of a horseshoe magnet and pass it through the solenoid (if you are using a speaker magnet, you will need to adjust the coil to accommodate the odd shape). As the magnet passes through the coil, the ammeter or bulb will show a current. When the magnet stops or leaves the coil, the current will cease.

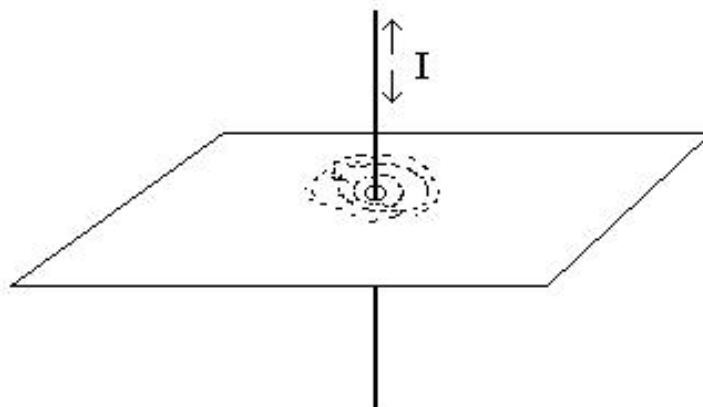


Figure 4.4: Induced magnetic field in a wire

- Variation: If you have a very strong bar magnet, wrap the wire around a syringe multiple times and connect the ends to an ammeter. Place a small wad of cloth in the bottom of the syringe and insert the magnet. Cover the opening with your thumb and shake. The wad and your thumb will protect the magnet as it bounces back and forth, creating an alternating current in the coil.
- Theory: A magnetic field that moves perpendicular to a conductor will induce a current in that conductor. When the conductor is a coil and a bar magnet is passed through it, a significant current is induced and should be enough to light a sensitive bulb or deflect the needle in an ammeter. The current will be stronger if the number of coils is increased or if a stronger magnet is used.

4.2.7 Simple Motor

Learning Objectives

- To use Fleming's left-hand rule to determine the motion of the coil in the circuit
- To explain the principle of magnetic induction, which explain the motion of the rotating coil

Background Information

The magnitude of the force acting on a current loop inside a magnetic field depends on the strength of the magnetic field, the amount of current flowing through the wire and the direction of the current and magnetic field.

Materials

Insulated copper wire, cello tape, clothes pegs, magnet, dry cells, connecting wires, two pieces of magnetic materials, switch

Preparation Procedure

1. Construct a ring of copper wire with lots of loops by wrapping the wire around any circular object with the desired diameter. Tape the coils together using cello tape so that the circular object can be removed and the ring does not fall apart. Make sure that two ends of the copper wire stick out from two opposite sides of the ring.
2. Take one end of the wire and scrape off all of the insulation coating using a razor. Take the other side and ONLY scrape off the insulation coating from half the circumference of the wire.
3. Attach the two magnetic materials to two opposite sides of the speaker magnet.
4. Attach the clothes pegs to the magnetic materials and suspend the coil above the magnet by placing it between the two wire loops of the pegs.

5. Join the two dry cell together

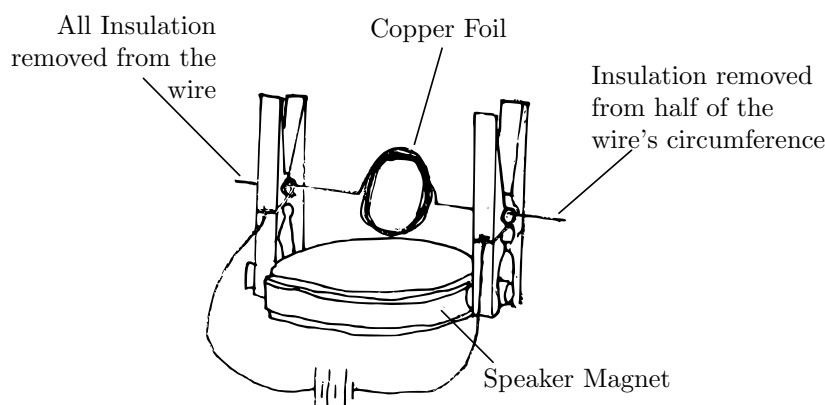


Figure 4.5: A Simple Motor

Activity Procedure

1. Connect the coils of the pegs to the terminals of the battery through the switch using the connecting wires.
2. Close the switch to observe the effects

Results and Conclusions

When the switch is on, the magnetic field applies a force to the current carrying wire following Fleming's left-hand rule and causes the loop to spin. If the current is increased the coil spins faster showing the force is proportional to the current. If the current is reversed the coil will rotate in the other direction, this is apparent from Flemming's left hand rule. If there is a stronger magnet the coil spins faster which shows the force is proportional to the magnetic field strength. If the insulation is left on the current from the battery can not flow into the wire so there will be no spinning. If all of the insulation is scratched off from both sides then the loop will not spin but will instead reach an equilibrium position where the force acting on the top and bottom of the loop are balanced.

Clean Up Procedure

Disconnect the components and keep them in their proper places.

Discussion Question

Explain the motion of the coil of current in the magnetic field. What happens when the current in wire is increased? What happens when the current is reversed in the coil? What happens when if we use a stronger magnet? What would happen if we did not scrape off the insulation coating? What would happen if we scraped off all of the insulation coating on both sides?

Notes

During the preparation of a commutator, on one end scratch around the whole wire, but on the other end only half the circumference should be scratched Magnet must be pretty strong to have an obvious effect. Make the coil with as many turns as possible.

4.2.8 Inverter: Converting DC to AC

Learning Objectives

- To explain the difference between Alternating Current and Direct Current

- To understand how to convert Direct Current to Alternating Current by changing the directing of current through a bulb or galvanometer
- To observe the effect of alternating current on a bulb or galvanometer

Background Information

Direct Current is the current produced by any battery, cell or generator. It is current which moves in one direction only through a circuit. Alternating current is the current used in a house, school, etc. to power appliances, charge batteries, etc. It is current which changes direction many times per second; in Tanzania that current changes direction 80 times per second, so we say that the Tanzanian electrical system runs on 80 Hz, or 80 cycles per second. Rectifiers are used to convert AC to DC, but to convert the other way we need an inverter which can change the direction of electric current many times per second. The easiest way to do this is to switch the terminals of the battery repeatedly.

Materials

Four (4) dry cells in the plastic wrapping, Aluminium outer coating of a dead dry cell, thin cardboard, super glue, soldering iron and flux, several small nails or screws, connecting wires, board at least 1 ft long, bulb or galvanometer, scissors, knife, retort stand with clip or alternative, small motor, horizontal pulley, rubber band, pliers, multimeter

Preparation Procedure

1. Collect all of the necessary supplies.
2. Attach the horizontal pulley near one end of the board so that it is free to rotate horizontally.
3. Attach the small motor to the board so that it is also free to rotate horizontally.
4. Attach the rubber band to the motor and pulley so that when the motor turns, the pulley also turns.
5. Connect two connecting wires to the terminals of the motor and make sure it works by connecting two dry cells.
6. On one of the dry cell packs, cut away the plastic around each of the terminals on both batteries so that the batteries can be used without removing them from the plastic.
7. Solder or glue a connecting wire from the positive terminal of one of the batteries in the plastic to the negative terminal of the other battery. If needed, glue the wire down to the plastic in the middle so that it does not stick up.
8. Glue the center battery pack on its side to the center of the horizontal pulley so that when the pulley turns, the battery pack turns on its side also.
9. Cut a small piece of thin cardboard to fit over the battery pack (about 5 cm square).
10. Glue the thin cardboard to the top of the battery pack.
11. Find the exact center of rotation of the battery pack and pulley by rotating the pulley and marking the center of rotation on the cardboard with a pen.
12. Remove the aluminium from the outside of a dead dry cell.
13. Break the aluminium into 2 equal pieces (about 5 cm x 3 cm) by bending it with straight pliers.
14. Glue the aluminium pieces to the cardboard so that there is a small space between them (so electricity cannot pass) and the hole marking the center of rotation can be seen between them.
15. Rotate the pulley again to make sure that, as it rotates, the metal plates are rotating about the axis.

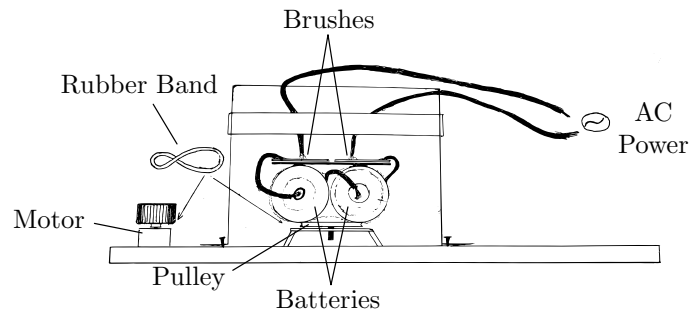


Figure 4.6: An Inverter

16. Solder or glue a connecting wire from the free end of one of the batteries in the battery pack to one of the aluminium plates. Be sure that the wire is short enough that it does not stick up or out too much.
17. Repeat this step for the other free battery terminal and the other aluminium plate.
18. Use a multimeter to make sure that all of the wire connections are complete and that the circuit can conduct from one plate through the battery pack to the other plate. Note that the circuit is not complete because of the thin gap between the metal plates (otherwise you will have a short).
19. Cut a piece of thin cardboard about 10 cm long and 4 cm wide.
20. Fold the cardboard in half the long way.
21. Cut two very small holes in the center of the folded edge about 2 cm apart.
22. Insert connecting wires into each of these holes so that each sticks out of the folded end by about 2 cm.
23. Remove the insulating from these connecting wires so that the copper ends form brush shapes and are free to bend slightly.
24. Extend the connecting wires back to a bulb or galvanometer and solder or glue the ends to the terminals.
25. Check that this circuit works with a multimeter or by connecting 2 dry cells across the brush ends.
26. If possible, connect a switch to the bulb or galvanometer.
27. Suspend the bulb/brush circuit about the rotating metal plates so that the wire brushes just touch the metal plates. If each brush is touching a different plate, the bulb or galvanometer should indicate a current.

Activity Procedure

1. Check the circuits in the inverter by turning on the motor or touching the wire brushes to the metal plates.
2. Align the wire brushes so that they rest in the thin gap between the metal plates. This will allow you to continue working or discussing without using up the battery or bulb.
3. Touch the wire brushes to opposite plates to show that a direct current is flowing and the bulb produces a steady light or the galvanometer shows a single direction of current.
4. Switch the plates that the brushes are touching to show that, again, a direct current is flowing and the bulb produces a steady light or the galvanometer shows a single direction of current opposite to the one previously seen.
5. Connect the motor to the batteries so that the system rotates under the brushes.

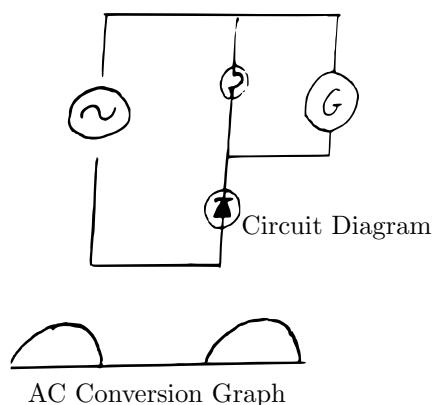


Figure 4.7: A Half Wave Rectifier

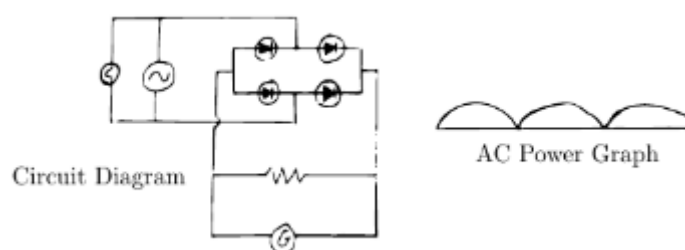


Figure 4.8: A Full Wave Rectifier

Results and Conclusions

Students will see that when the metal plates are rotating under the brushes, the bulb flickers on and off quickly or the galvanometer changes direction quickly. Students will see that the behaviour of the bulb or galvanometer is different depending on if the plates are rotating. Students will understand that the bulb flickers or the galvanometer changes direction because the direction of current is changing every time the plates switch brushes. Students will understand that the system is converting the direct current (DC) of the battery pack to alternating current (AC) in the bulb or galvanometer.

Clean Up Procedure

1. Disconnect the motor from the batteries and remove the bulb/brush circuit from the metal plates.
2. Return all pieces to their proper places.

Discussion Questions

1. What is the difference between direct and alternating current?
2. What is powering the bulb or galvanometer?
3. What is the purpose of rotating the metal plates under the wire brushes?
4. Why does the bulb flicker or the galvanometer repeatedly change direction when the metal plates are rotating under the wire brushes?
5. What type of current is powering the bulb or galvanometer when the metal plates are not rotating?
6. What type of current is powering the bulb or galvanometer when the plates are rotating under the brushes?

Notes

Normally, alternating current changes direction 80 times per second, which we cannot see with our eyes. Therefore, the difference between AC and DC is not visible in a normal household or school electrical system. In order to see the effect of AC, we need to slow down the frequency to the point where we can see the direction changing in the galvanometer or bulb.

4.2.9 Water Energy

Learning Objectives

- To construct a simple water wheel and generator
- To explain and show the conversion of mechanical energy to electrical energy by use of a generator coil
- Students will be able to show the direction of current produced by a generator

Background Information

Electromagnetism is the relationship between three quantities: magnetic force, electric current and motion. When two of these quantities are present and perpendicular to each other, the third is produced. In a motor, we use electric current in a magnetic field to produce motion: the rotation of the motor coil. In a generator, we use motion in a magnetic field to produce electric current. The structure of a motor and generator are therefore almost the same. This is the mechanism behind gas generators, wind turbines, tidal generators, and many others.

Materials

Plastic water bottle (any size), small motor from a car stereo or other device, super glue, large nail or soldering iron, heat source, 9 water bottle caps, 8 syringe needle caps, scissors, water and pitcher, connecting wires, galvanometer.

Hazards and Safety

- Be careful when melting the plastic pieces together. Melted plastic can quickly cause second degree burns. If it is easier, you can use super glue to connect the plastic pieces together.

Preparation Procedure

1. Making the water wheel: Using a hot nail or soldering iron, melt the open end of a syringe needle cap to the side of a water bottle cap to create a sort of spoon.
2. Repeat this step 7 more times to create a total of 8 identical pieces: these are the spokes and cups of the water wheel.
3. Cut the top off of a water bottle just below the lip which holds the cap making sure that the edges are even.
4. Melt a plastic cap over the cut end of the water bottle top so that the piece is closed on one end by the plastic bottle cap and open on the other end where a bottle cap would normally be screwed on.
5. Use the hot nail or soldering iron to melt 8 holes evenly around the side of the bottle cap used in step 4. Each hole should be just wide enough to admit the thin end of a syringe needle cap; you can insert a needle cap each time you melt a hole in the bottle cap, removing the needle cap before the plastic cools.
6. Insert the 8 spokes from steps 1 and 2 into the holes so that they create an 8-spoke wheel with all of the cups facing in one direction (either clockwise or anticlockwise) and at equal distances from the center.

7. Melt the plastic around each spoke in the bottle cap so that they are all secure and will not come out of the center cap.
8. Making the generator: Use a pin to make a small hole in the center of a plastic water bottle cap. Glue the top of the cap to the wheel of a motor so that the center of the cap and the center of the motor wheel are perfectly aligned. Note: if you have already made the wind generator, you do not need to complete these steps.
9. Attach connecting wires to each terminal on the motor.
10. Screw the water wheel into the motor as you would screw a bottle cap onto a bottle so that the water wheel is free to rotate about the motor's axis of rotation.

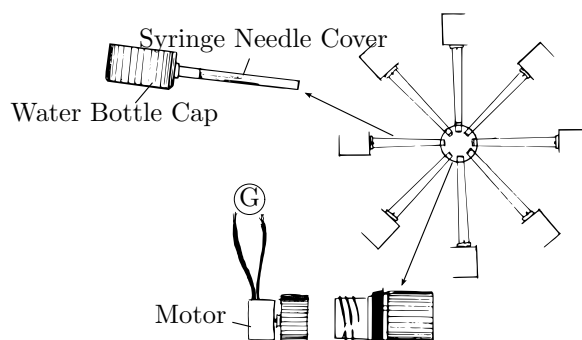


Figure 4.9: Generating Electrical Current from Falling Water

Activity Procedure

1. Make sure that the water wheel is free to rotate on the motor.
2. Make sure that the galvanometer is working.
3. Connect the wires on the generator to the terminals on the galvanometer.
4. Pour water from a pitcher or spout and place the water wheel under the water so that it turns vertically.
5. Observe any deflection in the galvanometer.

Results and Conclusions

Students will see that while the water wheel is turning, a current is created in the wire around the galvanometer. They should understand that the mechanical energy of the rotating wheel (or of the water falling) is being converted to electrical energy which can be read by the galvanometer. The conversion must be taking place in the motor, which they understand involves a magnetic field and a rotating coil.

Clean Up Procedure

1. Disconnect the galvanometer and return it to its proper place.
2. Unscrew the water wheel from the generator and return both to their proper places.

Discussion Questions

1. What causes the water wheel to turn?
2. What is happening inside the motor to convert mechanical energy (rotation) into electrical energy (electric current)?
3. If the water wheel is turning but the galvanometer does not deflect, what are some possible causes?

Notes

We convert electrical energy to mechanical energy using a motor, and we convert mechanical energy to electrical energy using a generator. In fact they are the same thing, except that the energy being put into the system is different in each case. For a water generator, the falling water (gravitational mechanical energy) causes the water wheel to rotate (also mechanical energy). The rotating wheel causes the wire coil in the motor to rotate. A rotating coil in a magnetic field produces an electric current in the coil, which can then be detected by the galvanometer.

4.2.10 Wind Energy

Learning Objectives

- To explain the conversion of mechanical energy to electrical energy using a generator coil
- To construct a simple wind turbine and generator

Background Information

The mechanism for the wind-powered generator is the same as that of a water-powered generator. The force of the wind on a turbine causes the turbine to rotate. This, in turn, causes a coil to rotate in a magnetic field, producing electric current. These types of generators are used all over the world to produce electricity for use.

Materials

A 1' x 1' piece of flexible plastic sheet, pin, scissors, super glue, plastic water bottle (any size) with cap, small motor from a car stereo or other device, connecting wires, galvanometer

Preparation Procedure

1. Making the propeller: Make 5 small holes in the plastic sheet: one in the middle and one at each corner.
2. Cut curved lines from each side near the right-hand corner inward towards the center hole (see diagram).
3. Fold each corner in towards the center so that the five holes are aligned and glue them in place.
4. Remove the cap from the water bottle and cut the top of the bottle off just below the lip where the cap sits.
5. Glue the water bottle top to the center of the back of the propeller so that the side of the bottle which holds the cap is facing backwards and the propeller is facing forwards.
6. Making the generator: Make a small hole in the center of the bottle cap with the pin.
7. Glue the top of the bottle cap to the motor wheel; use the hole to line up the center of the cap with the center of the wheel. When the motor turns, the cap should turn evenly.
8. Screw the propeller into the generator as you would close the cap on a bottle. Now the propeller should be able to turn freely on the motor.
9. Connect the terminals of the motor to the terminals of your galvanometer.

Activity Procedure

1. Make sure that the wind generator can turn freely and that it is connected to the galvanometer.
2. Hold the propeller upright into the wind so that it spins; the galvanometer will deflect to show that a current is being created in the wire.

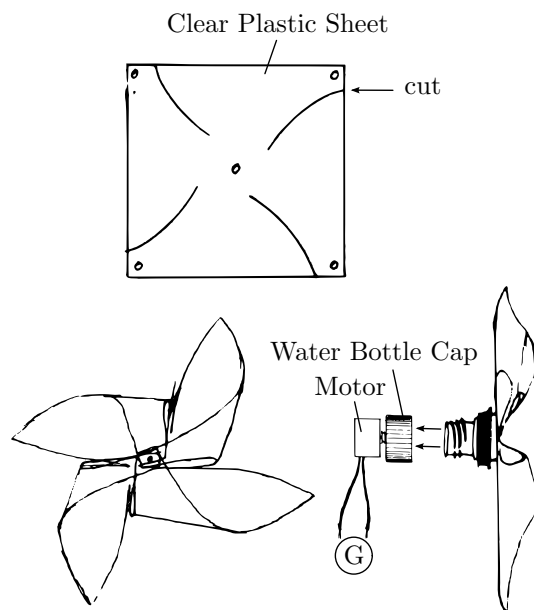


Figure 4.10: A Wind Generator

Results and Conclusions

When the generator and galvanometer are working and connected properly, it will be seen that as the propeller turns, a current is created in the wire causing the galvanometer to deflect. If the propeller turns just a little, the galvanometer will show a small deflection; if the propeller turns quickly, the galvanometer will show a large deflection. Students will observe that mechanical energy (wind) is being converted into electrical energy (electric current) using a generator. The generator uses a magnet and motion to produce an electric current, so students will see that, as with a motor, a Magnetic Field, Electric Field and Motion are related.

Clean Up Procedure

1. Disconnect the galvanometer and connecting wires and return them to their places.
2. Unscrew the propeller from the generator and return them to their places.

Discussion Questions

1. Why does wind, which moves in one direction, cause the propeller to spin?
2. What type of energy is being used, and what type of energy is being created in this system?
3. What is happening in the motor to convert between the two types of energy?
4. If the propeller is turning but the galvanometer does not show the presence of a current, what are some possible causes?

Notes

If you have constructed the water-powered generator, this activity will be very simple. The motor used in the other generator can be used again here; simply unscrew the water wheel and replace it with the wind turbine.

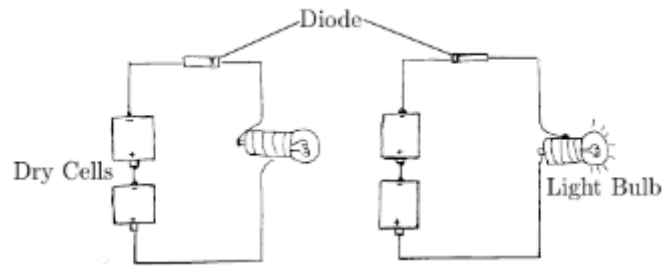


Figure 4.11: Testing the Action of a Diode

4.3 Electronics

4.3.1 Forward and Reverse Biased Diodes

Learning Objectives

- To explain the mode of action of a P-N junction

Background Information

An extrinsic semiconductor has a net positive or negative charge. For example, silicon doped with phosphorus has a negative charge and is called an N-Type semiconductor. Silicon doped with boron has a positive charge and is called a P-Type semiconductor. When these two types of semiconductors are connected in series, they form a P-N Junction. We know that electric current flows from positive to negative in a circuit.

Materials

Diode, dry cell, bulb, connecting wires, nail, heat source or soldering iron

Preparation Procedure

1. Heat the soldering iron or nail.
2. Remove a diode from broken radio using a soldering iron or a hot nail.

Activity Procedure

1. Join the bulb in series with the P-N junction.
2. Connect the P-terminal of the junction to the positive pole dry cell and the N-terminal of the junction to the negative pole of the dry cell.
3. Record what you observe in the circuit.
4. Reverse the terminal of the cell and observe the change in the circuit.

Results and Conclusions

When the P-terminal of the junction (diode) is connected to the positive terminal of the battery and the N-terminal of the junction is connected to the negative terminal of the battery, the bulb will light, indicating that current is flowing. If the terminals are reversed so that the P-terminal is connected to the negative battery terminal and the N-terminal is connected to the positive battery terminal, the bulb will not light, indicating that current is not flowing. The P-N junction, allows current to flow only in one direction; current can flow from the P-terminal to the N-terminal, but not the other way. Current always flows from a positive terminal to a negative terminal.

Clean Up Procedure

Disconnect the apparatus and return materials to their proper place.

Discussion Questions

1. What is a diode?
2. What will happen when the P-terminal of the junction is connected to the negative pole of the cell?
3. Why does a diode allow current to flow in only one direction?

Notes

A diode, which can be found in a radio, phone charger, etc. , has two colours: white and black. The black side is the P-terminal and the white band is the N-terminal. Current will only flow from the black side to the white side.

4.3.2 Full-Wave Rectifier

Learning Objectives

- To observe the effects of full-wave rectification on a galvanometer and bulb
- To explain the mode of action of a full-wave rectifier
- To explain the use of diodes in a full-wave rectifier
- To explain the relationship between AC current, full-wave rectification and half-wave rectification

Background Information

AC is current which changes direction many times per second. When we want to change AC to DC, which moves in only one direction, we must use a wave-rectifier. A half-wave rectifier is simple to make and use, but it only converts half of the AC current to DC. In order to convert more AC current to DC, we need to use a full-wave rectifier. A full-wave rectifier allows current in one direction to pass. It then takes current in the opposite direction and changes its direction so that it can pass again. For example, all forward-moving current will pass a wave rectifier. Then all current which is moving backward will have its direction changed so that it can pass the rectifier. In this way, all of the AC current is used and changed to DC.

Materials

Low voltage AC power source (see the activity "Inverter"), connecting wires, 4 diodes, bulb, resistor, galvanometer, optional super glue

Hazards and Safety

- Do not use the power from outlets in a house or school. These outlets put out a high voltage (220 V) which can kill you. Instead use a laboratory power supply or use D-cell batteries with an inverter as described above.

Preparation Procedure

1. Collect all materials.
2. Connect the AC power supply to the galvanometer to make sure that it is working. If you don't have an AC power supply in your school, you can create an inverter which converts the DC output of a battery into AC. This process is described in the "Inverter" activity.
3. Connect two diodes together in series with connecting wire. Use super glue to help secure them if you do not have a breadboard.

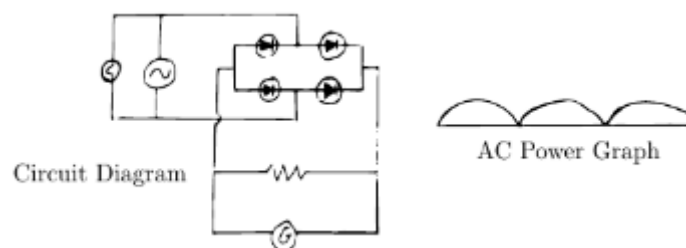


Figure 4.12: Full Wave Rectifier

4. Repeat this step so that you have two pairs of diodes in series.
5. Connect these pairs in parallel to each other so that current can flow through either pair but only in one direction.
6. Also connect a resistor and a galvanometer in parallel across the pairs of diodes. Now you should have four things in parallel: two pairs of diodes with the same direction, a galvanometer and a resistor.
7. Attach connecting wires between the diodes in each pair.
8. Extend these connecting wires to the AC power source. Now the AC power source should be attached to the middle of each diode pair.
9. Attach a bulb in parallel across the AC source.

Activity Procedure

1. Test the AC power source to see that the bulb flickers.
2. Connect the AC source directly to the galvanometer and observe the behavior of the galvanometer.
3. Connect the AC source to the full-wave rectifier and observe the behavior of the galvanometer in relation to the bulb.

Results and Conclusions

When the AC source is connected directly to the galvanometer, the galvanometer needle will jump one direction and then the other, showing the changing direction of current through the circuit. However, when the galvanometer is powered through the full-wave rectifier, it can be seen that the galvanometer only indicates one direction (positive or negative) and jumps quickly between zero and its maximum value.

If observed closely with an AC source of low frequency, it can be seen that the bulb and galvanometer flicker at exactly the same rate. This is because the full-wave rectifier creates DC current which increases and decreases (but only in one direction) at the same frequency that the AC current is changing direction. As the bulb is following the AC current at a certain frequency, the galvanometer is being driven by the DC current at the same frequency of increasing and decreasing.

Clean Up Procedure

1. Turn off the power supply and disconnect the wires.
2. Return all materials to their proper places.

Discussion Questions

1. What is the behavior of the galvanometer when connected directly to the AC source?
2. What is the behavior of the galvanometer when connected to the full-wave rectifier?
3. Compare the behavior of the galvanometer and the bulb when the galvanometer is connected to the full-wave rectifier and the bulb is connected to the AC source.

Notes

This activity is normally done with an oscilloscope, which clearly shows the waveform of the AC current and rectified current. However, the effect of the full-wave rectifier can be seen clearly if you are using the correct components.

First, the full-wave rectification can be compared to the half-wave rectification. If you connect the AC source to both a half-wave rectifier and a full-wave rectifier, each with a galvanometer, it can be seen that the full-wave rectifier causes the galvanometer to move at twice the speed of the half-wave rectifier.

Also, when a bulb is attached in parallel across the AC source while the galvanometer reads the current through the full-wave rectifier, it can be seen that the bulb and galvanometer flicker at the same rate, proving that the entire AC wave is being converted directly to DC rather than only half of the wave.

4.3.3 Half-Wave Rectifier

Learning Objectives

- To observe the effects of half-wave rectification on alternating current
- To construct a half-wave rectifier
- To explain the mode of action of a half-wave rectifier
- To explain the use of a diode

Background Information

Alternating current is current which changes direction many times per second. It is useful for transporting electric current over great distances but it is not always useful in appliances in the home or school. For this reason, we often need to convert alternating current into direct current, which moves only in one direction.

One way to do this is to make a one-way gate through which electric current can pass in one direction but not in another. A device which does this easily is a diode, or P-N Junction, which allows current to pass from the P-type to the N-type semiconductor of the diode. By passing AC through a diode, we produce direct current whenever the AC is moving forward, and no current whenever the AC is moving backward. The result is a half-wave of electric current, where we recover (or rectify) half of the AC current and convert it into DC.

Materials

Low power AC power source (see the activity "Inverter"), diode, bulb, galvanometer, connecting wires.

Hazards and Safety

- Do not use the AC power of an outlet in your home or school. These outlets carry very high voltage (220 V) which can kill you if you are not careful. Instead, use a low-power AC power supply.

Preparation Procedure

1. Collect all materials.
2. If you don't have an AC power supply, you can construct an inverter which converts the DC of batteries into AC.
3. Set up the power source or inverter to produce AC current and check that it is AC by watching its effect on a galvanometer.
4. Connect the P-side of a diode (the black colour indicates P-type) to one of the connecting wires from the power source.
5. Connect one of the terminals of the bulb to the N-side of the diode (a white band indicates N-type).

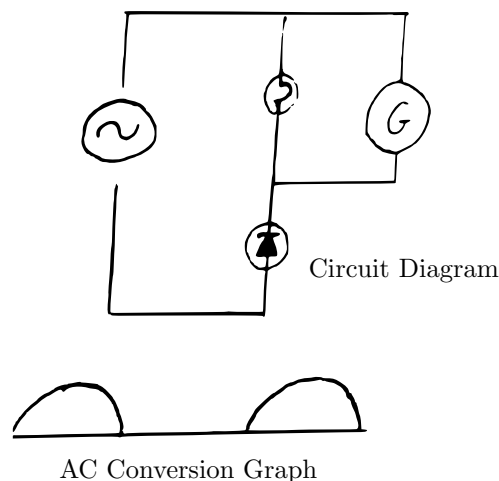


Figure 4.13: Half Wave Rectifier

6. Connect the other terminal of the bulb to the remaining connecting wire of the power source. You should now have a power source, diode and bulb all in series.
7. Connect the galvanometer in parallel with the bulb.

Activity Procedure

1. Turn on the power and watch the behavior of the galvanometer.

Results and Conclusions

When AC power is connected to a galvanometer, it is seen that the current is changing direction quickly, causing the needle to jump back and forth. When the AC is passed through a half-wave rectifier, however, the current is only in one direction (positive or negative) and jumps between zero and the maximum value at half the speed that it did with AC current. This is because the AC current is being cut in half through the rectifier and is allowed to move in only one direction. If using a bulb, it will be seen that the bulb flickers quickly with AC current, but only half as quickly with half-wave rectified current.

Clean Up Procedure

1. Disconnect all wires and turn off the power supply.
2. Return all materials to their proper places.

Discussion Questions

1. What is the difference shown by the galvanometer between regular AC current and AC current when it is passed through the half-wave rectifier?
2. Is the speed of the galvanometer needle the same in both cases, or different?

Notes

This activity is normally done with an oscilloscope, which shows the wave pattern of the AC current (it is a sine wave). If seen on the oscilloscope, the AC appears as a full sine wave, while the half-wave rectified current appears as only the positive or negative part of the sine wave (it looks like hills separated by long spaces). A half-wave rectifier, rather than converting AC directly to DC, simply removes all current in one direction and allows all current in the other direction. In this way, the product is direct current, but only half of what was produced by the AC power source.

4.4 Elementary Astronomy

4.4.1 Solar System Mobile

Learning Objectives

- To understand the arrangement of celestial bodies in our solar system

Background Information

A solar system is the group of bodies that surround a star. In our solar system we have 8 planets as well as comets, asteroids and asteroid belts, dwarf planets, and many moons. All of these objects move in ellipses around our star, the Sun. There are too many objects in our solar system to count, but we have names for the largest of these: the planets, their moons and some of the comets and asteroids. Outward from the sun, the planets are Mercury, Venus, Earth, Mars, Jupiter, Saturn, Uranus and Neptune. Pluto was once a planet but has since been reclassified a dwarf planet. Each planet has a unique size, environment and history, though Earth is the only planet that we know of with life.

Materials

Flour, water, balloons, mixing bowl, newspaper or old papers, string, sticks

Preparation Procedure

1. Blow up nine balloons, one for each of the 8 planets and sun.
2. Make the paper mache mixture with flour and water; you want a watery glue texture.
3. Wet the paper in this mixture and apply artistically to the balloons until you have a layer a couple papers-thick on each balloon.
4. Leave each balloon slightly exposed at the bottom.
5. When the papers are dried, pop the balloons inside.
6. Use paint or marker pens to make the paper balls look like planets.
7. Attach string to each of the planets.
8. Hang the planets on sticks with the sun in the middle and each of the planets at different points moving away from the sun.

Activity Procedure

1. Hang the mobile from a beam or ceiling so that the planets are suspended around the sun at different distances.
2. Identify each of the planets and discuss them.

Cleanup Procedure

1. Dispose of any remaining liquid before it dries. Do not pour it down a sink because it might clog.
2. Cap any markers or paint and return all materials to their proper places.

Discussion Questions

1. Name the eight planets.
2. Which planet is the largest? Is it solid or gas?
3. Which planet is the smallest? Is it solid or gas?
4. What do the first four planets have in common?
5. What do the last five planets have in common?

Notes

This activity is helpful to explain to students what is actually happening outside of the world. This model reminds students that there are other objects in the solar system besides Earth. Remember that the planets are all at different distance from the sun, but they are all in the same plane. For this reason, hang the planets at about the same height.

4.4.2 Star Gazing

Learning Objectives

- To identify objects in the night sky
- To understand various structures and bodies in the galaxy and universe in relation to the earth

Background Information

Astronomy is one of the oldest sciences. It has been used for thousands of years in navigation and has provided the proof or evidence for many laws and theories of nature such as gravitation and relativity.

Activity Procedure

1. Take the students out at night where there is little light from lamps and fires.
2. Look for constellations, stars, planets and satellites. Discuss the reason for having constellations and the motion of the sky over the course of a night and a year.

Results and Conclusions

Especially in rural areas, the stars and other celestial bodies are very clear. Depending on the time of year, different planets and constellations will be visible. The most obvious constellations are Orion, Ursa Major and the Southern Cross. The brightest star is Sirius. If the sky is clear then our galaxy, the Milky Way, is visible as a bright stripe across the sky.

Discussion Questions

1. What objects did you observe in the night sky?
2. What are the brightest objects?
3. Is it easier to see the stars when the moon is present, or when it is absent?
4. What constellation could you use to know which direction is North?

Notes

Before going outside at night, check a star chart and planet charts to find out which objects should be visible that night. This will make it easier to identify objects and help students to see them. If you have binoculars, they can be used to see planets easily or to see the difference between a single star system and a binary star system, or between a star and a distant galaxy. If possible, tell students the stories behind the constellations and see if they can make their own constellations.

Part II

Student Practical Worksheets

Mechanics

Archimedes' Principle

Aim

To investigate the relationship between the weight of the fluid displaced by a body and upthrust

Background Information

When a body is placed in a fluid it experiences an upward force (Upthrust) from the fluid. This force enables the object to float or seem lighter when it is placed into the fluid. Thus, swimming and flotation of bodies depend on this upthrust.

Whenever a body is partially or totally immersed in a fluid it tends to displace some of the fluid. Therefore, there might be a relationship between upthrust and the weight of the fluid displaced.

Materials

Eureka can, beaker, beam balance, Spring balance, Measuring cylinder, Retort stand, stone, thread and water.

Procedure

1. Measure the mass of an empty measuring cylinder by using a beam balance and record it as m_1 .
2. Clamp a spring balance onto a retort stand then tie a stone with a thread and suspend it on the hook of the spring balance. Read and record the *weight* of the stone suspended in air as w_1 .
3. Fill the Eureka can with water until some water overflows from the spout into a beaker placed below the spout. Wait until the overflowing water stops.
4. Remove the beaker and instead place a measuring cylinder. Lower the stone into the Eureka can while it is still suspended on the spring balance until the stone is submerged in water. Make sure the stone does not touch the bottom or the sides of the Eureka can.
5. Wait until no more water flows out of the spout then read on the spring balance the weight of the stone submerged in the water and record it as w_2 .
6. Measure the mass of the measuring cylinder with the collected water and record it as m_2 .

Analysis and Interpretation

1. What is the mass of the water collected?
2. Find the weight of water collected, label it w_d .
3. Find the difference between w_1 and w_2 , and label it w_L . What does this value represent? What is the cause of this difference in the weight of the stone?
4. Compare the values of w_L and w_d .

Conclusion

From the experiment, how is the upthrust related to the weight of the fluid displaced?

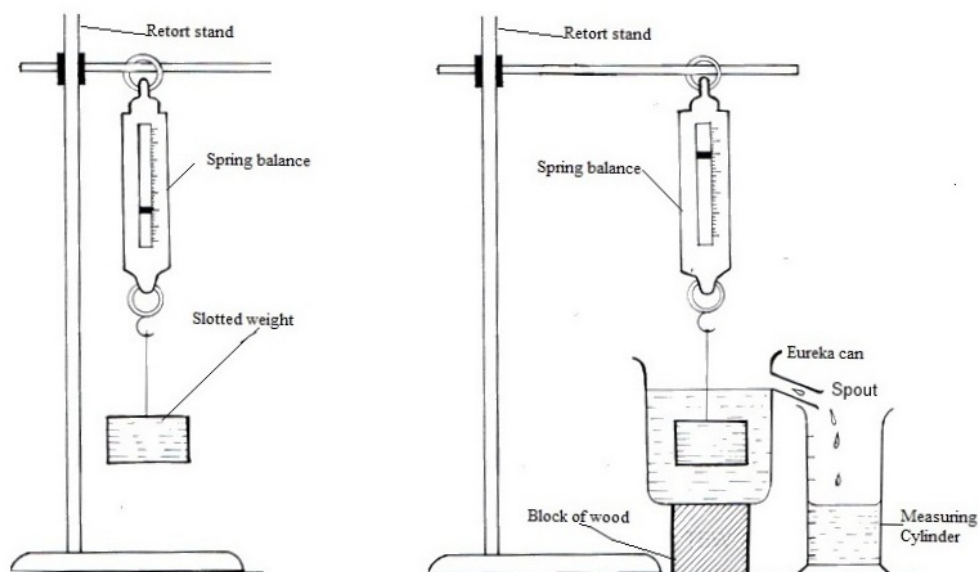


Figure 4.14: Archimedes' Principle practical setup

Questions for Discussion

1. Why should the stone not touch the bottom or sides of the Eureka can during the experiment?
2. How are the final results affected by your measurements during the experiment?
3. Can this experiment be used to determine the relative density of an object? Explain.

Reflection and Self Assessment

1. Is there anything in this experiment you do not understand? If so, what is it, and in what ways could you increase your understanding?
2. Which part of the experiment was interesting to you and which part was not interesting? Explain.
3. What problems did you face in this experiment and how could you solve them next time?
4. How can you use what you have learned in this experiment in everyday life?

Law of Flotation

Aim

To investigate the relationship between the weight of a floating object and the weight of the water it displaces

Background Information

It is easier to lift a bucket of water when the bucket is in the water, rather than when it is in air. When an object is floating in water it displaces some water. Therefore there might be a relationship between the weight of the object and the weight of the water it displaces.

Materials

Eureka can, 1000 mL measuring cylinder, beaker of 100 mL, test tube, beam balance, water, lead shots

Procedure

1. Pour water into the large beaker to about $\frac{3}{4}$ full.
2. Dip a test tube into the beaker containing water.
3. Put a few small lead shots into the test tube, and add the lead shots slowly until the test tube floats vertically upright in the beaker of water.
4. Remove the loaded test tube, dry and measure its mass and record this as m_1 .
5. Pour water into the Eureka can until it just begins to overflow through the spout.
6. Take a small empty dry beaker, measure the mass and record it as m_2 . Place it under the spout of the Eureka can.
7. Lower the loaded test tube slowly into the Eureka can so that it does not touch the sides.
8. Wait until the displaced water ceases to drop into the weighed beaker.
9. Measure the mass of the beaker with the displaced water and record it as m_3 .

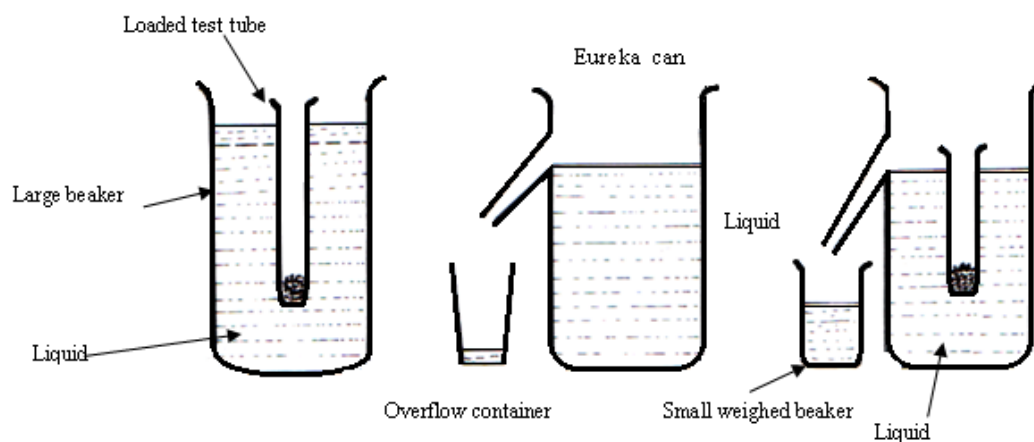


Figure 4.15: Law of Flotation practical setup

Safety Measure

When adding the lead shots, make sure that the test tube is in a slanted position.

Analysis and Interpretation

1. Convert the masses m_1 , m_2 , and m_3 into weights and call them w_1 , w_2 and w_3 .
2. Find the weight of water displaced and record it as w_4 .
3. What is the relationship between w_1 and w_4 ?

Conclusion

Is there any relationship between the force acting on a floating object and the weight of water displaced by it? Explain.

Questions for Discussion

1. Why did the test tube stand upright when the lead shots were added?
2. Why must the loaded test tube float without touching the sides of the beaker?
3. What would happen if the test tube was upright when placed in the water and the lead shots were added?

Reflection and Self Assessment

1. What is the importance of the plimsoll line on a ship?
2. How can you use the knowledge you have learned in this experiment in your daily life?
3. Is there anything you did not understand in this experiment? If so, what was it and in what ways can you increase your understanding?

Elasticity

Aim

To determine the relationship between the extension of elastic material and the load applied

Background Information

If you stretch a piece of rubber and then release it, it will return to its original shape. If you compress and release a coil spring it will resume its original length and shape. When an object stretches or compresses we say it is deformed because it is not in its original shape. The ability of an object to return to its original shape after deformation is called elasticity. This property is very important for engineers to consider when building machines, tools, and buildings. Also, physicists often find the relationship of elasticity a simple model for many different phenomenon including molecular bonding and different types of oscillatory motion. Therefore, it is necessary to investigate the relationship between the extension of an elastic object and the force applied to it.

Materials

2 retort stands, spiral spring, pointer, scale pan, masses of (50g, 100g, 150g, 200g, and 250g), meter rule

Procedure

1. Hang a spiral spring from a retort stand and attach a scale pan to the other end of the spring.
2. Clamp a meter rule to a second retort stand with the zero mark at the top.
3. Fix a pointer as shown in the figure.
4. Read and record the pointer position when there is no mass on the scale pan, call it L_0 .
5. Put a mass of 50g on the scale pan, then read and record the new reading on the meter rule, call it L .
6. Repeat procedure (5) with masses of 100g, 150g, 200g, and 250g and tabulate your result including mass and length.
7. Remove the masses from the scale pan and observe.

Analysis and Interpretation

1. What did you observe when the mass was removed from the spiral spring?
2. Compute the weight and extension ($L - L_0$) for each mass.
3. Plot a graph of weight (load) against extension.
4. From the graph find the slope of the best fit line.

Conclusion

From the results of the experiment what is the relationship between the weight (load) and the extension of an elastic material?

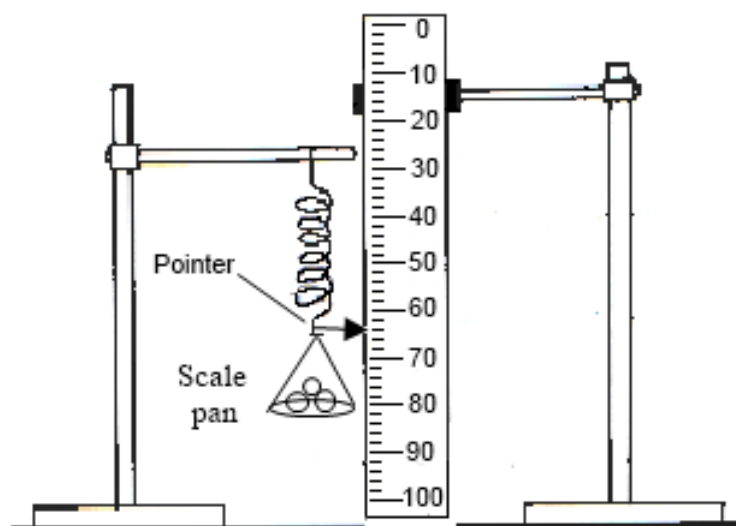


Figure 4.16: Elasticity practical setup

Questions for Discussion

1. What would happen if you hung a very large mass on the spiral spring?
2. Why can't we use cotton thread or wire instead of a spiral spring in this experiment?
3. What if we had placed the pointer at the top of the spring, would the experiment still work, why or why not?
4. What is the physical meaning of the slope? Explain it in your own words.

Reflection and Self Assessment

1. Did you encounter any problems during the experiment? If yes, what were those problems?
2. What are some applications of elastic materials in your daily life?

Pressure within a Liquid

Aim

To examine the relationship between the depth and the pressure within a liquid

Background Information

If you place a weight on your shoulders you will feel a pain which means the pressure on your body has increased. Therefore, if you were to enter into a liquid, like a lake, so that there is some liquid above you, you might think that the pressure on your body should change. Pressure in liquids is a very important topic for things like domestic water systems and dam construction. Thus, a student should find out if there is some relationship between the depth in a liquid and the pressure in the liquid at that depth, to better understand these observations.

Materials

Tall jar can, water, bucket, 3 rubber tubes of equal length and diameter as the holes, 3 clips.

Procedure

1. Plug the holes of the Tall jar with rubber tubes and close the tubes with clips.
2. Fill the jar with water and then open the tubes one after the other starting with the top one.
3. Observe from each tube, how far the water travels before hitting the ground.

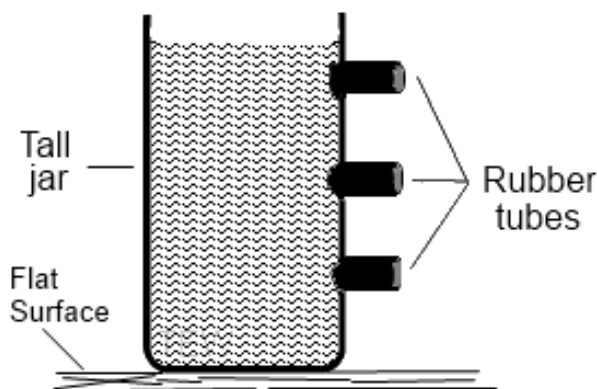


Figure 4.17: Pressure within a Liquid practical setup

Analysis and Interpretation

1. Is there a relationship between the depth (distance from the surface of the water to the tube) of the tube and the distance traveled by the water from that tube?
2. How is the distance the liquid travels related to the speed the water leaves the tube?
3. How might the speed which the water shoots out of the rubber tube be related to the pressure in the liquid at that point?
4. How is the pressure related to the depth in the liquid?

Conclusion

If you were discussing with another student about this experiment, how would you explain to them about the variation of pressure with depth?

Questions for Discussion

1. What would happen if we changed the bottles altitude?
2. If the diameter of the bottle was increased, but the height remained constant, would anything change in the experiment?
3. How might this experiment be related to atmospheric pressure?
4. Would the results change if you used oil instead of water in this experiment?

Reflection and Self Assessment

1. Do you feel confident that you understand the results of this experiment? If not, what can you do to improve your understanding?
2. Were you successful at completing this practical? If not, what were some of the difficulties and how might you be able to avoid them if you repeated the experiment?
3. How could you use the knowledge gained in this experiment to build a home water tank system with high pressure?

Linear Acceleration

Aim

To learn how to determine the linear acceleration of a body

Background Information

A body is said to undergo acceleration if its velocity changes. Any change of motion is associated with a force. When the force on a moving object remains constant with time its velocity increases constantly. What happens to its acceleration?

Materials

Ticker timer with paper tape, flat smooth board, pencil, trolley, pulley, scale pan, 500 g mass, string

Procedure

1. Fix a 50 Hz ticker timer and a trolley onto a 2 m long smooth horizontal board.
2. Tie a strip of paper tape from the ticker timer to one end of the trolley and a piece of string to the other end of the trolley as shown in Figure 4.18.
3. Attach a pulley to the end of the horizontal board. Place the string over the pulley.
4. Attach a scale pan onto the loose end of the string. While holding the pan in your hand, place a 500 g mass into the pan. Do not let go of the pan.
5. Switch on the vibrator of the ticker timer.
6. Let go of the pan so that it falls to the floor.
7. Observe the dots made on the tape by the ticker timer and label every 10 consecutive dots on the tape using a pencil (Ignore the first few dots, see Figure 4.19)
8. Measure the distances between the points AB, BC and CD occupied by successive 10 dot-spaces.

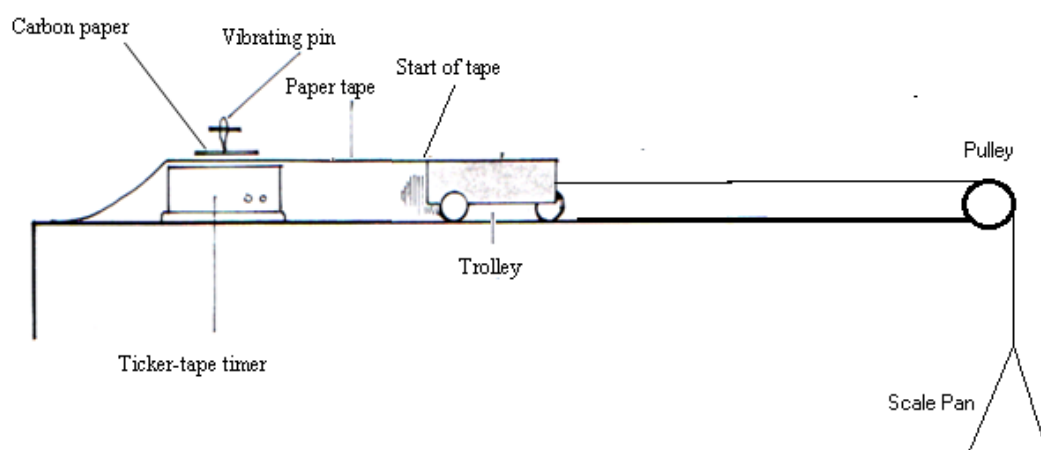


Figure 4.18: Linear Acceleration practical setup

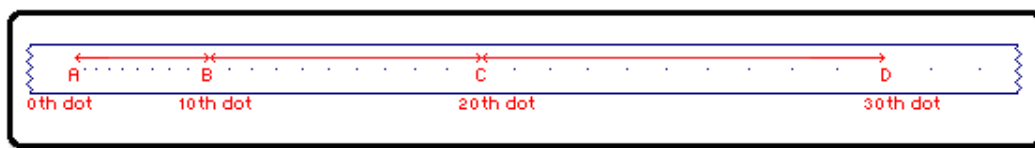


Figure 4.19: Example ticker timer tape
Note: The dots are 0.02 seconds apart.

Analysis and Interpretation

1. Find the distance between points A and B and calculate the average velocity during that time interval. Label it V_1 .
2. Repeat step 1 above for BC and CD and calculate the velocities in each section. Label them accordingly.
3. Find the rate of change of velocity between each section. Comment on the values.
4. Calculate the average acceleration at points B, C and D by using the total change in distance multiplied by 2 and divided by the total time squared. (i.e. $a = 2 \times \Delta s / \Delta t^2$).
5. Find the difference between the distances traveled between AB and BC. Divide by the period squared. Comment on the value.
6. Repeat step 5, but this time between the distances traveled between BC and CD.
7. Comment on the values obtained in steps 3, 4 and 5.

Conclusion

From this experiment what is the acceleration of the trolley?

Questions for Discussion

1. What causes the trolley to accelerate?
2. Under what condition is the acceleration of the trolley zero?
3. Do you expect there to be a relationship between the mass in the pan and the acceleration of the trolley? Explain your answer.
4. How does friction affect the results of this experiment?

Reflection and Self Assessment

1. Is there anything you do not understand in this experiment? If so, what is it and what can you do to increase your understanding?
2. What were the most and least interesting parts of this experiment to you? Explain.

Simple Pendulum

Aim

To investigate the relationship between the length of a simple pendulum and the period of its oscillations

Background Information

A simple pendulum is a weight suspended from a point by a light non stretchable string so that the weight can swing freely. A simple pendulum is very useful for clocks, the calculation of the acceleration due to gravity, and other scientific instruments. This is because the time it takes for a pendulum to swing back and forth is relatively constant. In order to design a pendulum to give the desired time of oscillation we must learn which variables effect this periodic time. It is possible the length of the pendulum affects the period of oscillation so we should investigate this relationship.

Materials

Retort stand, meter rule, stop watch, string about 150 cm long, 2 wood pads and a pendulum bob

Procedure

1. Tie a pendulum bob to one end of a string.
2. Clamp the other end of the string firmly between the two wooden pads on the retort stand so that the length L of the string is 100 cm.
3. Displace the pendulum bob by a small angle and release it. Record the time, t , in seconds for twenty (20) oscillations.
4. Repeat procedure (3) for the values of L of 80 cm, 60 cm, 40 cm and 20 cm.

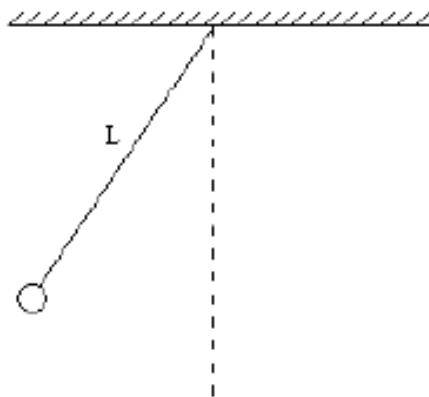


Figure 4.20: Simple Pendulum practical setup

Analysis and Interpretation

1. Tabulate your results as L , t , period T and T^2 , whereby the period is the total time divided by the total number of oscillations to give the time per oscillation.
2. Plot the graph of L against T^2 .
3. Draw a best-fit line and determine its slope.

Conclusion

What is the relationship between the length of a pendulum and its period of oscillation?

Questions for Discussion

1. Given that $T = 2\pi(L/g)^{1/2}$ find the value of g from your experiment.
2. What would be the relationship between L and T^2 if the graph of T^2 is plotted against L ?
3. Do you think the mass and the shape of the pendulum bob affects the period of oscillation?
4. Will two pendulums of the same length have the same period if they are at two different altitudes? Explain.

Reflection and Self Assessment

1. What did you find most and least interesting about this experiment? Explain.
2. What is the significance of g in our daily life?
3. Is there anything you do not understand about this experiment? If so, what is it and in what ways can you improve your understanding?

Coefficient of Friction

Aim

To determine the coefficient of friction between two surfaces by using an inclined plane

Background Information

When using shoes for a long time the sole gradually wears out, the same applies to vehicle tires. Also, engines and other machines produce a lot of heat from the moving parts. The cause of the wear and the heat is friction. Friction is the force that acts between two surfaces. It is always parallel to the surface and in the direction to oppose the motion of the body.

A simple model for friction states that there is a direct relationship between the weight of the body moving and the frictional force between the surfaces. How do we measure it?

Materials

Beam balance, different masses, inclined plane, thread, scale pan, block of wood with a hook, pulley and protractor

Procedure

1. Measure the mass (m) of the wooden block by using a beam balance and record it.
2. Set the inclined plane angle, θ , at 30° to the horizontal.
3. Place the block of wood on the inclined plane and connect it with a thread (see figure).
4. Pass the thread over the fixed pulley and attach the scale pan to the loose end.
5. Place masses one after the other onto the pan until the block of wood barely starts to move up the plane. Record the total mass collected on the scale pan as M .
6. Obtain 4 more readings of M by increasing the angle of inclination, θ , by intervals of 5° .
7. Record the values of θ and M in tabular form.

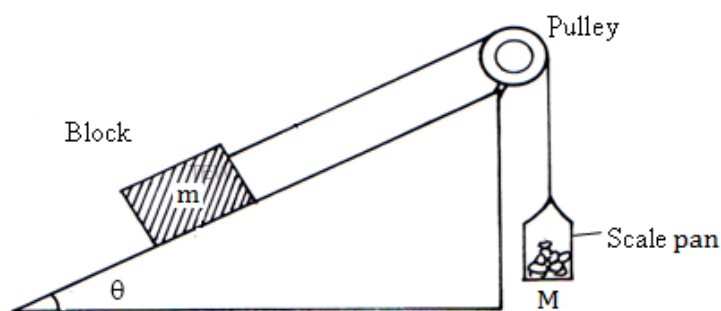


Figure 4.21: Coefficient of Friction practical setup

Analysis and Interpretation

1. For each value of θ calculate the coefficient of friction of the wooden block using the equation:

$$\text{coefficient of friction } (\mu) = \frac{Mg - mg \sin \theta}{mg \cos \theta}$$

2. Comment about the values of μ .

Conclusion

From the experiment, what is the coefficient of friction between the wooden block and the inclined plane?

Questions for Discussion

1. If the inclined plane were rougher, would you obtain the same value of μ ?
2. If the angle of inclination remains constant, but the weight of the block on the inclined plane increases, what would have to happen to the weight on the scale pan to obtain a proper value for the coefficient of friction?
3. What is the purpose of increasing the angle of inclination in this experiment?

Reflection and Self Assessment

1. Were there any problems encountered during the experiment? If yes, explain.
2. How could you use the knowledge of this experiment to simplify the job of moving a large pile of bricks across a floor?
3. Why is it difficult to walk on a slippery floor?

Light

Law of Reflection

Aim

To discover the relationship between the incident angle and reflected angle of a plane mirror

Background Information

Nearly every object can be seen because light reflects off of its surface and then enters your eye. Reflection is when light rays bounce off the surface of an object. Drivers use sight mirrors to observe cars behind them, in saloons there are shaving mirrors, and mirrors have many other applications in industry and science. What is the relationship between the incident angle and reflected angle of a plane mirror?

Materials

Plane mirror, 4 optical pins, soft board, 4 drawing pins, mirror, ruler, 2 plain papers, graph paper, pencil and protractor

Procedure

1. Pin a piece of paper onto the middle of a soft board.
2. Draw a line MM of 15 cm in the middle of the paper.
3. Draw a perpendicular line on the midpoint of MM and call it ON as seen in Figure 4.22. This line is called a normal line.
4. Draw a line AO making an angle of incidence i from the normal.
5. Place a plane mirror vertically on the line MM.
6. Insert two pins P_1 and P_2 on the line AO.
7. Look from the opposite side of the normal at the images of the pins P_1 and P_2 in the mirror. Insert two other pins, P_3 and P_4 , so that they appear to be in a straight line with the images of P_1 and P_2 in the mirror.
8. Remove the pins and draw lines through the marks of the pins up to the line MM.
9. Using a protractor measure and record the angle of incidence, i , and the angle of reflection, r , both taken with respect to the normal ON.
10. Repeat the experiment by varying the angle of incidence, i , to obtain four more values of r . Tabulate the results.
11. Observe which planes the incident ray, reflected ray and the normal line occur in.

Analysis and Interpretation

1. Draw a graph of incident angle i against reflected angle r .
2. From the graph determine the slope.

Conclusion

1. What is the relationship between the incident angle and reflected angle of a plane mirror?
2. From the experiment do the incident ray, reflected ray and normal all occur in one plane?

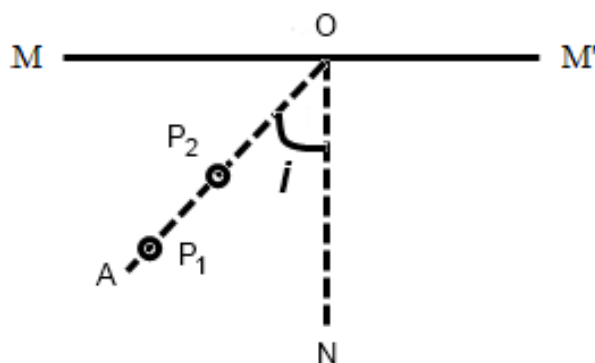


Figure 4.22: Law of Reflection practical setup

Questions for Discussion

1. What will happen if the mirror is not silvered on one side?
2. What are the sources of error in this experiment?
3. Why where two optical pins used to construct each line instead of only one?
4. If the object is placed 20° from the normal, will the image be observed at a reflected angle of 40° ?
5. What could be used instead of optical pins in this experiment?

Reflection and Self Assessment

1. Was the experiment helpful to you? Explain.
2. What are some of the challenges you encountered in the experiment? Suggest ways to overcome them.
3. Where can the results of this experiment be applied in your daily life?

Plane Mirror Image Characteristics

Aim

To investigate the properties of the image formed by a plane mirror

Background Information

Mirrors have a variety of uses and are often found in homes, saloons, cars and a variety of industrial applications. It is very interesting when you look at yourself in a mirror and see your own image. Images formed by plane mirrors have different properties. What are the relationships between the object and its image in a plane mirror?

Materials

Plane mirror, 3 optical pins, 4 drawing pins, plain paper, drawing board and ruler

Procedure

1. Fix a piece of plain paper onto a drawing board using drawing pins.
2. Draw a horizontal line LM at the center of the plain paper.
3. Place the plane mirror upright along the line LM.
4. Fix a pin at point O, 4 cm from the center N of the plane mirror as seen in Figure 4.23.
5. Fix two pins at points P and Q so as to appear in line with the image of O in the mirror.
6. Mark the points and then remove the pins at P and Q.
7. Fix the two pins at points R and S on opposite side of ON to appear in line with the image of O in the mirror.
8. Mark the points on the paper and then remove the pins at points R and S.
9. Draw a line through P and Q that extends across the line LM. Do the same for R and S. Label the intersection of these two lines as O.
10. Join O and O with a line which cuts the reflecting surface at point N, measure and record the length of NO and NO as u and v respectively.
11. Change the position of object O by increasing it by intervals of 2 cm to obtain five more readings of u and v .

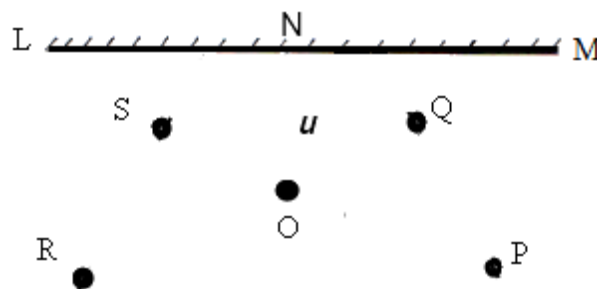


Figure 4.23: Plane Mirror Image Characteristics practical setup

Analysis and Interpretation

1. What is the position of the image formed with respect to the mirror?
2. Plot the graph of v against u .
3. Determine the slope of the graph.
4. What is the physical meaning of the slope?
5. From the value of slope obtained comment on the size of the image formed by a plane mirror.

Conclusion

From the experiment, explain about the characteristics of the image formed by a plane mirror.

Questions for Discussion

1. What would you see if you looked at the word **BABA** in the plane mirror? What is this property called?
2. If you see your friends in a mirror, can they see you at the same time?

Reflection and Self Assessment

1. Apart from the uses mentioned in the introduction, where can the results of this experiment be used?
2. How can you use plane mirrors to see the back of your head?
3. What did you find most and least interesting about this experiment? Explain.

Refractive Index

Aim

To learn how to determine the refractive index of a glass block

Background Information

A straight pen appears bent when it is partially immersed in a glass of water. This is due to the light rays bending when they leave the water. The bending of light when it passes from one medium to another different medium is known as refraction. The refractive index is a constant of a material that determines how much the light will bend when it enters that medium from a vacuum. Manufacturers in industries need to know how to calculate the index of refraction of a material for proper construction of optical instruments such as glasses, telescopes, binoculars, etc. How do we calculate it?

Materials

Glass block, 4 optical pins, 4 drawing pins, protractor, plain paper, ruler, soft board, and a pencil

Procedure

1. Fix a white sheet of paper on a soft board by using drawing pins.
2. Place the glass block flat on the sheet of paper and trace along the outside using a pencil.
3. Remove the block and label the corners ABCD (see figure).
4. Using a protractor, draw a line NM perpendicular to AB, which is near corner A.
5. Draw another line RQ which makes an angle of incidence, i_1 , equal to 20° with line NM.
6. Replace the block back on the sheet of paper inside the box ABCD. Insert optical pins at two different points along the line RQ.
7. Observe these optical pins through the glass block from the opposite side CD. Place two more optical pins on this side of the block so that they appear to be in line with the original two pins on the other side.
8. Remove the block and pins. Draw a line through the points of the two new optical pins until the line touches the outline of the glass block and label the intersection P_1 .
9. Draw a line which connects Q and P_1 . Measure and record the angle of refraction, r_1 .
10. Repeat steps 5 - 9 for angles of incidence $i_2 - i_5$ equal to 30° , 40° , 50° and 60° .
11. Tabulate your results.

Analysis and Interpretation

1. Calculate $\sin(i)$ and $\sin(r)$ for each incident angle i and angle of refraction r .
2. Calculate $\frac{\sin(i)}{\sin(r)}$ for each incident angle and angle of refraction.
3. Plot a graph of $\sin(i)$ against $\sin(r)$.
4. Determine the slope of the graph. What does it represent?

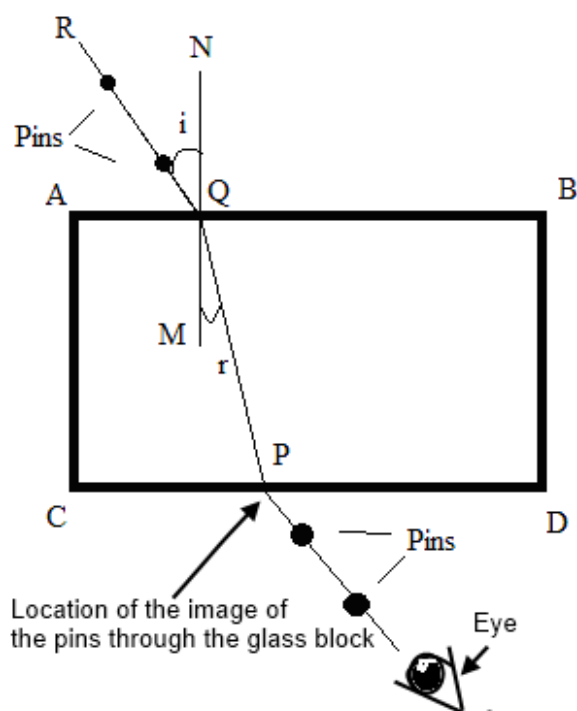


Figure 4.24: Refractive Index practical setup

Conclusion

What is the index of refraction of the glass block?

Questions for Discussion

1. What happened to the angle of refraction as the angle of incidence increased?
2. What would happen to the angle of refraction when the angle of incidence is (i) 0° and (ii) 90° ?

Reflection and Self Assessment

1. How can the knowledge of this experiment be used in your daily life?
2. How does this experiment relate to the illusion of seeing a pond on the road during a hot and sunny day?

Critical Angle

Aim

To determine the critical angle of light passing from glass into air by using a semicircular glass block

Background Information

Light bends when it passes from one medium to another. Perhaps there is a special angle of incidence at which light bends beyond 90° so that it would actually reflect. The critical angle is when the angle of refraction is 90° and this reflection begins. If this angle is exceeded then internal reflection can occur. This is useful for controlling light and a common application is high-speed internet cables called optical fibers. Fiber optics use internal reflection of light to transfer computer signals from one place to another. Therefore, it is important to know how to find the critical angle.

Materials

Semicircular glass block, ray box, drawing pin, white sheet of paper, protractor, pencil, meter rule and drawing board

Procedure

1. Fix a sheet of white paper on a drawing board using drawing pins.
2. Place a semicircular glass block at the center of the white sheet of paper.
3. Trace the outline of the semicircular block on the paper using a pencil.
4. Remove the semicircular glass block and mark the point O on the paper at the middle of the line on the flat side of the block.
5. Use a protractor to draw a line through point O which is perpendicular to the line of the flat side of the block. Label this line MN.
6. Use the protractor to draw 7 different lines which make an angle i of 20° , 36° , 38° , 42° , 44° , 46° , and 48° with the line ON. Label the lines as I_1 , I_2 ... I_7 respectively.
7. Place the semicircular glass block back into its original position within the outline drawn in step (3).
8. Place the ray box so that the emitted ray follows line I_1 . Using a ruler, trace the line which exits the glass block from the flat side. Label it R_1 .
9. Observe and record the brightness of the refracted and reflected rays.
10. Repeat steps (8) and (9) for the other 6 lines and label each ray exiting the flat side accordingly.
11. Remove the semicircular glass block and use the protractor to measure the angles of refraction, r , and record them in tabular form. If no ray exited the flat side, insert no ray into the table.

Analysis and Interpretation

1. What general trend do you observe in the refracted angle as the incident angle increases?
2. At what angle of incidence does the angle of refraction go to 90° ?
3. What did you observe after this angle?
4. What is the trend in brightness of the refracted ray before the angle found in question 2? Comment on this observation.

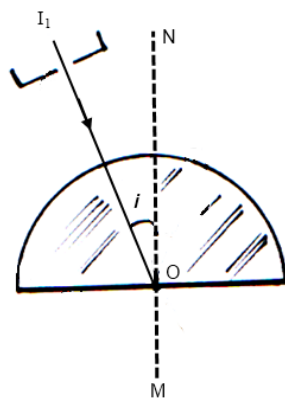


Figure 4.25: Critical Angle practical setup

5. What is the trend in brightness of the *reflected* ray after the angle found in question 2? Comment on this observation.
6. Calculate the index of refraction of the glass block using your experimental results before the angle found in question 2. Use this value to calculate the critical angle of glass into air.

Conclusion

From the experiment, what is the critical angle of this semicircular glass block into air?

Questions for Discussion

1. Why did we use a semicircular glass block in this experiment and how might the use of another shape have been more difficult to use?
2. Explain the possible errors in this experiment. How do they affect your results?
3. Do you predict there will be a critical angle for light moving from air into glass? Support your explanation mathematically.
4. How might a person constructing a diamond ring use internal reflection to make the diamond more beautiful so that he can sell it at a higher price?

Reflection and Self Assessment

1. Do you understand everything in this experiment? If not, what can you do to increase your understanding?
2. What were the most and least interesting parts of this experiment to you? Explain.

Minimum Deviation Angle

Aim

To determine the angle of minimum deviation of a triangular prism

Background Information

When a ray of light passes through a glass prism it tends to bend away from its original direction. The deviation angle is the angle between the original path of the light and the final path of the light after leaving the prism. What is the relationship between the angle of incidence and the minimum angle of deviation?

Materials

Triangular prism (60°), 4 optical pins, 4 drawing pins, drawing body, ruler, protractor, pencil, white sheet of paper, graph paper.

Procedure

1. Fix a white sheet of paper on a soft drawing board by using the drawing pins, and place a triangular glass prism on the white sheet of paper.
2. Trace the boundaries of the prism by using a sharp pencil and label the vertices as A, B and C.
3. Remove the glass prism and mark a point P along the line just above the center of side AB (see figure).
4. Draw a normal line MPN to line AB and construct another line XP such that the incident angle $i = 30^\circ$.
5. Replace the glass prism to its original position and erect two pins Q_1 and Q_2 along line XP, then view the images of these pin from side BC.
6. Erect the other two pins Q_3 and Q_4 so that they appear inline with Q_1 and Q_2 .
7. Remove the glass prism and draw a line through the point Q_3 and Q_4 to meet BC at R.
8. Extend lines XP and Q_3R to meet at point K using dotted lines.
9. Measure the angle of deviation, d , as seen in the figure.
10. Repeat the experiment by increasing the angle of incidence by intervals of 5° to obtain five more readings, tabulate your results.

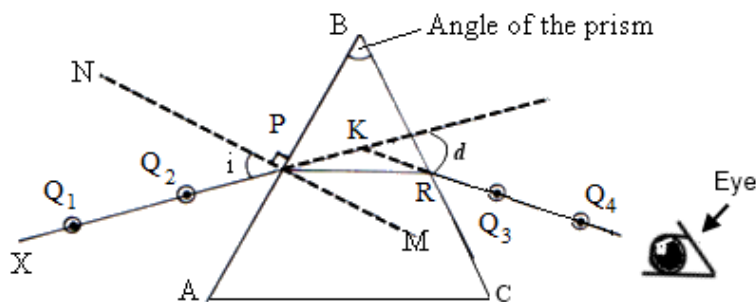


Figure 4.26: Minimum Deviation Angle practical setup

Safety Measure

The glass prism should be clean.

Analysis and Interpretation

1. Draw the graph d against i .
2. What happens to the deviation angle when the angle of incidence increases?
3. What is the nature of the graph?
4. From the graph explain how the minimum angle of deviation can be found.

Conclusion

From the graph, what is the value of the minimum angle of deviation?

Questions for Discussion

1. Why is the incident ray deviated when it leaves the surface AB of the glass prism?
2. How can this experiment be used to find the refractive index of the glass prism?

Reflection and Self Assessment

1. Did you have any difficulties when performing this experiment? Explain.
2. Which parts of the experiment did you find most interesting? Explain.
3. What is a common observation that is related to this glass prism experiment?

Focal Length

Aim

To learn how determine the focal length of a convex lens

Background Information

Lenses are transparent curved objects which tend to bend light. A convex lens is one which bends the light towards a common point, called the focal point. The focal length is the distance from the middle of the lens to the focal point. The focal length of an optical instrument is a measure of how strongly the lenses converges or diverges light. Lenses are commonly used in cameras, spectacles, telescopes, binoculars and many other optical instruments. Therefore, it is important to determine the focal length of a lens to know how to construct an optical instrument best.

Materials

Optical bench, source of light, optical pin, pin holder, screen, convex lens, lens holder

Procedure

1. Fix the source of light on an optical bench.
2. Fix an optical pin upright in pin holder and place it close to the front side of the source of light.
3. Place a screen a distance from the pin.
4. Fix the convex lens on a lens holder.
5. Place the lens holder between the optical pin and the screen.
6. Adjust the lens holder along the optical bench until a sharp image is obtained on the screen (see figure).
7. Measure the distance from the optical pin to the lens holder and record it as u .
8. Measure the distance from the lens holder to the screen and record it as v .
9. Change the position of optical pin to obtain five (5) more values of u and v , tabulate the results.

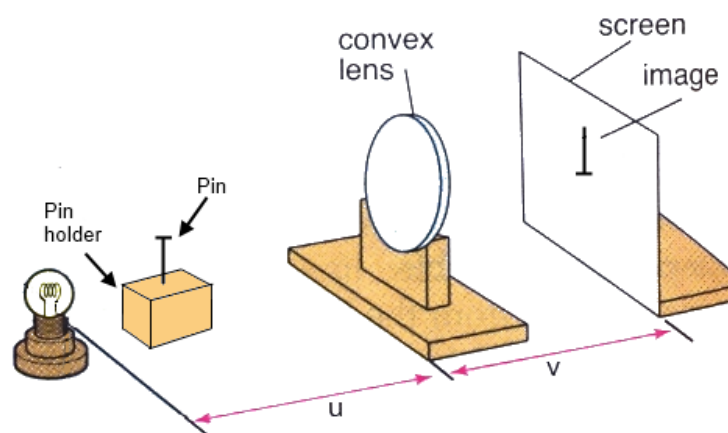


Figure 4.27: Focal Length practical setup

Analysis and Interpretation

1. From the table compute values of $1/v$ and $1/u$.
2. Plot a graph of $1/v$ against $1/u$.
3. What is the value of the vertical-intercept of the graph?
4. Find the slope of the graph.
5. If the vertical intercept is equal to $1/f$, where f is the focal length, deduce the equation of the graph.

Conclusion

What is the focal length of the lens used?

Questions for Discussion

1. Farsighted individuals have an eye focal length which is too long. What type of lens could be used in front of their eyes to help them focus the light properly?
2. What is the relationship between the power of the lens and focal length?

Reflection and Self Assessment

1. Explain other methods which can be used to determine the focal length of a lens?
2. Do you understand the results of this experiment? If not, in what ways can you improve your understanding?

Convex Lens Image Characteristics

Aim

To find the relationship between the position of an object and the image formed by a lens

Background Information

A lens is a transparent medium that alters the direction of light passing through it. It consists of a piece of glass/plastic of thickness varying from the middle to the edges with spherical surfaces on one or both sides depending on the type of the lens. There are people who wear glasses which are made by lenses for different purposes such as reading, protection from sunlight and to correct eye defects. Also, there are several instruments like cameras, microscopes, and others which use lenses. Is there a relationship between the position, size and nature of the image formed and the objects position on the principal axis?

Materials

Convex lens, lens holder, 2 optical pins, optical bench, screen, ruler/meter ruler and ray box

Procedure

1. Set a cross using optical pins by fixing it at a hole of a ray box (see figure).
2. Fix a lens onto a lens holder.
3. Find the focal length of the lens (f) by focusing the light of the sun.
4. Place the lens between a screen and a ray box on an optical bench.
5. Switch on the source of light in the ray box.
6. Place the front of the ray box at a distance between f and $2f$ from the lens. Adjust the screen until a sharp image is formed on the screen.
7. Measure the distance between the screen and lens; observe the size (magnified or diminished), orientation (upright or inverted) and nature (virtual or real) of the image on the screen. Record the data and observations.
8. Repeat procedure 6 and 7 for positions of the ray box at f , $2f$ and between f and the lens.
9. Tabulate your results including the position of the ray box, image distance, size, nature and the position relative to the lens of the image.

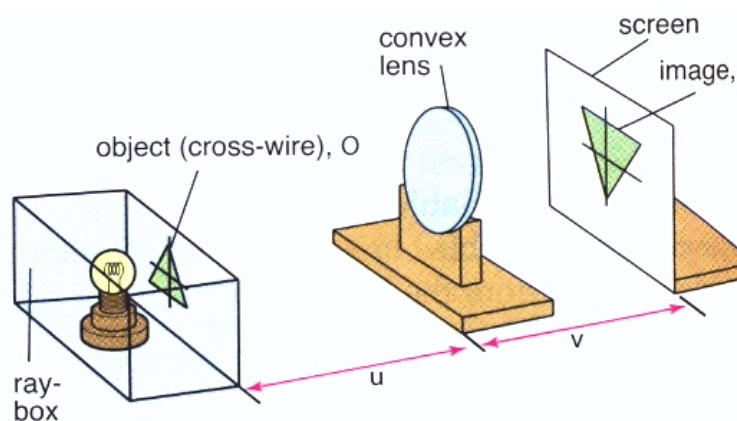


Figure 4.28: Convex Lens Image Characteristics practical setup

Safety Measures

Hold the lens carefully because it breaks easily.

Analysis and Interpretation

1. As the object moved away from the focal distance of the lens; explain what happened to the following:
 - (i) The image size;
 - (ii) The image orientation;
 - (iii) The nature of the image; and
 - (iv) The position of the image.
2. Calculate the theoretical values of the image distance using the lens makers equation for each ray box position.

Conclusion

What are the relationships of the image size, orientation, nature, and position to an increase in object distance from the focal distance of the lens?

Questions for Discussion

1. What is the size and nature of the image if the object is placed between f and the lens?
2. Why might your theoretical values be different from your experimental values?
3. In absence of lenses what other materials can be used?

Reflection and Self Assessment

1. What type of lens would you advise a person with long-sightedness to use?
2. What are your impressions of this experiment?

Heat

Charles's Law

Aim

To determine the relationship between volume and temperature of a gas

Background Information

Gasses are all around us and are used in industrial and commercial objects such as tires, balls, balloons etc. Each one of these objects requires a certain volume of air to operate properly. Also, volume and temperature are fundamental variables used in daily life and therefore it is important to know if there is some relationship between the two in a gas. However, there might also be a relationship between the volume and pressure so careful consideration must be made to keep pressure constant during the experiment. If pressure is held constant what type of relationship is there between volume and temperature of a gas?

Materials

Bunsen burner, capillary tube sealed at one end, wire gauze, tripod stand, ruler, 2 rubber bands, thermometer, stirrer, sulfuric acid, water, large beaker.

Procedure

1. Place a drop of sulfuric acid inside the capillary tube.
2. Tap the bottom of the tube until the acid is about $\frac{2}{3}$ the way down the tube.
3. Attach the tube to a ruler using two rubber bands.
4. Fill the beaker with water until it is about $\frac{3}{4}$ full.
5. Insert the ruler with the tube attached to it into the water so that nearly the whole tube is submerged.
6. Put a thermometer and stirrer into the water of the beaker. Record the initial temperature θ_1 of the water and the initial length L_1 of the air column which is below the sulfuric acid.
7. Place a tripod stand over a Bunsen burner and then light the burner.
8. Place wire gauze on top of the tripod stand. Then place the beaker, which has all of the other contents still in it, over the wire gauze in order to heat the water inside.
9. While stirring gently, record the length of the air column, L_2 , after the water has heated 5° .
10. Continue recording the length of the air column ($L_3, L_4 \dots L_6$) after each interval of 5° increase of temperature. You should have a total of 6 readings when you finish the experiment.

Safety Measure

Take care when using the Bunsen burner during the experiment.

Analysis and Interpretation

1. Plot a graph of L against θ . What is the nature of the graph?
2. What is the approximate pressure of the air column during the experiment?

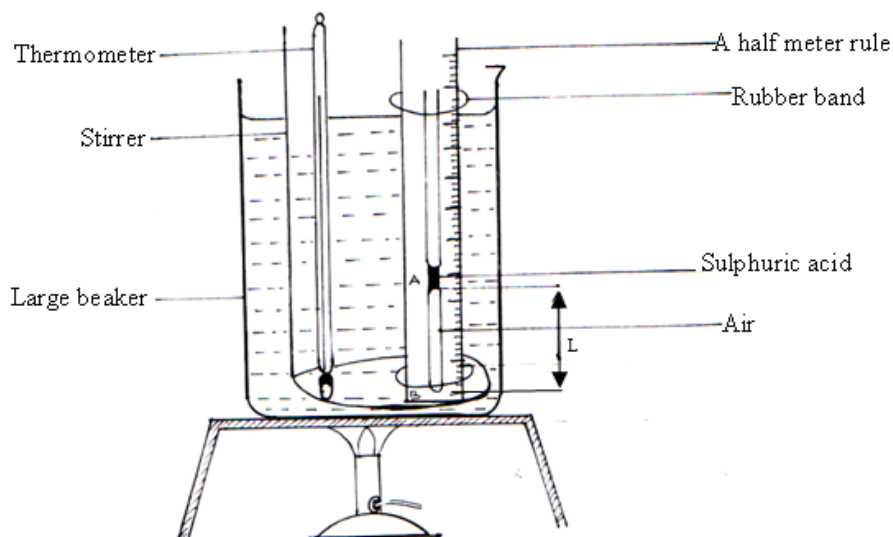


Figure 4.29: Charles's Law practical setup

Conclusion

What is the relationship between the volume and temperature of a gas when the pressure is held constant?

Questions for Discussion

1. What might happen to your results if you did not stir the water during the heating process?
2. Explain the purpose of the sulfuric acid drop in the capillary tube. Could something else have been used?
3. Does the mass of the air column remain constant? What about the density?

Reflection and Self Assessment

1. Is there anything you do not understand about this experiment? If there is, what is it and in what ways can you increase your understanding?
2. What were the most and least interesting parts of the experiment to you? Explain.
3. Why are the results of this experiment necessary for the construction of tires?

Boyle's Law

Aim

To find out how the volume of a gas relates to its pressure at constant temperature

Background Information

In gasses, volume, pressure and temperature depend on one another. It is a bit difficult to study the variations of the three quantities at the same time. If one of the three variables is kept constant, the variations of the remaining two can be investigated. It is very important to find out how volume relates with pressure at constant temperature for a better understanding of gasses.

Materials

Glass tube, bicycle pump, Bourdon gauge, oil

Procedure

1. Trap a mass of air in the glass tube with oil and read the volume V of the air and the corresponding pressure P of the trapped air using the Bourdon gauge.
2. Connect the bicycle pump and gently increase the pressure P of the air in the tube and record the corresponding volume V . See Figure 4.30.
3. Obtain five more values of P and the corresponding values of volume V and tabulate your results.

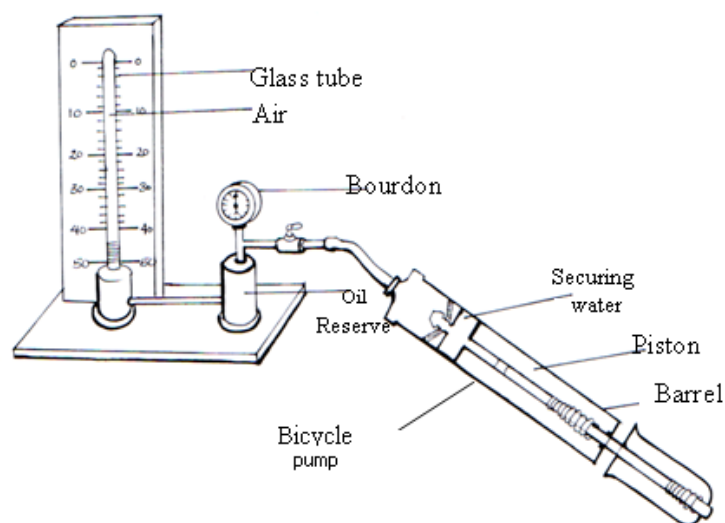


Figure 4.30: Boyle's Law practical setup

Safety Measure

Pumping of the oil should be done slowly so as to avoid an increase in the temperature.

Analysis and Interpretation

1. Compute the values of $1/V$ and include them in the table.
2. Plot the graph of P against $1/V$.
3. What is the nature of the graph?
4. From the graph find the slope, what does it represent?

Conclusion

From the results of this experiment what is the relationship between pressure and volume of a gas at constant temperature?

Questions for Discussion

1. Why in this experiment is it necessary to maintain the temperature of the air (gas)?
2. Suppose a graph of pressure against volume was plotted, what will be the nature of the graph?
3. Based on the results of this experiment, what could be a cause for high blood pressure in a person?

Reflection and Self Assessment

1. What parts of this experiment were most and least interesting to you? Explain.
2. How can you use the results of this experiment in your daily life?

Pressure Law

Aim

To investigate the relationship between pressure and temperature of a fixed mass of a gas at constant volume

Background Information

Pressure, volume and temperature are all variables we use in our daily lives. It is important to know if there is some relationship between them in gas so that we can better understand and control gasses. For example, the weather is a complex system of gasses interacting at different pressures, volume and temperatures. When certain values of these variables are reached, it will cause things like rain, heat and wind. It is possible that pressure is dependent on both volume and temperature. In this experiment we will attempt to keep volume constant to determine the relationship between pressure and temperature.

Materials

Thermometer, round bottomed flask, rubber stopper with a hole, rubber tube, beaker, stirrer, meter ruler, retort stand, tripod stand, wire gauze, source of heat, glass tube, U-tube, oil, ice and water

Procedure

1. Connect one end of a U-tube to a flask using a rubber stopper.
2. Connect the other end of the U-tube to a glass tube using a rubber tube.
3. Pour water into a beaker to about $\frac{3}{4}$ full and place it on top of a tripod stand.
4. Place a Bunsen burner under the tripod stand with the beaker.
5. Fix the glass tube and flask onto a retort stand as shown in the figure.
6. Pour oil into the glass tube until it is about half full.
7. Attach a meter ruler vertically along the glass tube using a retort stand.
8. Lower the flask into the beaker which contains water so that the round part is completely covered with water.
9. Raise and lower the glass tube containing the oil so that the oil is just above the rubber tube and at the same height as the U-tube limb.
10. Record the height, h , in meters from the level of the U-tube to the end of the oil in the glass tube (see figure) as well as the room temperature.
11. Add some ice to the beaker so that the temperature of water is lowered to about 10°C .
12. Light the Bunsen burner and warm the water in the beaker while stirring it continuously.
13. Read and record the temperature of the water at interval of 10°C up to 90°C and the corresponding height, h , of the oil in the glass tube.

Analysis and Interpretation

1. Tabulate your results for the value of temperature θ , h and pressure $P = H + \rho gh$ (where H is atmospheric pressure $= 10^5 \text{ Nm}^2$, $g = 10 \text{ m/s}^2$ and $\rho = 800 \text{ kg/m}^3$ is the density of the oil).
2. Plot a graph of pressure P against temperature θ , then find the slope.
3. Draw a best fit line which intersects the horizontal axis.
4. What is the value of θ when pressure P equals zero?

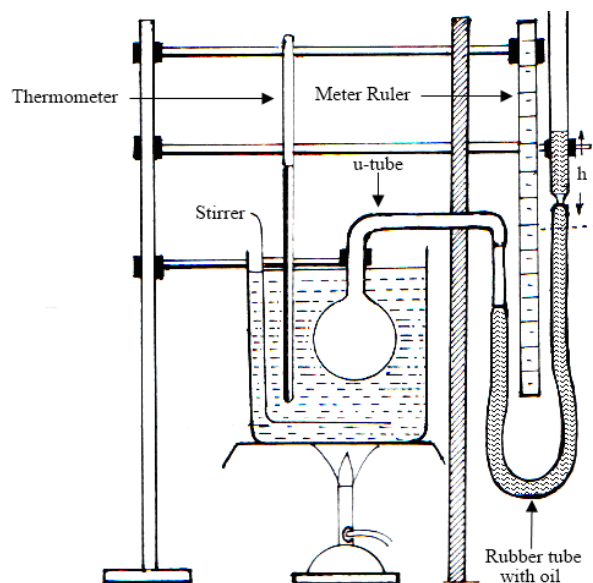


Figure 4.31: Pressure Law practical setup

Conclusion

What is the relationship between pressure and temperature of a fixed mass of gas at constant volume?

Questions for Discussion

1. What does pressure P represent?
2. What is the meaning of the value of θ obtained when pressure P equals zero?
3. Does the volume of the gas remain constant? If not, how does this affect your results?
4. What cause the pressure to increase when a gas is heated at constant volume?

Reflection and Self Assessment

1. What is the application of this experiment in your daily life?
2. Is there anything you do not understand in this experiment? If so, what is it and in what ways can you improve your understanding.

Melting Point of a Substance

Aim

To learn how to determine the melting point of a substance using a cooling curve

Background Information

All things in the universe can be in the three states of matter: solid, liquid and gas. Each body changes from one state to another at different pressures and temperatures. It is useful for industry, science, and daily life to know at what temperature an object will melt at atmospheric pressure. Thus, we must find some relationship between the temperature and the melting point.

Materials

Retort stand, test tube, tripod stand, wire gauze, thermometer, stop watch, beaker, naphthalene powder, water, Bunsen burner, match box

Procedure

1. Fill a test tube with naphthalene powder about $\frac{3}{4}$ full.
2. Support the test tube vertically using a retort stand.
3. Fill a beaker with water until it is half full.
4. Put wire gauze on top of the retort stand and place the beaker containing water on top of it.
5. Adjust the clamp of retort stand to lower the test tube with naphthalene in the beaker, ensure that the test tube does not touch the bottom of the beaker.
6. Light the Bunsen burner and heat the beaker containing water and naphthalene until the naphthalene melts.
7. Insert the thermometer into the naphthalene liquid and continue to heat until naphthalene liquid reaches a temperature of about 95°C .
8. Stop heating and remove the Bunsen burner.
9. Record the temperature at intervals of one minute as it cools from 90°C to 50°C and tabulate the results. Take note at which temperature the liquid solidifies.

Safety Measure

1. Naphthalene is a hydrocarbon when in liquid form so it should not be close to the fire.
2. Do not place the heated test tube containing naphthalene into cold water.
3. Do not directly inhale the naphthalene fume/gas because it is poisonous.

Analysis and Interpretation

1. Plot a graph of temperature against time.
2. Explain the shape of the graph.
3. What is the melting point of naphthalene?

Conclusion

Explain how to use a cooling curve to determine the melting point of a substance.

Questions for Discussion

1. Why was the test tube containing naphthalene heated in the water?
2. Why it is important to know the melting point of the substance before using it?
3. Why is naphthalene supposed to be heated above 80°C ?
4. Water pipes in cold countries are usually wrapped in felt, what is the reason for doing this?

Reflection and Self Assessment

1. How could you use the results of this experiment in you daily life?
2. What were most and least interesting about this experiment? Explain.

Effects of Impurities on the Boiling Point

Aim

To discover the effect a salt has on the boiling point of water

Background Information

Impurities are foreign substances within a pure substance. For example, pure water should have nothing in it except water molecules, but in natural water other substances such as salts, small particles of solid matter, and even dissolved gases can often be found. The effect of impurities is a very general topic and exactly how an impurity will affect the boiling point depends on the nature of the impurity and its relation to the substance being boiled. How do you think common table salt affects the boiling point of water?

Materials

Water, source of heat, beaker (250 mL), thermometer, tripod stand, wire gauze, salt, retort stand, beam balance

Procedure

1. Fill a beaker half full of water.
2. Heat the water in the beaker steadily until it boils, fix a thermometer on a retort stand and insert it in a beaker then record the temp of the water.
3. Add 5 g of common salt to the water. Continue heating the water and record the temperature when the temperature remains steady.
4. Continue to add salt in intervals of 5 g until 30 g total have been added. Each time record the boiling point.
5. Tabulate the results including the mass of salt in water and the temperature of the boiling point.

Safety Measure

The thermometer should not touch the bottom of the beaker.

Analysis and Interpretation

1. Compute the change in temperature of the boiling point from its original value.
2. Plot the graph of mass of salt added against the change in temperature of the boiling point from the original value.
3. What is the nature of the graph?

Conclusion

From the graph what can you conclude about effects of salt on the boiling point of water?

Questions for Discussion

1. Why should the thermometer not touch the bottom of the beaker?
2. Do you expect a change in the boiling point temperature if you added sand instead of salt? Explain.
3. What change in boiling temperature do you expect if you mixed in ethanol, which has a lower boiling point than water?

Reflection and Self Assessment

1. Did you face any problems during this experiment? If yes, how could you solve them?
2. How can you use the results of this experiment to cook food faster?

Effects of Impurities on the Freezing Point

Aim

To examine how salt impurities affect the freezing point of water

Background Information

Impurities are foreign substances within a pure substance. For example, pure water should have nothing in it except water molecules, but in natural water other substances such as salts, small particles of solid matter, and even dissolved gases can often be found. If impurities are present within a substance it is possible the mixture has a different freezing point than the pure substance. Therefore, there is a need to determine the relationship between the freezing point of water and the presence of salt impurities.

Materials

Stop watch, Beaker (250 mL), salt, ice, 2 thermometers

Procedure

1. Record the room temperature using a thermometer.
2. Fill two medium size beakers with small pieces of ice and place a thermometer in each.
3. Place the beakers apart from each other on a table, read and record their respective initial temperatures.
4. Put 100 g of salt into one of the beakers.
5. Observe and record the time and temperature at which the ice melts.

Analysis and Interpretation

1. What was the temperature of each beaker during the melting process?
2. What was the temperature of the room during the melting process?
3. In which beaker did the ice melt faster?

Conclusion

How does the presence of salt impurities in water affect the waters freezing point?

Questions for Discussion

1. Do you think impurities always have the same effect on the freezing point of other substances?
2. What are sources of error in this experiment? How might they affect your results?

Reflection and Self Assessment

1. How might the results of this experiment relate with the presence of impurities on the boiling point of a substance?
2. How could you use these results to keep roads safe in places which have snowed?

Effects of Pressure on the Melting Point

Aim

To find the effect of external pressure on the melting point of ice

Background Information

Usually, the melting point of a solid is slightly increased when the external pressure is increased. This is because the increased external pressure pushes the atoms of the solid together harder. Thus, more heat must be supplied to overcome this extra squeezing and allow the atomic bonds to loosen and form a liquid. Do you think this is also true for ice?

Materials

Block of ice, 2 masses (2 kg), 2 masses (1 kg), thin metal wire (copper/constantan), water trough

Procedure

1. Place a block of ice between two desks, over a water trough.
2. Tie 2 kg masses to each end of a thin metal wire.
3. Tie 1 kg masses to each end of another wire made of the same material as the first one.
4. Hang the wires with the weights over the block of ice apart from each other.
5. Observe what happens to the block over the next 30 minutes.

Analysis and Interpretation

1. Compare the rates of melting between the areas without wires and with wires.
2. Which wire melted faster?
3. What do your observations mean about the melting point in each area?
4. According to the background information does ice act like other solid materials when under increased pressure?

Conclusion

From this experiment what is the effect of external pressure on the melting point of ice?

Questions for Discussion

1. If the same weight was hung from two wires, but one wire had a larger diameter than the other, which would melt the ice faster?
2. Give an explanation for the conclusion of this experiment.
3. Why would it be more dangerous to walk on a frozen lake of water rather than a frozen lake of oil?

Reflection and Self Assessment

1. Do you feel you have understood everything in this experiment? If not, what can you do to increase your understanding?
2. What did you find most interesting about this experiment? Explain
3. How might you use the results of this experiment in your daily life?

Effects of Pressure on the Boiling Point

Aim

To determine the effect of pressure on the boiling point of a substance

Background Information

All objects will boil at some temperature which is known as the boiling point. Typically, we think the boiling point occurs at a constant temperature of a body. For example, water boils at 100°C . However, someone boiling water in Dar es Salaam will find it happens at a different temperature than someone boiling water in Iringa. Why?

Materials

Round bottomed flask, thermometer, cork, L-shaped glass tube, rubber tube, source of heat, water, clip, retort stand, wire gauze and tripod stand

Procedure

1. Insert a thermometer and an L-shaped tube into the two holes of the cork.
2. Attach a rubber tube to the end of the glass tube.
3. Half-fill a round bottomed flask with water.
4. Insert the cork into the mouth of the flask.
5. Clamp the round bottomed flask on a retort stand over a source of heat.
6. Heat the water until it boils, record the temperature.
7. Remove the source of heat and clip the rubber tube immediately.
8. Wait until the water stops boiling and then invert the flask on the retort stand.
9. Pour cold water over the flask, then observe the water and record the reading on the thermometer.

Analysis and Interpretation

1. Compare the temperature before and after pouring the water over the flask.
2. What happened to the water in the flask when cold water was running over the flask?

Conclusion

From the experiment, how does the pressure affect the boiling point of a substance?

Questions for Discussion

1. What was the purpose of pouring the cold water over the flask?
2. Why does it take a longer time to cook beans on a high mountain rather than at the bottom?
3. Why is the boiling point of water higher in Dar than in Iringa?
4. What was the purpose of clipping the rubber tube?

Reflection and Self Assessment

1. How can you use the results of this experiment to cook beans more quickly?
2. Is there anything you do not understand in this experiment? If so, what is it and in what ways can you improve your understanding?

Electricity

Internal Resistance of a Cell

Aim

To learn how to determine the Electromotive force (e.m.f) and internal resistance of a dry cell

Background Information

Batteries are made from materials which have resistance. This means that batteries are not only sources of potential difference (voltage), but they also possess internal resistances. If the pure voltage source is referred to as the electromotive force, E , then a battery can be represented as an emf connected in series with a resistor r . Batteries are used mainly as sources of electric power in different fields.

The emf of a battery is essentially constant because it only depends on the chemical reaction (that converts chemical energy into electrical energy) inside the battery. Therefore, the voltage across the terminals of the battery is dependent on the current drawn by the load.

Materials

Voltmeter (0-3 V), Ammeter (0-2 A), Switch, dry cell size D, connecting wires and Rheostat (0-50 Ω)

Procedure

1. Connect a circuit as shown in the figure.
2. Record the reading on the voltmeter when the switch K is open.
3. Close the switch and adjust the rheostat so that the metal slide is furthest away from the switch.
4. Record the reading on the ammeter and voltmeter.
5. While keeping the switch closed, move the metal slide on the rheostat towards the switch to obtain five more readings of the current and voltage. 6. Record all 6 readings of voltage and current values in tabular form.

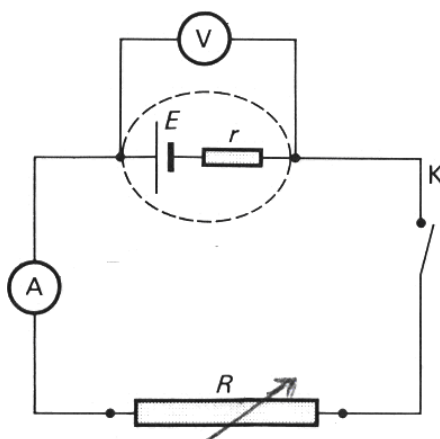


Figure 4.32: Internal Resistance of a Cell practical setup

Analysis and Interpretation

1. Draw a graph of voltage against current.
2. Find the slope from the graph. What is the physical meaning of this slope?

3. What is the value of y -intercept of the graph and what does it represent?
4. Write the equation of the graph relating the current, I , and the voltage, V .

Conclusion

What are the values of the electromotive force and internal resistance of your dry cell?

Questions for Discussion

1. How does the internal resistance affect the electromotive force of the cell when the current flows?
2. Is the internal resistance for a new dry cell the same as for an old dry cell? Explain.
3. Why do dry cells have higher internal resistance than liquid cells (accumulators)?
4. Explain why a used dry cell will start working again when it is heated up by the sun?

Reflection and Self Assessment

1. Is there anything you did not understand in this experiment? If yes, then what was it and in what ways can you increase your understanding now?

Resistance of a Conductor

Aim

To find the relationship between the resistance of a conductor and its length

Background Information

All conductors have resistance. This resistance may depend on many factors including the shape and properties of the material as well as its temperature. It is important to isolate each factor to determine the exact relationship between it and the resistance so that resistance calculations can be simplified for manufacturing purposes. In this experiment, we focus on the shape and determine what happens if the length of the conductor changes.

Materials

Dry cell size D (1.5 V), connecting wires, potential meter/meter bridge, ammeter, crocodile clip.

Procedure

1. Connect a dry cell, E , with an ammeter, A , and one end of a meter bridge.
2. Attach a connecting wire to the other end of the dry cell and the wire on the meter bridge at the 20 cm mark, using a crocodile clip as seen in Figure 4.33.
3. Record the current, I , on the ammeter and the distance L which the meter bridge wire is in the circuit.
4. Repeat steps 2-3 for the length (L) of 40, 60, and 80 cm.
5. Tabulate your results for current (I) and length (L).

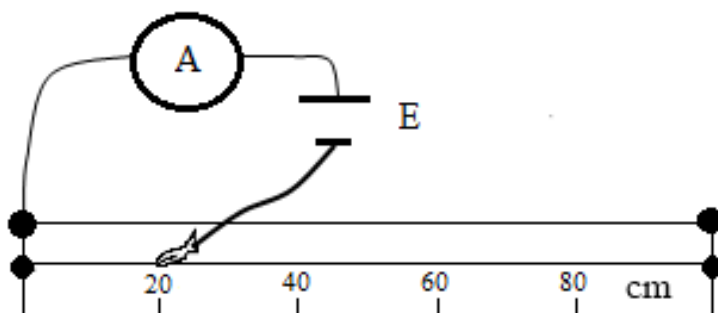


Figure 4.33: Resistance of a Conductor practical setup

Analysis and Interpretation

1. Compute the values of resistance for each case.
2. Plot a graph of resistance (R) versus length (L).
3. What is the nature of the graph?
4. Find the slope and vertical intercept. What does the vertical intercept represent?

Conclusion

What is the relationship between the length of the conductor and its resistance?

Questions for Discussion

1. Do you think the resistance of a conducting wire also depends on its cross-sectional area? Explain.
2. What are the errors in this experiment and how do they affect your results?
3. What would be the resistance of the meter bridge wire if it were 2 meters long?

Reflection and Self Assessment

1. Is there anything you do not understand in this experiment? If so what is it and in what ways can you increase your understanding?
2. How might an electrician need this knowledge to produce a proper circuit?

Wheatstone Bridge

Aim

To learn how to use a Wheatstone bridge to determine the resistance of an unknown resistor

Background Information

A Wheatstone bridge is a special electronic circuit which can be used in larger circuits for different purposes. However, one of its functions can be to determine the resistance of an unknown resistor very precisely. It has certain advantages over other ohmmeters including an independence of variations in the voltage in the circuit. Thus, it is important to learn how to use a Wheatstone bridge properly. We will learn how to construct a Wheatstone bridge circuit by using a meter bridge.

Materials

2-3 Batteries (1.5 V size D), switch, standard resistor (2Ω), 5 unknown resistors/resistance wire of different lengths, galvanometer, meter bridge, connecting wires

Procedure

1. Construct the circuit depicted where R is a standard resistor and S is an unknown resistor or a resistance wire.
2. Slide the jockey of the galvanometer across the meter bridge until you find a point where no current flows through the galvanometer. Measure the distances L_1 and L_2 .
3. Repeat step (2) four more times by replacing resistor R with other resistors $R_2 - R_5$ or four different lengths of resistance wire.
4. Tabulate your results.

Analysis and Interpretation

1. We know that the resistance of a segment of the wire on the meter bridge is proportional to what?
2. When the galvanometer in a Wheatstone bridge shows no deflection, what does it mean?
3. When a Wheatstone bridge is balanced, the ratio of the unknown resistor and the standard resistor equals the ratio of the resistance of segment 2 and segment 1 of the meter bridge. Use this equation to construct an equation which relates the unknown resistor R to the resistance of the standard resistor S and the two lengths L_1 and L_2 .
4. What are the resistances of the unknown resistors?

Conclusion

Explain how to use a Wheatstone bridge to determine the resistance of an unknown resistor.

Questions for Discussion

1. What are the sources of error in this activity?
2. Why should the wires connecting the unknown resistor and the Wheatstone bridge be as short as possible?

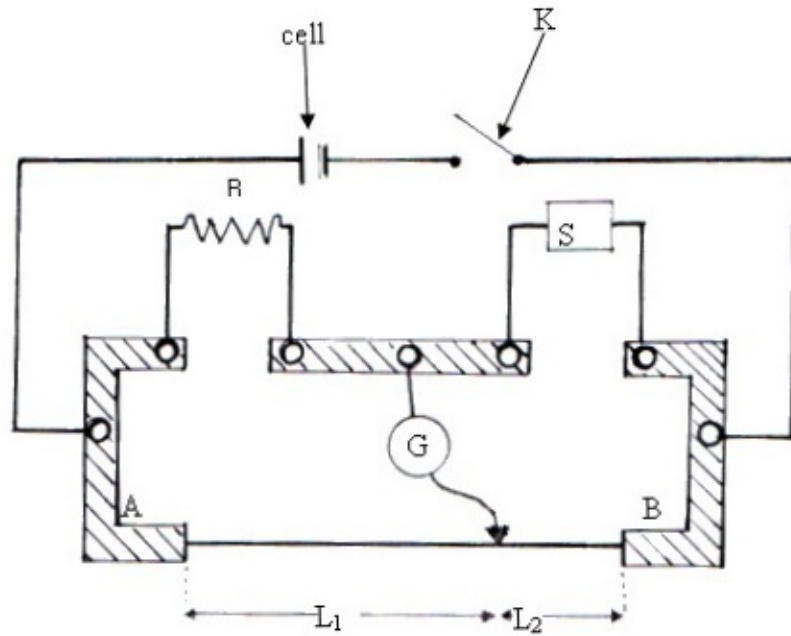


Figure 4.34: Wheatstone Bridge practical setup

3. Create a new relation which relates the resistance of the unknown resistor with the standard resistor R and L_1 without L_2 .
4. Is it possible to repeat the experiment with the positions of the standard resistor and the unknown resistor switched in the Wheatstone bridge?
5. Could you construct the Wheatstone bridge without using a meter bridge? Explain.
6. Could this experiment be used to determine the resistivity of a conductor?

Reflection and Self Assessment

1. Is there anything you do not understand in this activity? If so, what is it and in what ways can you increase your understanding?
2. Did you have difficulties setting up this activity? If so what were they and what can you do next time to avoid these difficulties?

Ohm's Law

Aim

To find out how current varies with potential difference across an ohmic conductor

Background Information

When a voltage is applied across a conductor in any closed circuit, current flows through it. The amount of current that flows depends on the potential difference and the properties of the conductor.

The relationship between voltage and current is important for domestic purposes in cooking, charging mobile phones, producing light, radio, television and other industrial activities. Therefore there is a need to find out how the current varies with potential difference.

Materials

Voltmeter (0-3 V), Ammeter (0-3 A), Unknown Ohmic Resistor, 2 dry cells each 1.5 V size D, Switch and connecting wires

Procedure

1. Connect battery E , Ammeter A , Rheostat Rh , Ohmic Resistor R and Switch K in series (see figure).
2. Connect the voltmeter across (in parallel with) R .
3. Adjust the slide on the rheostat so that it is closest to R . This should give the maximum deflection of the Ammeter.
4. Record the values of current I and potential difference V in tabular form.
5. Obtain four more readings of V and I by moving the slider away from R on the rheostat.

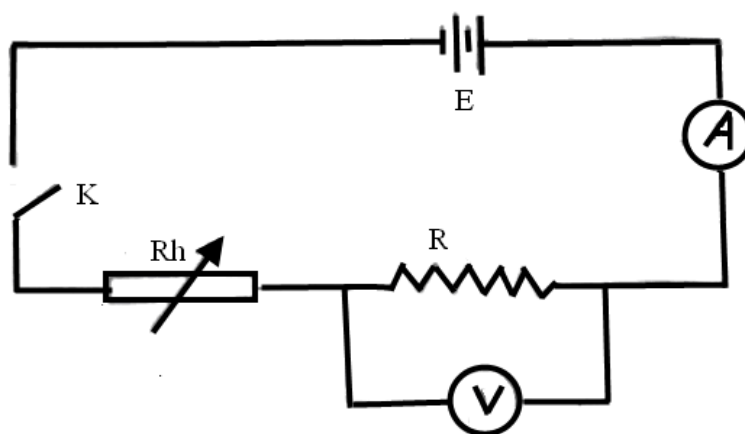


Figure 4.35: Ohm's Law practical setup

Analysis and Interpretation

1. Draw the graph of V against I .
2. From the graph; calculate the slope (G). What does this slope represent?

3. What do you think the y -intercept of the graph represents?
4. Consider an ohmic conductor with voltage of 6 V across it and resistor with a current of 2 A going through it. What is the resistance of the conductor?

Conclusion

Explain how the current varies with potential difference in an ohmic conductor from the experiment.

Questions for Discussion

1. Suppose you plot the graph of I against V , what would be the nature of the graph?
2. Why might it be important to have a constant temperature environment when conducting this experiment?
3. What are the sources of error in this experiment and how do they affect your results?

Reflection and Self Assessment

1. Do you understand everything in this experiment? If not, explain what and in what ways can you improve your understanding?
2. Why is the information of this experiment important for circuit construction?

Heating Effect of Electric Current

Aim

To investigate the factors affecting the heat produced by an electric current in a resistor

Background Information

Electric iron, kettles and heaters produce heat for ironing clothes and raising the temperature of liquids respectively. The heat produced is from current flowing in the metal coils which act like resistors. What factors determine the quantity of heat generated in a resistor due to current flowing through it?

Materials

3 dry cells (1.5 V size D), resistance wire of length 25 cm, Rheostat, switch, ammeter, voltmeter, calorimeter, thermometer, stirrer, ruler, stopwatch, water and connecting wires.

Procedure

Case (i)

1. Put water in a lagged calorimeter until it is about $\frac{2}{3}$ full.
2. Connect the circuit consisting of a battery (E), Rheostat (Rh), switch (K), ammeter (A), voltmeter (V) and resistance wire of length $L = 25$ cm (coiled) and a calorimeter (see figure).
3. Place the thermometer and stirrer into the calorimeter.
4. Record initial temperature θ_1 of the water in the calorimeter by using a thermometer.
5. Close the switch K and adjust the rheostat to give suitable values of current I and voltage V .
6. Leave the circuit on for 30 minutes and record final temperature θ_f .
7. Adjust the rheostat to obtain five different values of I and V and record the temperature after each 30 minutes.
8. Record the values of I , V and $\Delta\theta$ in a tabular form.

Case (ii)

1. Use the same experimental setup as in case (i).
2. Keep the current I , potential difference V , and all resistances constant.
3. Record the values of change in temperature $\Delta\theta$ with the corresponding time t , at intervals of 15 minutes, in tabular form.

Case (iii)

1. Use the same experimental setup as before.
2. Vary the length, L of the resistance wire by decreasing the length by intervals of 5 cm four times.
3. For each length L , allow the current to flow for 30 minutes.
4. Record the length of the resistance wire and the corresponding changes in temperature $\Delta\theta$ in a table.

Safety Measure

Do not switch on the current until heating coil is in the water.

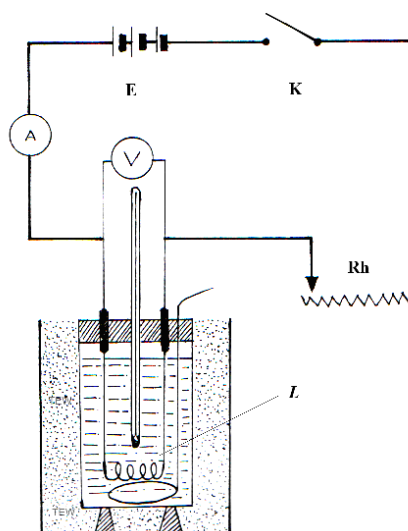


Figure 4.36: Heating Effect of Electric Current practical setup

Analysis and Interpretation

1. Plot the graph of:
 - (i) Temperature change $\Delta\theta$ against the square of current I^2 and explain the nature of the graph.
 - (ii) Temperature change $\Delta\theta$ against time t and explain the nature of the graph.
 - (iii) Temperature change $\Delta\theta$ against length L .

Conclusion

What are the various factors affecting the heat produced by current flowing through a resistor and what are their relationships with the quantity of heat produced?

Questions for Discussion

1. Why should you not close the switch before placing the heater coil in the water?
2. Why is it better to use nichrome wire for the heater rather than copper wire?
3. What is the purpose of performing the experiment with specific factors kept constant and others not?
4. What are the sources of error and suggest ways to minimize them?
5. Construct an equation using the results of these experiments to relate the total heat generated to the resistance, current and the time of current flow. Note: the proportionality constant is equal to 1.
6. Why do heating coils have a large number of turns?

Reflection and Self Assessment

1. What were the most and least interesting parts of this experiment to you? Explain.
2. How can you use the results of this experiment in your daily life?

Waves

Speed of Sound in Air

Aim

To determine the speed of sound in air by using a resonant tube

Background Information

When you are far from the source of sound, you might see the action before you hear it. For example, a flash of thunder is seen before the sound is heard. Sound travels more quickly through liquids than through gases and is fastest through solids. Communication between people involves the transfer of sound waves through air. There is a need to investigate how the sound travels in air and how its speed can be determined.

Materials

Tuning fork, resonance tube, ruler, retort stand with 2 clamps, funnel, water and rubber tube

Procedure

1. Set up the apparatus as shown in the figure below.
2. Record the frequency of the tuning fork.
3. Strike the tuning fork of known frequency on a rubber bung and hold it just above the open tube.
4. Adjust the length of the air column in the resonant tube by raising or lowering the rubber tube until a loud sound is heard.
5. Measure the length from the top end of the resonant tube to the meniscus of the water and record it as L_0 .
6. Obtain a second resonance by increasing the length of the air column in the resonance tube and measure the length of air column as L_1 .

Analysis and Interpretation

1. If the first resonance is a fundamental frequency f_0 and the second resonant is the first overtone f_1 , determine the wavelength of the sound wave.
2. How is the first overtone frequency related to the fundamental frequency?

Conclusion

From the results obtained in this experiment what is the velocity of sound in air?

Questions for Discussion

1. Why was the tuning fork placed just above the resonant tube?
2. Why were different resonant positions found in the resonant tube?
3. Why did you strike a tuning fork with a rubber bung and not against metal?
4. What are the factors which affect the speed of sound in air?
5. Why is a wider capillary tube more suitable for carrying out this experiment than a narrow one?

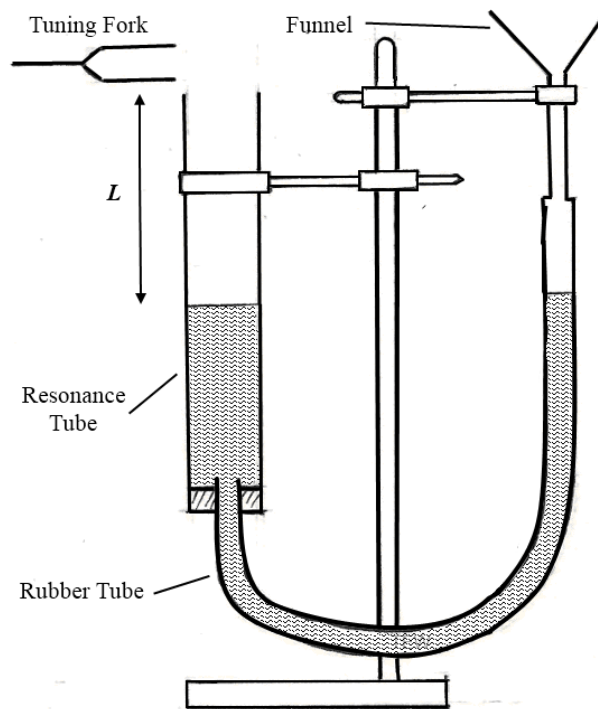


Figure 4.37: Speed of Sound in Air practical setup

Reflection and Self Assessment

1. Why is it important to learn the speed of sound in different materials?
2. What was most and least interesting to you in this experiment? Explain.

Musical Notes

Aim

To investigate the relationship between the length and tension of a string and the frequency of its sound

Background Information

Have you ever wondered why a guitar can make so many different sounds from only five strings? The brain distinguishes different sound waves by their frequencies. A high frequency (high pitch) sound wave sounds different to us than a low frequency (low pitch) sound wave. This means that the guitar is able to produce a range of frequencies from these strings. Thus, there must be some relationship between the string and the frequency of the sound it produces. What is this relationship?

Materials

Sonometer, masses, mass hanger, and a peg

Procedure

1. Pass the wire over the pulley as seen in the figure.
2. Hang masses on a mass hanger which is attached to the loose end of the wire until the wire becomes taut.
3. Pluck the string in the middle and listen to the sound.
4. Repeat procedure (3) after moving the bridges closer together. Do this for 4 different intervals of distance between the bridges.
5. Return the bridges to their original positions.
6. Increase the amount of mass on the mass hanger and pluck the string again. Listen to the sound.
7. Repeat procedure (6) four more times using increased mass on the hanger each time.

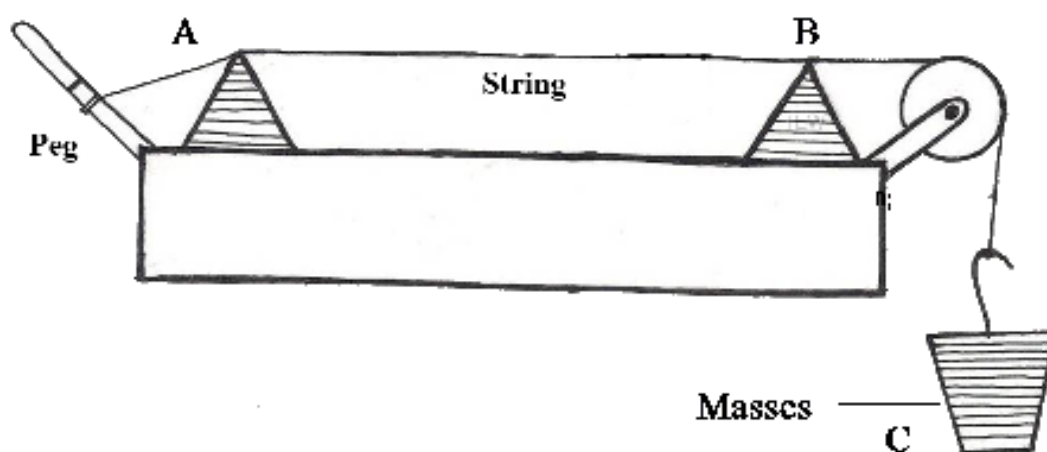


Figure 4.38: Musical Notes practical setup

Analysis and Interpretation

1. What did you observe about the sound from the string when the distance between the bridges was decreased?
2. What did you observe about the sound from the string when the weight on string increased?

Conclusion

What is the relationship between the length and tension of a string and the frequency of the sound wave it produces?

Questions for Discussion

1. If you kept the length and tension of the string constant, but used a thicker string, (i.e. more massive), do you expect to hear a change in the frequency of the sound?
2. What would happen if there were no tension on the string?

Reflection and Self Assessment

1. Is there anything you do not understand in this experiment? If so, what and in what ways can you increase your understanding?
2. How can you use the results of this experiment in your daily life?

Local Materials List

In order to gain a thorough understanding of science, students must be able to make a connection between classroom learning and the outside world. The application of scientific concepts to daily life is a critical component of a student's science education. The following is a list of locally available materials which may be used to substitute conventional materials and apparatus for various activities. These materials have the following advantages:

- They are readily available in the village or a nearby town;
- They are cheaper than conventional materials;
- They may safely substitute the conventional materials without fear of losing accuracy or understanding;
- They help students to draw a connection between science education and the world around them.

Imagination and innovativeness is encouraged on the part of the student and teacher to find other suitable local substitutions.

Throughout this book you will see materials that have been marked with an asterisk (*). These are locally available materials which can be made or purchased for your laboratory or classroom. The guide for using and making these local materials is found in this section.

A.1 Alligator Clips

Use: Connecting electrical components

Materials: Clothespins, aluminum foil, glue

Procedure: Glue aluminum foil around the clamping tips of a clothespin.

A.2 Balance

See the Form I activity on [Construction of Beam Balance](#).

A.3 Beakers

Use: To hold liquids, to heat liquids

Materials: Water bottles, jam jars, metal cans, knife/razor

Procedure: Take empty plastic bottles of different sizes. Cut them in half. The base can be used as a beaker. Jam jars made of glass or cut off metal cans may be used when heating.

A.4 Bunsen Burner

See [Heat Source](#).

A.5 Circuit Components

Use: Building simple circuits, Ohm's Law, amplifier, wave rectifiers

Materials: Broken radio, computer, stereo, other electrical devices

Procedure: Remove resistors, capacitors, transistors, diodes, motors, wires, transformers, inductors, rheostats, pulleys, gears, battery holders, switches, speakers and other components from the devices. Capacitors tend to state their capacitance in microFarads on their bodies.

A.6 Delivery Tube

Use: For the movement and collection of gases, capillary tubes, hydraulic press

Materials: Straws, pen tubes, IV tubing (giving sets) from a pharmacy, bicycle tubing, or pawpaw petioles

A.7 Drawing Board

Use: Reflection, refraction of light

Materials: Thick cardboard

A.8 Droppers

Use: To transfer small amounts of liquid

Materials: 2 mL syringes

Procedure: Take a syringe. Remove the needle to use as a dropper.

A.9 Eureka Can

Use: To measure volume of an irregular object, Archimedes' Principle, Law of Flotation

Materials: Plastic bottle, knife, Optional: super glue, straw, nail, candle

Procedure: Cut the top off of a 500 mL plastic bottle. Then cut a small strip at the top (1 cm wide by 3 cm long) and fold down to make a spout. Alternatively, heat a nail using a candle and poke a hole near the top of a cut off bottle. Super glue a straw so that it fits securely in the hole without leaking.

A.10 Funnel

Use: To guide liquid or powder into a small opening

Materials: Empty water bottles, knife

Procedure: Take an empty water bottle and remove the cap. Cut it in half. The upper part of the bottle can be used as a funnel.

A.11 Glass Blocks

Use: Refraction of light

Materials: 8 mm - 15 mm slabs of glass

Procedure: Have a craftsman make rectangular pieces of glass with beveled edges, so students do not cut themselves. Glass blocks from a lab supply company are generally 15 mm thick. 8 mm and 10 mm glass is relatively common in towns. 12 mm and thicker glass exists though is even more difficult to find. Stack several pieces of thinner glass together and turn them on their edge.

A.12 Heat Source

Use: Heating substances

Materials: Candles, kerosene stoves, charcoal burners, Motopoa (alcohol infused heavy oil), metal can, bottle caps, butane lighter

Procedure: Cut a metal can in half or use a bottle cap and add a small amount of Motopoa.

A.13 Iron Filings

Use: To map magnetic fields

Materials: Steel wool / Iron wool used for cleaning pots

Procedure: Rub some steel wool between your thumb and fingers. The small pieces that fall are iron filings. Collect them in a matchbox or other container to use again.

A.14 Light Bulbs

Use: Electrical circuits, diodes

Materials: Broken phone chargers, flashlights, other electronic devices

Procedure: Look for LEDs from broken items at hardware stores, local technicians, or small shops.

A.15 Masses

Use: Calibrating and using beam balance and spring balance, Hooke's Law

Materials: Known masses, beam balance, empty bottles, plastic syringe, water, plastic bags, sand, stones, thread, paper, tape, pen

Procedure: Use a beam balance and known masses at a duka or nearby school to measure exact masses of sand or stones. Use a marker pen to mark the masses on the stones.

If using sand, place a small piece of plastic bag on the scale pan and fill it with sand until you have the required mass. Tie the sand in the plastic bag with thread. Use paper and tape to make a label on the outside, marking the mass with pen. These masses can be used in your school.

If using water, use a beam balance from a nearby school to measure the exact mass of an empty water bottle. Add a volume of water in mL equal to the mass in g needed to reach a desired total mass. (The density of water is 1.0 g/mL, so you can use a known volume of water in a bottle to create a known mass.) This can be done precisely by using a plastic syringe. Label the bottle with tape and a pen.

A.16 Measuring Cylinder

See the Form I activity on [Construction of a Measuring Cylinder](#).

A.17 Metre Rule

Use: Measuring length, Principle of Moments, drawing graphs

Materials: Slabs of wood, ceiling board, permanent pen

Procedure: Buy one, take it and a permanent pen to a carpenter, and leave with twenty. Measure each new one to the original rule to prevent compounding errors. See also the Form I activity on [Construction of a Metre Rule](#).

A.18 Nichrome Wire / Resistance Wire

See [Wire](#).

A.19 Optical Pins

Use: Compass needles, making holes, flying wire

Materials: Office pins, sewing needles, needles from syringes

A.20 Plane Mirror

Use: Laws of Reflection, periscope, water prism, super glue, small wooden blocks

Materials: piece of thin glass, kibatari, Optional: small pieces of mirror glass are cheap or free at a glass cutter's shop

Procedure: Light the kibatari so that it creates a lot of smoke. Pass one side of the glass repeatedly over the kibatari until that side is totally black. The other side acts as a mirror. Super glue to small wooden blocks to stand upright.

A.21 Resistors

Use: Electrical components

Materials: Old radios, circuit boards, soldering iron

Procedure: Remove resistors from old radios and circuit boards by melting the solder with a soldering iron or a stiff wire heated by a charcoal stove. If you need to know the ohms, the resistors tell you. Each has four strips (five if there is a quality band) and should be read with the silver or gold strip for tolerance on the right. Each color corresponds to a number:

black = 0	yellow = 4	violet = 7
brown = 1	green = 5	gray = 8
red = 2	blue = 6	white = 9
orange = 3		

and additionally for the third stripe: gold = -1 and silver = -2.

The first two numbers should be taken as a two digit number, so green-violet would be 57, red-black 20, etc. The third number should be taken as the power of ten (a 10^n term), so red-orange-yellow would be $23 \times 10^4 = 230000$, red-brown-black would be $21 \times 10^0 = 21$ and blue-gray-silver would be $68 \times 10^{-2} = 0.68$. The unit is always ohms. The fourth and possibly fifth bands may be ignored.

A.22 Retort Stand

Use: To hold pendulums, to elevate springs or other objects

Materials: Filled 1.5 L water bottle, straight bamboo stick, tape, marker

Procedure: Tape the bamboo stick across the top of the water bottle so that it reaches out 20 cm to one side. Attach a small clamp if required or hang object directly from bamboo stick.

A.23 Scale Pan

Use: Beam balance, Hooke's Law

Materials: Plastic bottle, cardboard box, string

Procedure: Cut off the bottom of a plastic bottle or cardboard box. Poke 3 or more holes near the top and tie string through each hole. Join strings and tie at the top to hang from a single point.

A.24 Spring Balance

Use: To measure force applied on an object

Materials: Strip of cardboard, rubber band, 2 paper clips, staple pin, pen

Procedure: Cut a rubber band and fix one end to the top of a cardboard strip using a staple pin. (A stronger rubber band allows for a greater range of forces to measure.) Attach one paper clip near the top as a pointer. Attach the other paper clip as a hook at the bottom of the rubber band. Calibrate the spring balance using known masses. Write the equivalent force in Newtons on the cardboard. (A 1 g mass has a weight of 0.01 N, 100 g has a weight of 1 N, etc.)

A.25 Springs

Use: Hooke's Law, potential energy, work, spring balance

Materials: Springs from hardware stores, bike stores, junk merchants in markets, window blinds, rubber bands, strips of elastic

Procedure: Remove plastic covering if necessary and cut to a desired length (5 cm). Alternatively use rubber bands or elastic from a local tailor - these can also be used to calculate a constant of elasticity.

A.26 Stopper

Use: To cover the mouth of a bottle, hold a capillary tube

Materials: Rubber from old tires or sandals, cork, plastic bottle cap, pen tube, super glue

Procedure: Cut a circular piece of rubber. If the stopper is being used to hold a capillary tube, a hole can be melted in a plastic cap or rubber stopper. Alternatively, super glue a pen tube to a plastic bottle cap and connect to rubber tubing.

A.27 Stopwatches

Use: Simple pendulum, velocity, acceleration

Materials: Athletic and laboratory stopwatches from markets, digital wristwatches

A.28 Test Tubes

Use: To heat materials without a direct flame, to combine solutions

Materials: 10 mL syringes, matches

Procedure: Remove the needle and plunger from 10 mL syringes. Heat the end of the shell with a match until it melts. Press the molten end against a flat surface (like the end of the plunger) to fuse it closed. If the tube leaks, fuse it again. Test tubes made this way may be heated in a water bath up to boiling, hot enough for most experiments.

A.29 Test Tube Holder / Tongs

Use: To handle test tubes

Materials: Wooden clothespins, stiff wire, strip of paper or cloth

Procedure: Use clothespins or stiff wire for prolonged heating, or strips of paper or cloth for short-term heating.

A.30 Test Tube Racks

Use: To hold test tubes vertically in place

Materials: Wire grid from local gardening store, styrofoam block, plastic bottle, knife

Procedure: Fold a sheet of wire grid to make a table; punch holes in a piece of styrofoam; cut a plastic bottle in half and fill it with sand to increase stability. Or cut a plastic bottle along its vertical axis and rest the two cut edges on a flat surface. Cut holes into it for the test tubes.

A.31 Tripod Stands

Use: For supporting containers above heat sources, for elevating items

Materials: Stiff wire, metal rods

Procedure: Bring a sample to a welder or metal worker in town; make sure the stand is not too short or too tall. You can also make your own from stiff wire.

A.32 Water Bath

Use: To heat substances without using a direct flame

Materials: [Heat Source](#), water, cooking pot

Procedure: Bring water to a boil in a small aluminum pot, then place the test tubes in the water to heat the substance inside the test tube. Prevent test tubes from falling over by clamping with clothespins or placing parallel wires across the container.

A.33 Wire

A.33.1 All-purpose wire

Use: Connecting circuit components, current electricity

Materials: Speaker wire, knife

Procedure: Speaker wire can be found at any hardware store or taken from old appliances - the pairs of colored wires braided together. Strip using a knife, your teeth, or a wire stripper.

A.33.2 Specific gauge wire

Use: Electrical components, motors, transformers, simple generators

Materials: Copper wire without plastic covering (transformer wire), knife/scissors, matches

Procedure: Scrape or burn off the insulating varnish at any points you wish to make electrical contact. These wires come in a variety of diameters (gauges). A useful chart for converting diameter to gauge may be found [here](#). If the wire is sold by weight, you can find the length if you know the diameter - the density of copper metal at room temperature is 8.94 g/cm^3 . For example, with 0.375 mm wire, 250 g is about 63 meters.

Shika Express Demonstrations for Physics

Egg Float

Topic: Density/Relative Density (Form 1)

Materials: 2 fresh eggs, 2 containers (bottles cut in half), salt (less than half a cup)


Setup: Fill two containers with water and place a fresh egg in each.

Procedure: Leave one as it is and add salt to the other. Add and mix salt until the egg floats in the saltwater container.

Questions: Why does the egg float in saltwater but sink in fresh water?

Theory: Saltwater has a greater density than fresh water. A fresh egg has a density between fresh water and saltwater. Since an egg is denser than freshwater, it sinks. Since an egg is less dense than saltwater, it floats.

Applications: This is the same reason why it is easier to stay afloat when swimming in the ocean (saltwater) as opposed to a lake (fresh water).

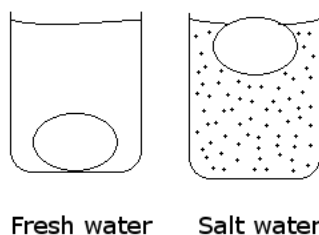

Pressure in a Bottle

Topic: Pressure (Form 1)

Materials: 1.5 L bottle, syringe needle or pin/nail, water

Setup: Use a syringe needle, heated nail, etc. to poke three holes into a bottle. Put one hole near the bottom, one near the middle, and the last hole between them.

Procedure: Fill the bottle with water and place on a table. Observe the trajectories of water coming from the three holes.

Questions:

1. What do you notice about the trajectory of the water from each hole? Which one reaches the furthest horizontal distance?
2. How does the pressure change with the depth of the water? Why?

Theory: The water flowing from the lower holes follows a shallower arc and hits the ground further from the bottle. The added weight of the water above the lower holes increases the pressure, resulting in an increased initial horizontal velocity. The relationship that pressure increases with depth is shown. ($P = \rho gh$)

Applications: The wall of a dam is made much thicker at the bottom than at the top. Also, water storage tanks are placed at the top of a building. This is because the pressure in a liquid is related to its depth.

Notes: There is a difference between depth and height. Height is measured from the reference point upward while depth is measured from the reference point downward. The reference point in this case is at the surface of water.

